(

•





(



Crotch Harness, Seat Strap and **Waist Restraint**

Correctly installed



Using Buckle

Press firmly on centre button to release harness buckle





Table cover bracket is



Slide T section of

harness through

Stool mode – replace table cover bracket and table cover High chair mode – replace table cover bracket and re-insert table

Table cover





...and remove

Lift up and remove table cover

Table cover bracket



Follow the 'removing crotch harness' instructions in reverse and please take care when clipping table cover bracket back into place – if you place your fingers too low down on the sides you might catch your fingers press on front sides whilst pushing down on the top until it clicks into place. Ensure crotch buckle is facing outwards when re-installing

Removing Seat Strap



Re-installing 6 Seat Strap



Locate hole in seat shell, fold plastic T section at end of strap and push through hole. Ensure padlock symbol faces up so can be seen



Use allen key (supplied) to help push T section until it will go no further



Pull up on end of



of seat insert inside seat





To lower the seat with table off, follow the same instructions

Adjusting Height of Seat

The height of the seat is adjusted on a gas strut, similar to an office chair.

To raise the seat, simply press down on the foot pedal and the seat will raise by itself

(Please note - As your little one becomes heavier,

the seat will not rise by itself if he/she is sitting in the high chair)

To lower the seat press down on the foot pedal and at the same time push down on the seat until it reaches the required height

You may prefer to push down on either side of the seat

Pull out rotation release handle located at back of the seat. Seat swivels and locks every 90° degrees

Rotating

10 Seat

Locate padlock symbol on strap and pull just this part of the strap upwards firmly





Using Waist Restraint with Seat Insert Ensure seat insert is

correctly placed inside seat and check that the hole in the seat insert lines up with the hole in the high chair seat



Feed chair strap through hole in seat insert, then follow 6



checking it is properly in place by pulling towards you



harness buckle for correct use



Locate table release handle underneath *table*, pull up and out to release





Table in fully closed



Turn to loosen

Select required height





Turn to tighten

To remove foot rest entirely, refer to 'attaching seat assembly' instructions above. With the seat removed the foot rest can be slid off the gas strut pole attached to the seat. You may wish to remove the foot rest if your little one is more comfortable without one, or when you turn the Scoop from a high chair to a stool. WARNING - never try to fix foot

Converting Scoop from High Chair to Stool The Scoop can be used as a stool, either with or without the foot rest, up to the age of 5 vears Turn table over, locate clip and remove table cover with flat head screw driver Remove table from Insert table cover into Please Note

 


clicks in

Converted to Stool

complies with BS EN 14988:2006 Complies to this standard in high chair mode from 6 months to 3 years, but Brother Max has taken care to ensure safe for use in stool mode by children up to the age of 5 years or up to a weight of 23kg. It is always the responsibility of an adult to ensure that children over 3 years are safely using the scoop high chair in stool mode





To remove, simply follow in reverse step 4 overleaf in the 'Assembly Instructions'

Hold open *rotation release handle (RRH)* at rear and hold *seat* at front. Turn 90°, just past 90° lift and continue turning until *seat* lifts off







(

(