

Declaration of Conformity:


The product is in compliance with the requirement of Directive 2014/53/EU.

HAB RC SILVER CLOCK

CAT No.: 7378261

instructions for use

Insert battery observing the polarity (1.5V ALKALINE AA, LR6).

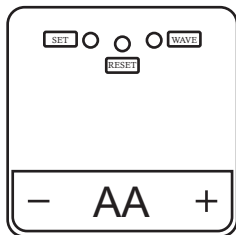

The clock is set automatically to 12 o'clock. As soon as the MSF radio signal is received, the clock is set automatically to the correct time. This operation usually takes no more than 2 minutes. If during this period the MSF radio signal is not received, the clock will repeat this operation after 2 hours.

If the clock is unable to set the time after several attempts, try moving your clock to a different location. Objects such as fluorescent lights and TV's may interfere with the signal. If you are in a steel-framed or reinforced concrete building the signal may also reduce. Putting your RC clock near a window will help to increase the signal.

On rare occasions the clock may not be able to utilize the radio controlled function because of the strength of the signal or the geographic location. In this case, the clock can be set manually and used as a regular quartz wall clock.

Note: Allow up to five nights for the clock to receive the MSF signal before manually setting the time.

Manual Time Setting: Press the "SET" button for 3+ seconds to activate the manual mode. Hold the "SET" button down to move the minute hand forward consistently to correct time. Alternatively, press the "SET" button rapidly (more than once per second) to move the minute hand forward step by step (in minute increments) to correct time. The clock will automatically leave manual mode after the "SET" button is not pressed for 6+ seconds.

RESET: If you press the "RESET" button with a pointed object (for example a ballpoint pen), all the clock hands will rotate to the starting position (12:00). The internally stored time is lost and the clock starts automatically with the search for a radio signal.

WAVE: This button will force the clock to receive a radio signal if you are in a poor reception area. If you press the "WAVE" button, all the clock hands will rotate to the starting position (12:00) and the clock will commence an intensified radio signal search. In case you still cannot receive a radio signal press the "SET" button for manual time setting.

maintenance

1. Keep dry. Clean with a soft dry cloth.
2. To change battery, please take out the old battery from the battery compartment. Insert one 1.5 volt "AA" battery in the battery compartment. Check that the (+) positive and (-) negative terminals correctly match with the symbols on the battery compartment.

Important

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed before being charged
3. Rechargeable batteries are only to be charged under adult supervision
4. Do not mix different brand/types of batteries including new and old
5. Only batteries of the same or equivalent type as recommended are to be used
6. Exhausted batteries must be removed
7. Supply terminals must not be short circuited
8. **Do not dispose of batteries in a fire, batteries may explode or leak.**
9. **At the end of the products life, remove all batteries and dispose of it according to local environmental regulations.**



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE.
PLEASE RECYCLE WHERE FACILITIES EXIST.
CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.



Made in China for Habitat, Argos Limited,

London, EC1N 2HT, UK.

Argos (N.I.) Ltd., Forestside Shopping Centre,

Upper Galwally, Belfast, BT8 6FX, UK.