

TOTE COLLECTION



5748AGU



TOTE COLLECTION

A powerful 2200W dryer with a premium tote bag & styling accessories

FEATURES

- 2200W powerful dryer
- Fast drying performance
- Lightweight and comfortable to use
- Slim concentrator nozzle for precision styling
- Spacious tote bag
- Handbag paddle brush
- Compact mirror



SAFETY CAUTIONS

• This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy. WARNING! THIS APPLIANCE GETS HOT!

- ALWAYS keep out of reach of children (during and after use and while cooling)
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY INFORMATION

- UK Only: This appliance must not be used in the bathroom.
- Outside the UK: If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Do not use the appliance near water contained in basins, bathtubs or other vessels.

- Do not leave the appliance unattended when switched on or plugged in. • Take care that the air vents do not become
- blocked when the appliance is in use. Ensure the rear filter is clear of hair and other debris before use (refer to Cleaning & Maintenance section for further information).

- This appliance is equipped with a safety thermostat. In the event of overheating, the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the appliance off, unplug and allow to cool for 10 minutes. Ensure the rear filter is clear of hair and other debris (refer to Cleaning & Maintenance section for further information). Plug the appliance into the mains and switch on. If the appliance continues to overheat, discontinue use immediately, switch the appliance off and

• Do not immerse the appliance in water or other liquids.

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped
- Do'not use if the appliance or lead are damaged. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to "UK After Sales Service" section for further information). No repair must be attempted
- by the consumer.Do not look down the barrel of the dryer when the dryer is switched on.

unplug. Contact the Conair Customer Care Line (refer to "UK After Sales Service" section

- for further information). Do not place the appliance on any surface whilst in operation.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck
- Çareful adult supervision is required when
- This appliance is used on or near children. Do not use on very young children.
 This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow the appliance to cool before storing
- away.
 After use, do not coil the lead around the appliance as this may cause damage. Instead coil loosely by the side of the appliance.
 This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to "UK After Sales Service" section.)

IMPORTANT!

• This appliance should only be used as described within this instruction booklet. Please retain for reference.

HANDBAG PADDLE BRUSH

The handbag paddle brush contains natural rubber.

INSTRUCTIONS FOR USE

- Plug the dryer into a suitable mains supply.
- Ensure hair is towelled dry and combed through to remove tangles.
- There are 3 heat (I II III) & 2 speed settings (0 I II).
- Use the high heat and speed settings for initial drying and the lower heat and speed settings to finish drying and for styling.
- Use the cool shot button on warm hair to "set" a curl or wave.
- For additional control when styling, attach the concentrator nozzle and using the lower heat and speed settings, direct the airflow along the surface of the hair to be dried.
- After use, switch off and unplug the appliance. Allow to cool before storing away

CARE OF YOUR DRYER

- Do not use the dryer at a stretch from the power point. Stretching the connection between the lead and the dryer can be dangerous
- Always keep the rear of the dryer away from your hair during use to prevent hair ingress.
- Always unplug after use. Smooth out the lead to remove kinks and prevent damage
- Do not wrap the lead around the dryer, instead coil it loosely by the
- Make sure the dryer is used on the correct voltage.

CLEANING & MAINTENANCE Cleaning the filter

To keep your hairdryer in the best possible condition and maintain optimum performance, the rear filter should be cleaned on a regular hasis

- Ensure the appliance is switched off, unplugged and cool.
- Lightly squeeze the sides of the rear filter to pull away from the dryer.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by pushing back into position.

SAFE DISPOSAL



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet, GU51 3TW

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture within 12 months from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture after 12 months from the date of purchase, and within the augrantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet

- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

replacement.

This guarantee is an additional benefit and does not affect your statutory riahts as a consumer.

If you have any gueries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com

Return address:

Customer Care Centre Congir Logistics Unit 4. Revolution Park Buckshaw Avenue Buckshaw Village Chorlev PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.