2 SEATER METAL SWING CHAIR

Assembly Instructions - Please keep for future reference

7450859



Dimensions

Width -145cm Depth - 112cm Height - 150cm

IMPORTANT-PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 6403030

Retailer: Argos

Address: 489-499 Avebury Boulevard Saxon Gate West. Central Milton Keynes Bucks. MK9. 2NW

Safety and Care Advice

- Check you have all the components and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.

- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Assemble the unit as close to its final position (in the same room) as possible.
- Parts of the assembly will be easier with 2 people.
- If using power tools, please follow the safety instructions supplied with the tools.
- This product is for domestic use.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- Warning: The unit weights approxomately 16 kgs.

Safety weight: 220kgs per seat

Please lift with care.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- Suggestion: When you do not use it, find one suitable cover on it.
- From time to time check that there are no loose screws on this unit.
- Don't fully tighten all screws until assembly is complete.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- Make sure each screw match the corresponding figure to ensure correct assembly.

Components - Parts

If you have damaged or missing components, call the Customer Helpline: 0345 6403030


Please check you have all the parts listed below

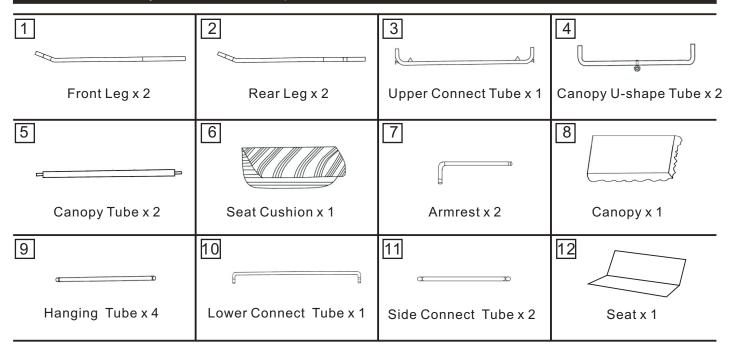

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required. Bradawl, spanner and screwdriver are required but excluded.

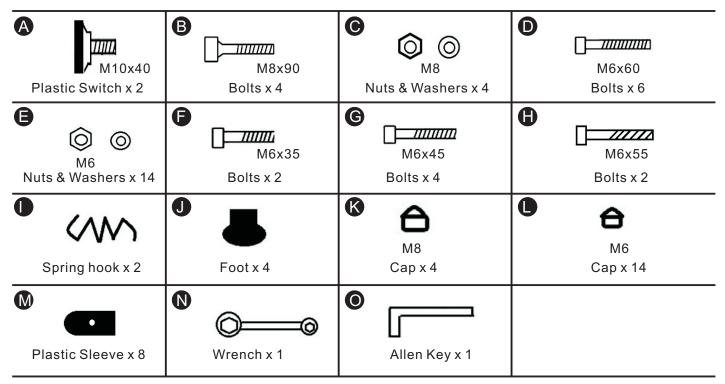

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions

Step 1

2 person required

A: Fix front leg1,upper connect tube 3 and rear leg2together using bolts **B** washers and nuts **6**.

B: Fix the feet **1** to the legs.

FULLY TIGHTEN ALL NUTS.

Then use nut covers to cover the nuts (See fig .1)

Step 2

Fix side connect tube 11 between front leg 11 and rear leg 12 using bolts (3), washers and nuts (3).

FULLY TIGHTEN ALL NUTS.


Then use nut covers to cover the nuts (See fig .1)

Step 3

Fix lower connect tube 10 between two rear legs 2 using bolts **1**, washers and nuts **2**.

FÜLLY TIGHTEN ALL NUTS.

Then use nut covers to cover the nuts (See fig .3)

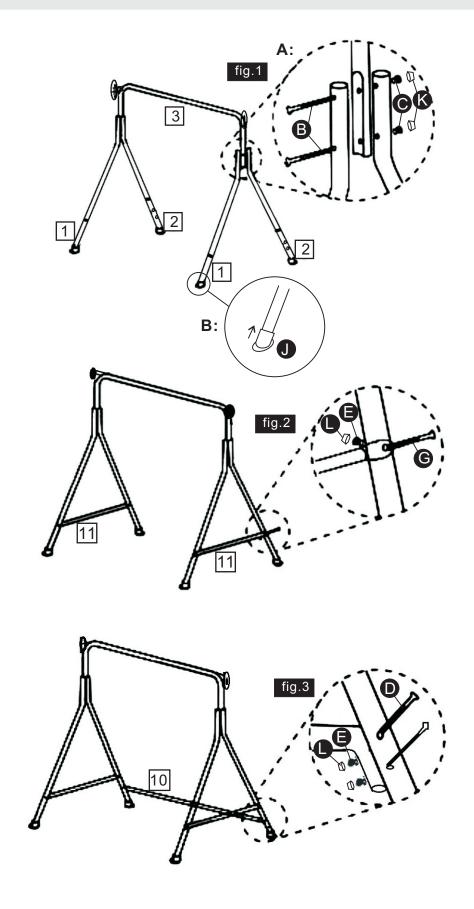

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 6403030

Retailer: Argos

Address: 489-499 Avebury Boulevard Saxon Gate West. Central Milton Keynes Bucks. MK9. 2NW

Assembly Instructions

Step4

A: Cap the both ends of the hanging tubes 19 by plastic sleeve 1.

B:Fix the armrest 7 and hanging tubes 9 to the seat 2 using bolts • • • washers and nuts • .

FULLY TIGHTEN ALL NUTS.

Then use nut covers to cover the nuts (See fig .4)

Step 5

A: Use spring hook to hang the seat, then put seat cushion 6 on the seat.


B: Use plastic switch to fix the canopy U shape tube to the both sides of the upper connect tube. (See fig.5)

C: Put the seat cushion to the seat ☑ and fixed by bendage.

Step 6

Insert the canopy tube 5 to the canopy 8 then connect it to the canopy U shape tube 4.

(See fig .6)

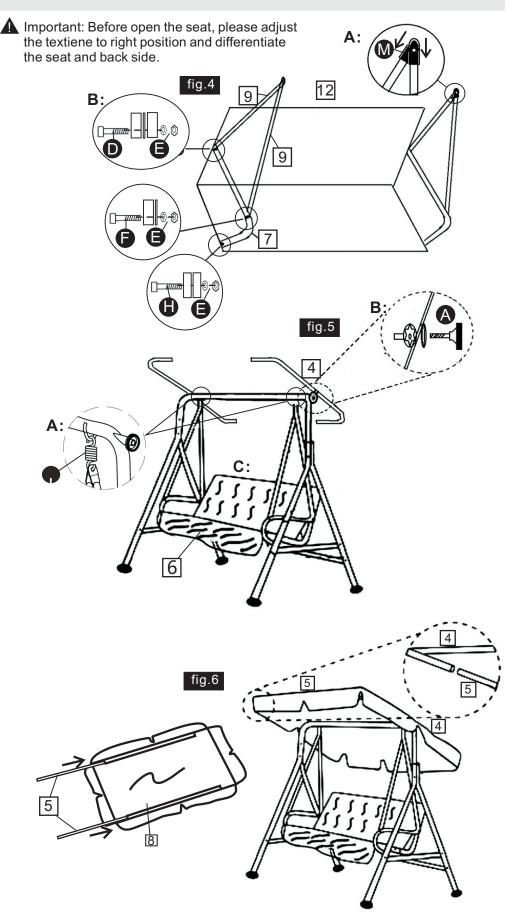

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 6403030

Retailer: Argos

Address: 489-499 Avebury Boulevard Saxon Gate West. Central Milton Keynes Bucks. MK9. 2NW