 


ENGLISH

 
ANALOG INSTRUCTIONS



Time Setting

1. Pull crown out to position 2.
2. Turn crown to set hour and minute hands to desired time.
3. Return crown to position 1.

DATE MODELS

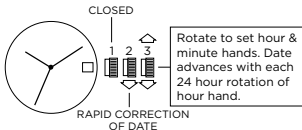

Date Setting

 
1. Pull crown out to position 2.
2. Turn the crown either clockwise or counter-clockwise and set the date for the previous day. The direction that moves the date varies on different watch models.

Time Setting

1. Pull crown out to position 3.
2. Turn counter-clockwise to advance the time and continue until the day changes to the present day.
3. Set to the correct time.

Do not change the date between the hours of 10pm and 2am. This is the time when the movement is in position to carry out the automatic date change, and any interference may cause damage to the movement.

2 EYE DAY/DATE MULTI-FUNCTION VX36



Date Setting

 
1. Pull crown out to position 2.
2. Turn clockwise to advance date hand.
3. Push crown back to position 1.

Date and Time Setting

1. Pull crown out to position 3.
2. Turn clockwise to advance hour and minute hands.

*The hand showing days of the week will also move with the hour and minute hands.
Keep turning until you have reached the desired day.*

MULTIFUNCTION 6P23




Time Setting

1. Pull crown out to position 3.
2. Turn clockwise to advance hour and minute hands. 24-hour hand will move with hour and minute hands. Keep turning to reach desired time.
3. Return crown to position 1.

Date Setting

1. Pull crown out to position 2.
2. Turn crown counter-clockwise to set date.
3. Return crown to position 1.

 THREE EYE MULTI-FUNCTION 6P29/6P79



Date Setting

1. Pull crown out to position 2.
2. Turn clockwise to advance the date hand.
3. Push crown back to position 1.


Day and Time Setting

1. Pull crown out to position 3.
2. Turn clockwise to advance hour and minute hands.
*The hand showing days of the week will also move with the hour and minute hands.
Keep turning until you have reached the desired day.*

24-Hour Sub-Dial Setting

The 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

 CHRONOGRAPH STOPWATCH VD55 (with date-VD57)

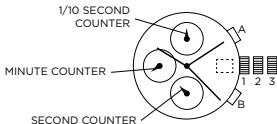

Time and Date Setting

1. Before setting the time, make sure the chronograph is stopped and set to zero (12:00) position.
2. Pull crown out to position 2 and turn crown clockwise to set date to the previous day.
3. Pull crown out to position 3 when the second hand is at the 12:00 position, and turn clockwise until the present date is displayed. Continue turning crown to set the correct a.m./p.m. time.
4. Return crown to position 1.

NOTE: When crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

NOTE: To ensure accuracy, do not set the date between 9:00 p.m. and 1:00 a.m.

Chronograph Functions

Basic Function

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

Interval Timing

 
1. Press B while the chronograph is running.
2. Press B again to return to the chronograph.
3. Press A to finalize timing.
4. Press B to reset.

Adjusting the Chronograph Hands to Zero Position

If one or more chronograph hands are not in their correct zero (12:00) positions after pressing B (for example, following a battery change):

1. Pull crown out to position 3.
2. Press A to move the chronograph 1/10 second counter one increment; press and hold A for fast advance.
3. Press B to reset the second and minute counters one increment; press and hold B for fast advance.
4. Return crown to position 1.

CHRONOGRAPH STOPWATCH JS25/VD54 (with date-VD53)



Time and Date Setting

1. Before setting the time, make sure the chronograph is stopped and set to zero (12:00) position.
2. Pull crown out to position 2.
3. Turn crown clockwise until the previous day's date is displayed.
4. Pull crown out to position 3 when the second hand is at the 12:00 position.
5. Turn crown to set time.

NOTE: 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

6. Return crown to position 1.

NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

Chronograph

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

Split Time (VD53/VD54)

1. Press B while the chronograph is running.
2. Press B again to return to the chronograph.
3. Press A to finalize timing.
4. Press B to reset.

Chronograph Zero Reset

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise.
3. Return crown to position 1.

DIGITAL LED – BJ-3470



Normal Time Display

 
1. Press B to display time; press B again to change display mode. Mode sequence is time, date and seconds.
2. LED automatically turns off after 5 seconds.

Time / Calendar Setting

1. In time display mode, press and hold A for 2 seconds to enter setting mode. 12/24-hour format will begin flashing.
2. Press B to choose 12 or 24-hour format. For 12-hour setting, "P" will be displayed for afternoon/evening hours. For 24-hour setting, no symbol will be displayed.
3. Press A to advance to hour.
4. Press B to increase digits; press and hold B for fast advance.
5. Press A to advance to next setting value.
6. Setting sequence is: 12/24-hour format, hour, minutes, seconds, year, month, date, and exit setting mode.

NOTE: In setting mode, if no pusher is operated for 5 seconds, all changes will be saved and the watch will automatically turn off.

PIN LINK DIAGRAM

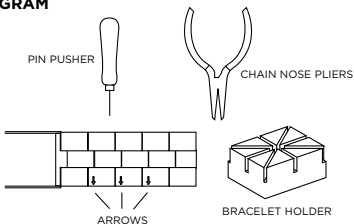





Link Removal

To remove a link from a pin link bracelet, you will need the bracelet holder, pin pusher, and chain nose pliers (see pin link diagram).

1. Open the clasp on the bracelet.
2. Look on the inside of the bracelet and locate the arrows near the clasp (see diagram).
3. Place the band into the appropriate size slot of the bracelet holder with the arrows pointing down (see diagram).
4. Center the desired pin to be removed over one of the holes in the bottom of the bracelet holder.
5. With the pin pusher, push the pin, as far as possible, through the link.
6. Remove the watch from the bracelet holder and simply finish pulling out the pin with the chain nose pliers.

NOTE: Two pins hold each link in place and must be taken out before a link can be removed. Please note that the pins are partially split down the center.

USE PRECAUTIONS - RESISTANCE TO WATER

Water Resistance		Water-related Use			
Caseback Marking	Depth				
		Washing Hands	Shower, Bathing	Swimming, Snorkeling	Scuba Diving
—	—	X	X	X	X
WR	—	✓	X	X	X
3 ATM	3 Bar, 30 Meters	✓	X	X	X
5 ATM	5 Bar, 50 Meters	✓	✓	X	X
10 ATM	10 Bar, 100 Meters	✓	✓	✓	X
20 ATM	20 Bar, 200 Meters	✓	✓	✓	✓
30 ATM	30 Bar, 300 Meters	✓	✓	✓	✓
50 ATM	50 Bar, 500 Meters	✓	✓	✓	✓

Always set the crown in closed position (the normal position).
Tighten screw-lock crown completely.