



BATTERY REPLACEMENT

EN OPERATION INSTRUCTIONS

Requires 1 x LR41 (AG3) / 1.5V Battery.

Display: 1. Normal time display: Hour & minutes. 2. Press B1 once: Month & date (automatically return to normal time display). 3. Press B1 twice: Seconds to normal time display). 4. Press B1 again to return to normal time display.

Setting the watch: 1. Month: Press B2 twice to display month and set the month with B1. 2. Date: Press B2 to display the date and set the date with B1. 3. Hour: Press B2 to display the hour and press B1 to set the hour ("A" for AM and "P" for PM time). 4. Minutes: Press B2 to display the minutes and set the minutes with B1. 5. Press B2 once more to return to normal time display.

1. Remove back case
2. Remove protective piece
3. Change battery
Remove batteries if are discharged. Do not mix old and new batteries, alkaline, standard or rechargeable batteries. Do not recharge non-rechargeable batteries.