 
 


You should have these items

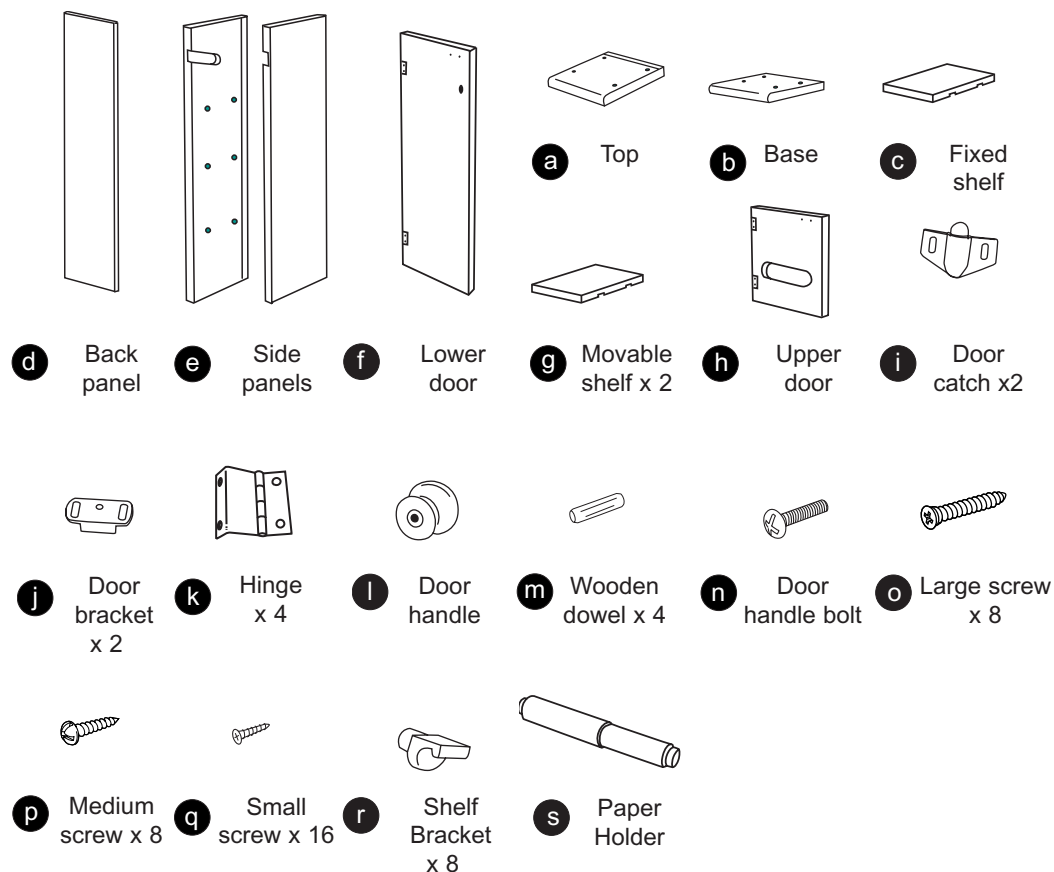


You will also need

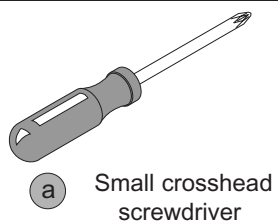

Tidy cupboard

Assembly instructions - Please read carefully

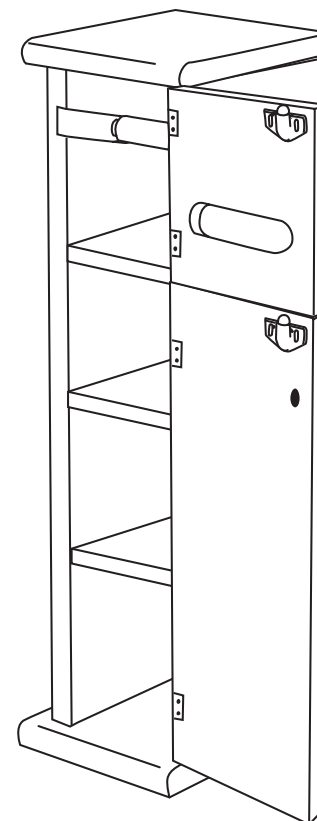


IMPORTANT

1. Read these instruction carefully and familiarise yourself with the procedure before assembling your Tidy Cupboard.
2. Please check that you have all the parts required these are listed on the back of this guide.
3. You will need a small crosshead screw driver to assemble this product.
4. To avoid damage, it is recommended that while you assemble your Tidy Cupboard it is placed on a soft, level surface.

Assembly instructions

Stage 1 - Assembling the body


1. Attach the door bracket to the underside of the fixed shelf using the medium screws. See fig 1.
2. Insert the doweling rods into the holes in the sides of the fixed shelf. See fig 1.
3. Use the doweling rods to fit the fixed shelf to the side panels. The shelf should attach to the upper set of holes. This may be a tight fit. See fig 2.
4. Lay the cupboard on its back and use four of the large screws to attach the base. See fig 3.
5. Slide the rear panel into the channels at the rear of the cupboard. See fig 4.
6. Attach a door bracket to the underside of the top using two medium screws. See fig 5.
7. Use the remaining four large screws to secure the top of the cupboard. See fig 6.

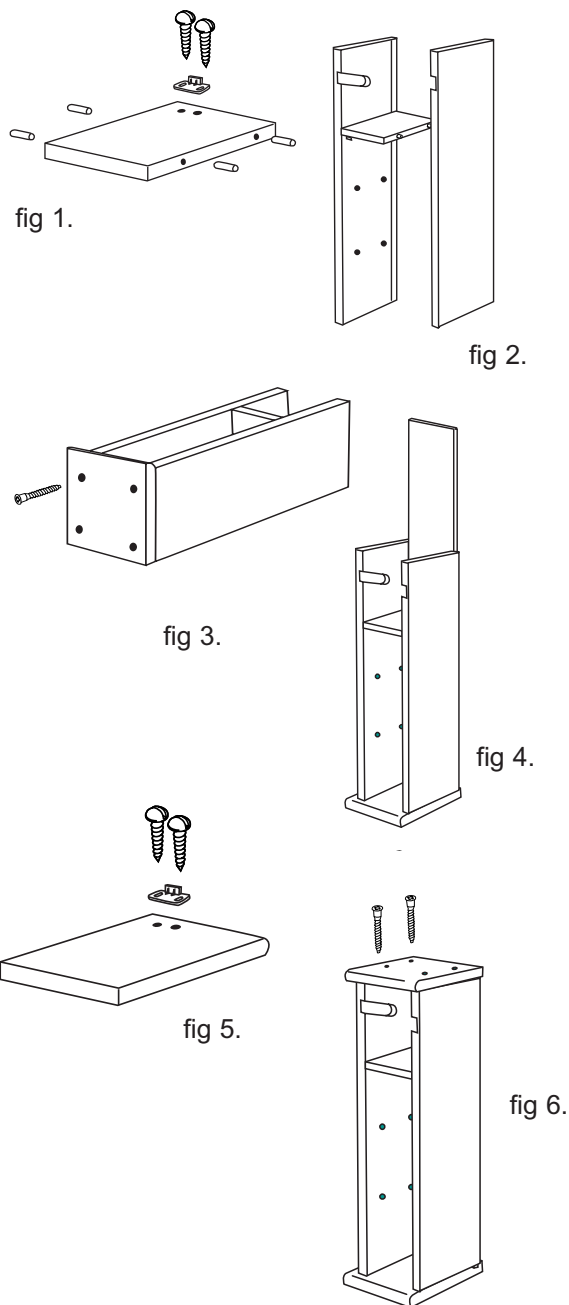

Assembly instructions

Stage 2 - Attaching the doors

8. Attach the fixed section of two hinges to the upper door using the small screws. Attach a door catch to the top, using two medium screws. See fig 7.
9. Do the same for the lower door. Remember to also attach the door handle using the door handle bolt. See fig 8.
10. Attach the doors to the main body of the cupboard using two small screws for each hinge. See fig 9.
11. Insert the shelf brackets in the holes in the side panels. See fig 10.
12. Place the shelves on the shelf brackets.
14. Insert the paper holder.
13. To finish the assembly of your tidy cupboard, insert the screw covers over the screw holes on the outside of the tidy cupboard, top and base. See fig 11.

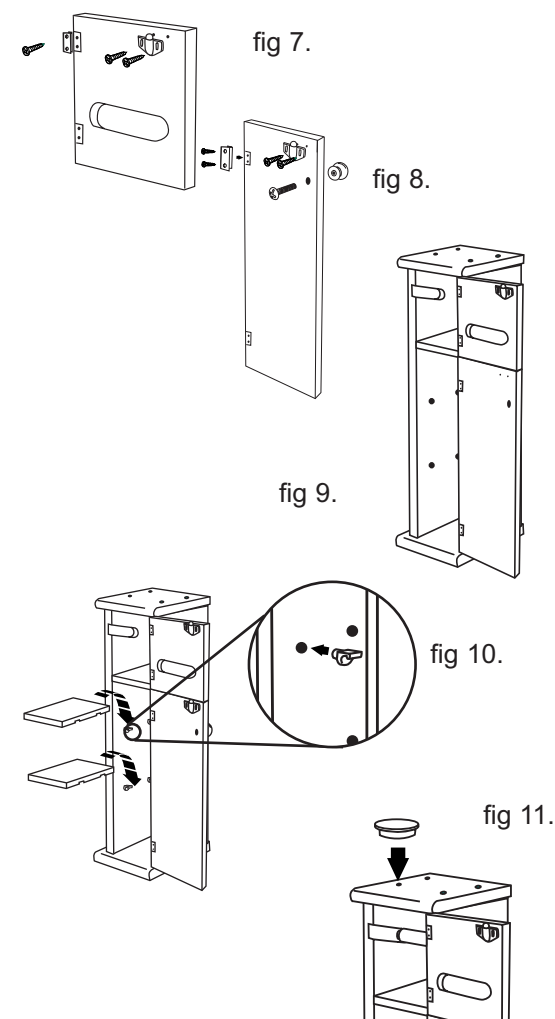


Safety Instructions

1. This Tidy Cupboard should be assembled by an adult.
2. Keep all small parts out of the reach of children.

White Tidy Cupboard

Assembly Instructions – Please keep for future reference

830/1732

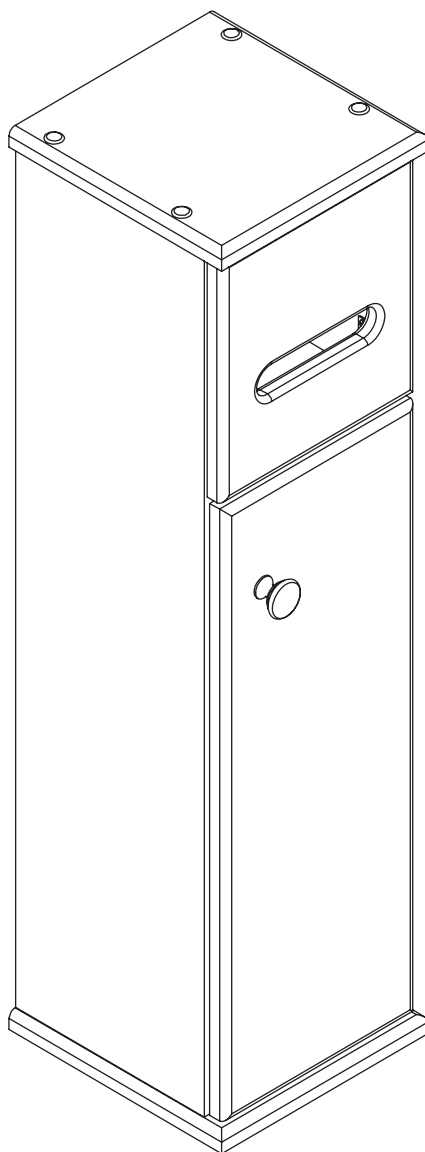

Dimensions

Width - 17cm

Depth - 17.5cm

Height - 63.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and care advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the panels, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

• **Note:** Only apply the glue once you are sure of the assembly.

- The wall plugs supplied are suitable for solid walls only. It is important that the correct type of fixing is used for your wall, seek professional advice if in doubt.

- Parts of the assembly will be easier with 2 people.

- If using power tools, please follow the safety instructions supplied with the tools.



- We do not recommend the use of power drill/ drivers for inserting screws, as this could damage

the unit. Only use hand screwdrivers.

- **Warning:** Before drilling, check the wall for hidden pipes and cables.

- Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately. If possible show product information or label to the medical advisor.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.


- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as a reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components,
call the Customer Helpline: 08456 400800


Please check you have all the panels listed below

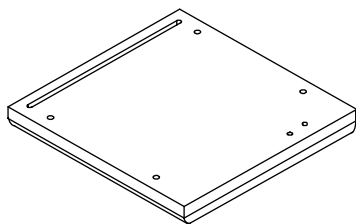


1 Top Panel x 1

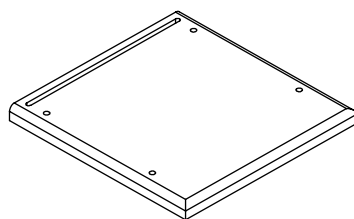 


2 Bottom Panel x 1

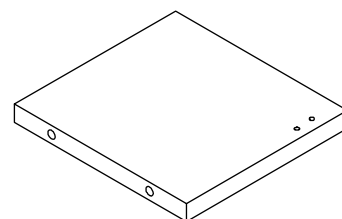 


3 Fixed Shelf x 1

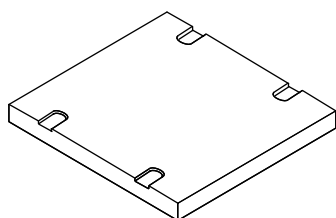 


4 Adjustable Shelf x 2

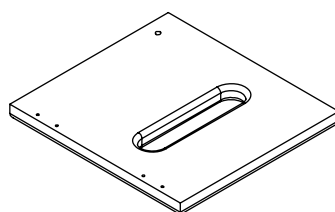 


5 Upper Door x 1

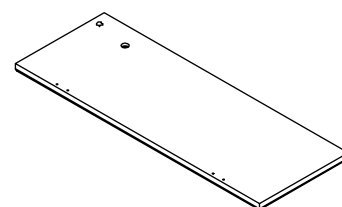 


6 Lower Door x 1

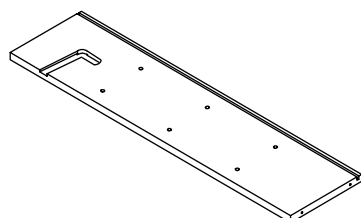 


7 Left Side Panel x 1

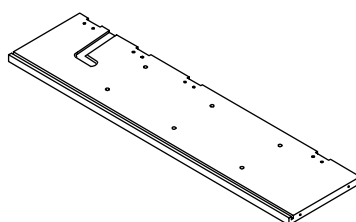 

8 Right Side Panel x 1

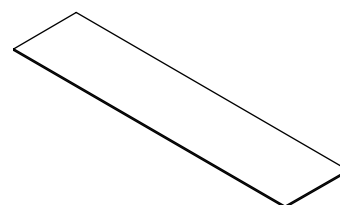 

9 Back Panel x 1

  
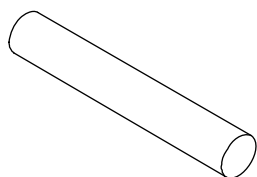 

 
 
 
 
 





10 Paper Holder x 1


Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  Hinge x 4	B  12mm Screw x 4	C  Door Knob x 1
D  25mm Screw x 1	E  Plastic Support x 8	F  Magnetic Catch x 2
G  Catch Plate x 2	H  30mm Screw x 8	I  Screw Cap x 8
J  Wooden Dowel x 4	K  10mm Screw x 18	

 Tools required



Phillips screwdriver
(medium & large)

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Assembling the fixed shelf

NOTE: It would be useful to ask someone to help you at this stage.

a: Attach the magnetic catch **F** to the underside of the fixed shelf **3** using 12mm screws **B**. Insert the wooden dowels **J** into the holes of fixed shelf.


b: Use the wooden dowel to fit the fixed shelf to the side panels **7** and **8**. The shelf should attach to the upper set of the holes. This may be a tight fit.

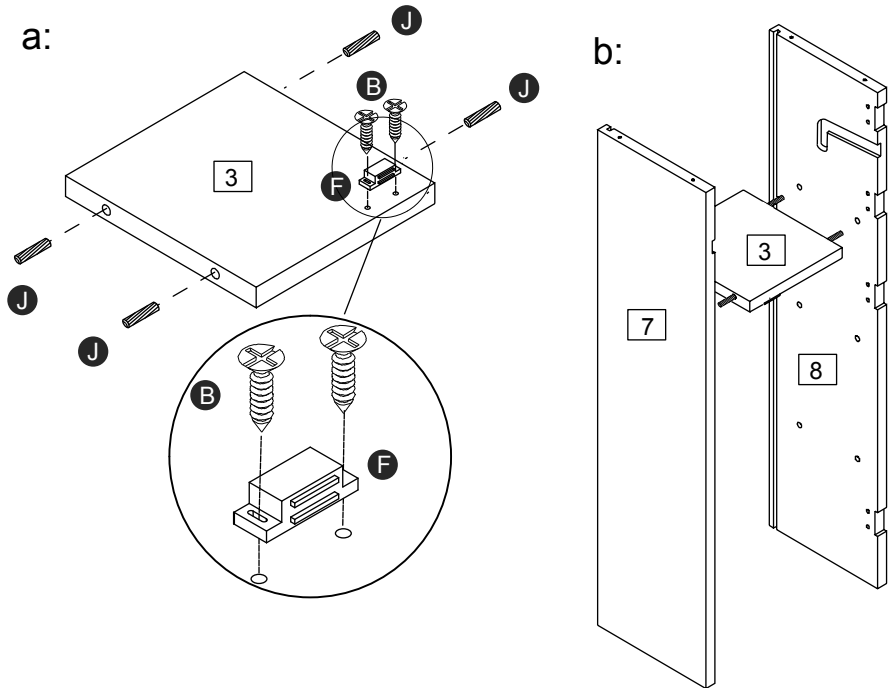

Step 2

Assembling bottom panel


Lay the cupboard on its back and use 30mm screws **H** to attach the bottom panel **2**.

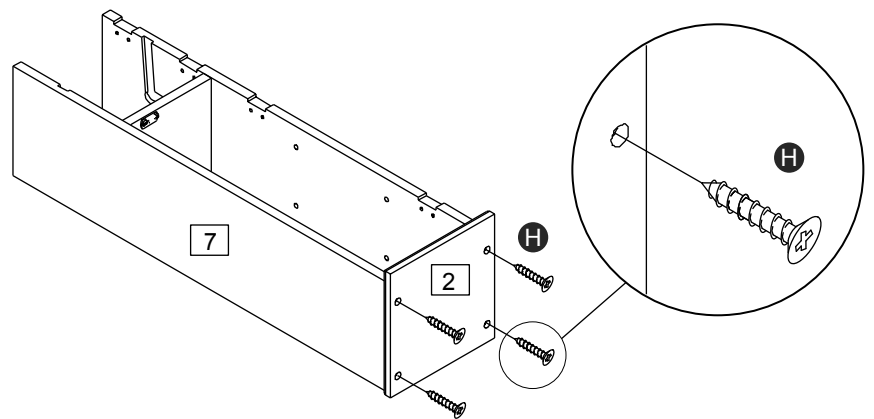

Step 3

Assembling back panel

Slide the back panel **9** into the grooves of the side panels **7** **8** and bottom panel **2**.

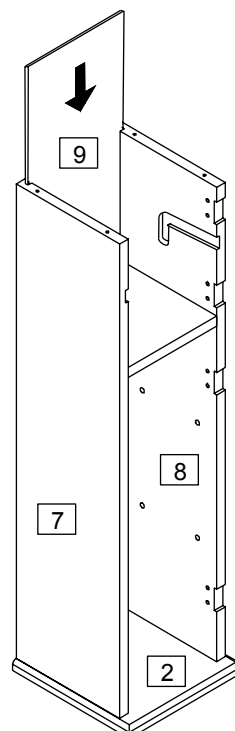

Assembly Instructions


Step 4

Assembling top panel


a: Attach magnetic catch **F** to the underside of the top panel **1** using 12mm screws **B**

b: Use 30mm screws **H** to fix the top panel to the unit.

a:

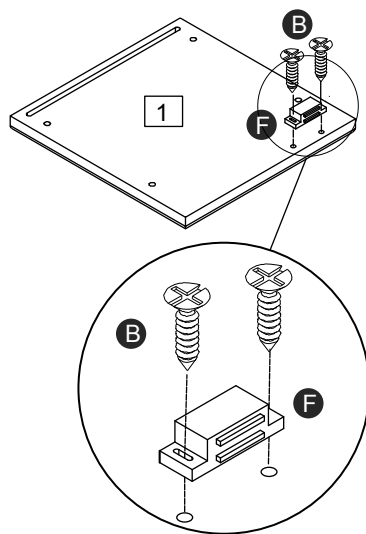

b:

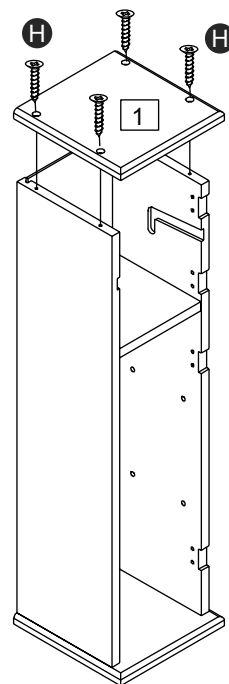


Step 5

Assembling doors


a: Attach catch plates **G** to the upper door **5** and lower door **6** using 10mm screws **K**. Also attach the knob **C** to the lower door with 25mm screw **D**

b: Attach door hinges **A** to the upper and lower door and the main body of the cupboard with 10mm screws **K**

a:

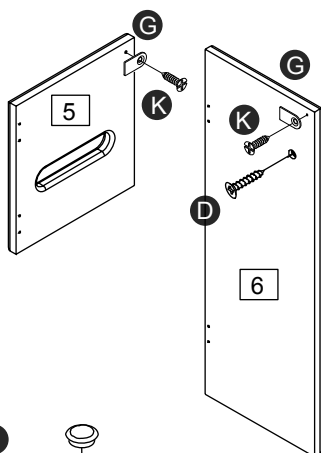

b:

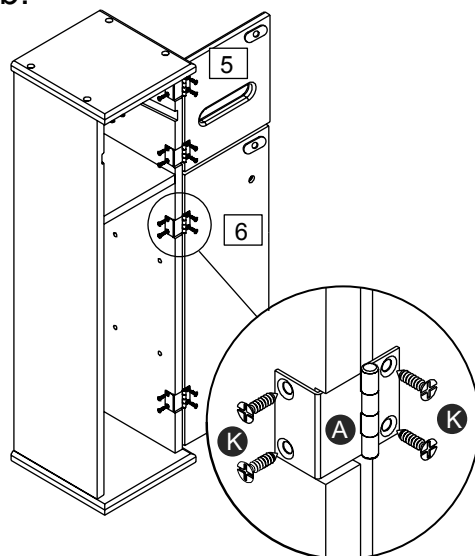

Step 6

Assembling adjustable shelf


Insert the shelf supports **E** into the holes in the side panels, and put the adjustable shelves **4** onto the shelf support.

Insert the paper holder **10**

To finish the assembly of the unit, insert the screw caps **I** over the screw holes on the outside.

NOTE: Please make sure the unit is secure before use

The assembly is now complete

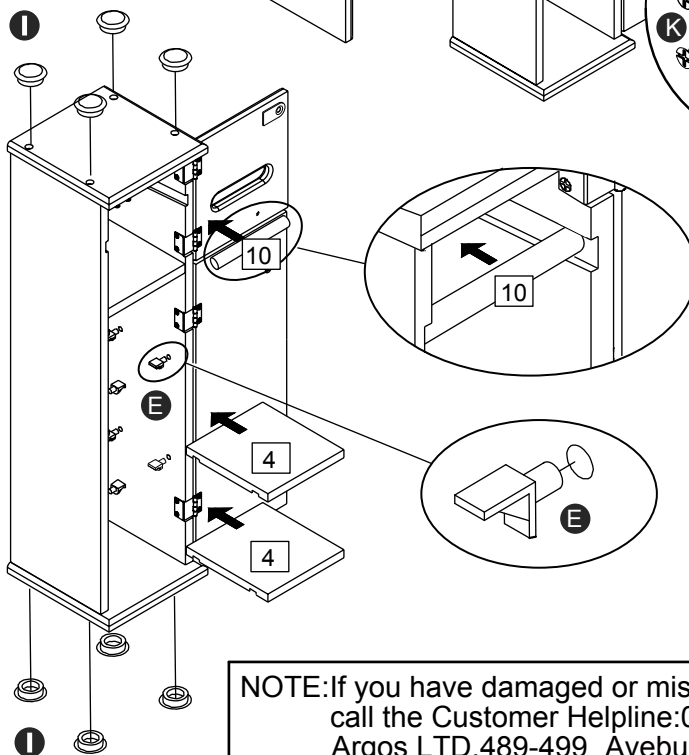

NOTE: If you have damaged or missing components, call the Customer Helpline: 08456 400800
Argos LTD, 489-499 Avebury Boulevard,
Central Milton Keynes, MK9 2NW