 


SEKONDA

THE UK'S N°1 WATCH BRAND

Instruction Guide and 2 Year Guarantee

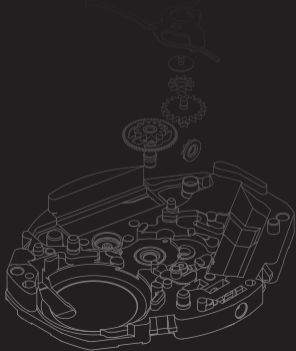

Thank you for purchasing your SEKONDA time piece. Your watch operates using a quality Japanese Quartz precision movement and will give you years of trouble free use.

If after reading these instructions you require further information on the operation of your watch please visit our website below:

www.sekonda.co.uk

The following pages outline the terms and conditions (including Service and Repairs) that apply to our **2 Year Guarantee** that comes with your SEKONDA watch.

For free bracelet adjusting service, return the watch to the address below.

T.P. (UK) Ltd, Alexander House, Chartwell Drive,
Wigston, Leicester LE18 2EZ
United Kingdom.

CONTENTS

- | | |
|---|--------------------------|
| 1 | Service and Repairs |
| 2 | Water Resistance |
| 3 | Operation and Adjustment |
| 4 | Basic Non-chronograph |
| 5 | Multi-Function |
| 6 | Moon phase |
| 7 | Chronograph |
| 8 | World Timer |

1. SERVICE AND REPAIRS

Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of **2 years** from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components free of charge.

IMPORTANT - Not covered by Guarantee

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetrations except in watches marked as "Water Resistant".

SERVICING AND REPAIRS UNDER GUARANTEE

Please post your watch, together with the Retailer's Sales Receipt or proof of purchase, the completed Guarantee slip, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will NOT be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE

Available at a reasonable charge after an estimate has been sent by T.P. (UK) Ltd. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

Important Note

It is important to identify your watch correctly. If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.

2. WATER RESISTANCE

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (eg "30/50/100/200 metres") on the dial and/or case back.

If it is not marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (eg washing, heavy rain etc). Certain chemicals in water may damage the watch seals. To maintain water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by T.P. (UK) Ltd.

IMPORTANT

Buttons must not be operated while in contact with water.

WATER RESISTANT or RESISTANT TO 30 METRES

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used whilst bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming.

WATER RESISTANT TO 100 METRES

As 50 metres plus pool side diving and snorkelling, but not high board or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but not high board diving.

3. OPERATING AND ADJUSTING YOUR WATCH

Your watch is powered by a battery which was inserted at the time of manufacture and will require periodic replacement. New batteries can be supplied and fitted by your nearest SEKONDA stockist.

The instructions and diagrams on the following pages are designed to demonstrate the adjustment of your watch.

IMPORTANT

For maximum protection, please keep your watch in its original box when not in use.

It is important to identify your watch correctly. If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.

4. BASIC NON-CHRONOGRAPH

QUARTZ NON-DATE WATCH TIME SETTING:

 
- Pull button out to position 'B'.
- Advance hands to correct time.
- Return button to position 'A'.



QUARTZ DATE WATCH TIME/DATE SETTING:

- Pull button out to position 'C'.
- Advance hands to correct time.
- Pull button out to position 'B' to change date.
- Return button to position 'A'.

NOTE: Do not use this function between 8.30PM and 1.30AM as date change cycle is in progress.

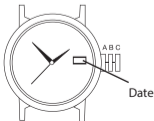

4. BASIC NON-CHRONOGRAPH

QUARTZ DAY/DATE WATCH TIME SETTING:

 
- Pull button out to position 'C'.
- Advance hands to correct time.
- Return button to position 'A'.

DAY/DATE SETTING

- Pull button out to position 'B'.
- Turn clockwise or anti-clockwise to set correct date.
- Turn clockwise or anti-clockwise to set correct day.

NOTE: To set the day on some models turn hands forward until correct day and time are reached.

NOTE: Do not set the day/date between 8.30PM and 5.00AM as day/date change cycle is in progress.

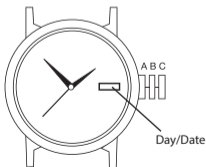

5. MULTI- FUNCTION

THREE EYE WITH DAY-DATE-24 HOUR FUNCTIONS TIME/24 HR SETTING:

- Pull button out to position 'C'.
- Turn button clockwise to set the hour, minute and 24 Hr hands to correct time. *When setting the hour hand, be sure to check that the 24 Hr hand is set properly e.g. 12 Midnight = 24.00 hrs.
- Return button to position 'A'.

NOTE: When setting the minute hand, first advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute.

DAY SETTING:

 
- Pull button out to position 'C'.
- Turn button clockwise to advance hands.
- Continue until correct day is shown.
- Return button to position 'A'.

NOTE: Date change takes place between approximately midnight and 5.30 AM.


DATE SETTING:

- Pull button out to position 'B'.
- Turn button anti-clockwise to advance date hand to correct date.
- Return button to position 'A'.

5. MULTI- FUNCTION

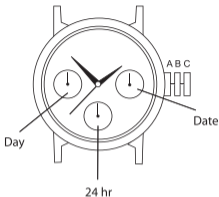

 TWO EYE WITH 24 HOUR AND REMOTE SECONDS:

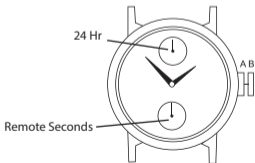

Please refer to 'QUARTZ NON-DATE WATCH TIME SETTING' section of this instruction guide.

5. MULTI- FUNCTION

THREE EYE WITH DAY-DATE AND REMOTE SECONDS:

TIME SETTING:

- Pull button out to position 'C' making sure the 'remote seconds' hand is at the 12 o'clock/60 position.
- Turn button clockwise to advance hands to correct time.
- Return button to position 'A'.

DAY SETTING:

 
- Pull button out to position 'C'.
- Rotate the hour and minute hands clockwise until the correct day is shown.
- Return button to position 'A'.

DATE SETTING:

- Pull button out to position 'B'.
- Turn button anti-clockwise until correct date is shown.
- Return button to position 'A'.

NOTE: Please do not change date between 10.00 PM and 1.00 AM as the date change cycle is in progress.

5. MULTI- FUNCTION

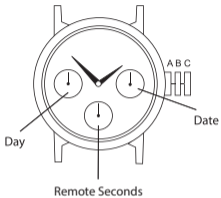

6. DAY/DATE MOON PHASE

MOON PHASE SETTING:

 
- Pull button out to position 'B'.
- Turn button clockwise to set correct moon phase.
- Return button to position 'A'.

DATE CORRECTION:

- Pull button out to position 'B'.
- Turn button anti-clockwise to set date.
- Return button to position 'A'.

DAY/TIME SETTING:

- Pull button out to position 'C'.
- Turn hands forward until correct day and time are reached.
- Return button to position 'A'.

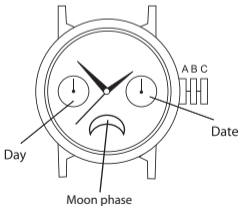


7. CHRONOGRAPH

TWO EYE CHRONOGRAPH WITH DATE TIME SETTING:

- Pull button out to position 'C', so that the second hand stops at the (0) zero position.
- Turn button clockwise to set the hour and minute hands.
- When the button is pushed back into position 'A' in synchronisation with a time signal, the small seconds hand begins to run.

DATE SETTING:

 - Pull button out to position 'B'.
- Turn button anti-clockwise to set date.
*If the date is set between the hours of 9.00PM and 1.00AM, the date may not change on the following day.
- Return button to position 'A'.

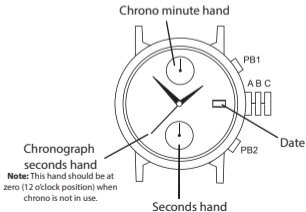

7. CHRONOGRAPH

CHRONOGRAPH FUNCTION:

- This chronograph is able to measure and display time in 1/1 second units up to a maximum of 60 minutes.

MEASURING TIME WITH THE CHRONOGRAPH:

- Start and stop the chronograph by pressing 'PB1'.
- Pressing 'PB2' resets the chronograph and all hands return to their (0) zero positions.

CHRONOGRAPH ZERO RESET:

 
In the event that the chronograph hands do not return to zero (0), when reset - take the following steps.

- Pull button out to position 'C'.
- Press 'PB1' to set the chronograph seconds hand to the (0) zero position.
*The chronograph hands can be advanced rapidly by continuously pressing 'PB1'.
- Once the hands have been set to (0) zero, reset the time and return the button to position 'A'.

7. CHRONOGRAPH

ALTERNATIVE TWO EYE CHRONOGRAPH WITH DATE:

Chrono seconds hand

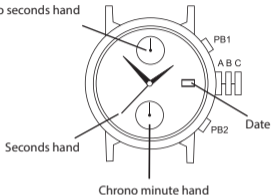

Seconds hand

Chrono minute hand

DATE SETTING:

- Pull button out to position 'B'.
- Turn button **clockwise** to set date.
*If the date is set between the hours of 9.00PM and 1.00AM, the date may not change on the following day.
- Return button to position 'A'.

7. CHRONOGRAPH

THREE EYE CHRONOGRAPH WITH DATE AND 24 HOUR INDICATOR:

TIME SETTING:

- Pull button out to position 'C'.
- Advance hands to correct time.
- Return button to position 'A'.

NOTE: The 24 hour indicator is synchronised with hour hand.

IMPORTANT: Do not press 'PB1' or 'PB2' when the time setting is in progress.

DATE SETTING:

- Pull button out to position 'B'.
- Turn clockwise to set correct date.
- Return button to position 'A'.

NOTE: Do not use this function between 8.30 PM and 1.30 AM as date change cycle is in progress.

OPERATING THE CHRONOGRAPH:

- Push 'PB1' to start/stop the chronograph.
- Push 'PB2' to reset the chronograph.

 
7. CHRONOGRAPH

CHRONOGRAPH ZERO RESET:

- Pull button out to position 'C'.
- Push 'PB1' to adjust chrono hands (anti-clockwise).
- Push 'PB2' to adjust chrono hands (clockwise).
- Return button to position 'A'.

SPLIT TIMING:

- Press 'PB1' to start chronograph.
- Press 'PB2' to hold the count.
- Press 'PB2' to continue the count.
- Press 'PB1' to stop the timing.
- Press 'PB2' to reset the chronograph.

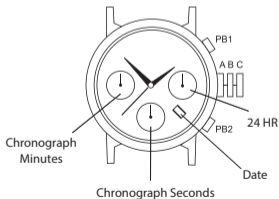

7. CHRONOGRAPH

THREE EYE CHRONOGRAPH WITH 24 HOUR INDICATOR:

TIME SETTING:

- Pull button out to position 'B'.
- Advance hands to correct time.
- Return button to position 'A'.

NOTE: The 24 hour indicator is synchronised with hour hand.

IMPORTANT: Do not press 'PB1' or 'PB2' when setting hands.

OPERATING THE CHRONOGRAPH:

- Push 'PB1' to start/stop chronograph.
- Push 'PB2' to reset.

 
SPLIT TIMING:

- Press 'PB1' to start chronograph.
- Press 'PB2' to hold the count.
- Press 'PB2' to continue the count.
- Press 'PB1' to stop the timing.
- Press 'PB2' to reset the chronograph.

CHRONOGRAPH ZERO RESET:

- Pull button out to position 'B'.
- Push 'PB1' to adjust chrono hands (anti-clockwise).
- Push 'PB2' to adjust chrono hands (clockwise).
- Return button to position 'A'.

7. CHRONOGRAPH

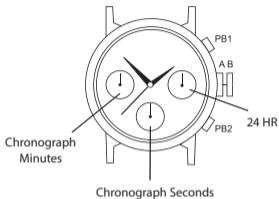

7. CHRONOGRAPH

THREE EYE CHRONOGRAPH WITH 1/10TH SECOND TIMING AND DATE:

TIME SETTING:

- Pull button out to position 'C'.
- Advance hands to correct time.
- Return button to position 'A'.

NOTE: Please ensure the previous day's date is set before setting the time.

DATE SETTING:

- Pull button out to position 'B'.
- Turn button clockwise until correct date is shown.
- Return button to position 'A'.

NOTE: Do not use this function between 8.30 PM and 1.30 AM as date change cycle is in progress.

OPERATING THE CHRONOGRAPH:

- Push 'PB1' to start/stop chronograph.
- Push 'PB2' to reset.

 
SPLIT TIMING:

- Press 'PB1' to start chronograph.
- Press 'PB2' to hold the count.
- Press 'PB2' to continue the count.
- Press 'PB1' to stop the timing.
- Press 'PB2' to reset the chronograph.

7. CHRONOGRAPH


CHRONOGRAPH ZERO RESET:

- Pull button out to position 'C'.
- Push 'PB1' to adjust 1/10th second chrono hand.
- Push 'PB2' to adjust chrono minutes and seconds hands.
- Return button to position 'A'.

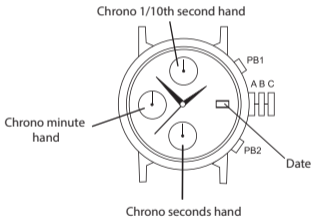

7. CHRONOGRAPH

 
THREE EYE CHRONOGRAPH WITH 24 HOUR INDICATOR:

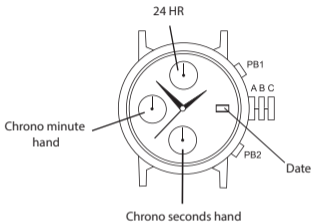

8. WORLD TIMER

If your watch has a World Timer indicator, please follow these instructions to read the time in the desired country:

 - Rotate S2 clockwise or anti-clockwise to show the local time.
- Align the local time below the local desired country.
- Your desired World Time will now be shown as the hour closest to your desired country on the rotating ring.

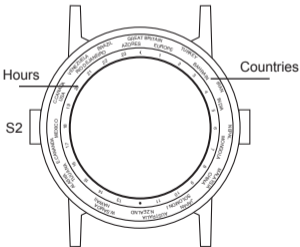



Guarantee

Block Capitals

Name.....

.....

.....

Address.....

.....

.....

Postcode

Daytime Phone

T.P. (UK) Ltd, Alexander House, Chartwell Drive,
Wigston, Leicester LE18 2EZ, United Kingdom.

Important

This guarantee slip should be retained by the owner of the product and should only be sent to SEKONDA together with the product and £4.00 to cover the handling and postage when service under guarantee is required. Please refer to service and repairs under guarantee for further information on service under guarantee. This guarantee does not affect your statutory rights.

Date of Purchase:

Retailers stamp if required or full name and address

Attach Receipt of Proof of Purchase;
failure to attach may invalidate guarantee.
This guarantee does not affect your
statutory rights.

ISOXXXXX

