


# Installation Guidelines for Rotary Drier

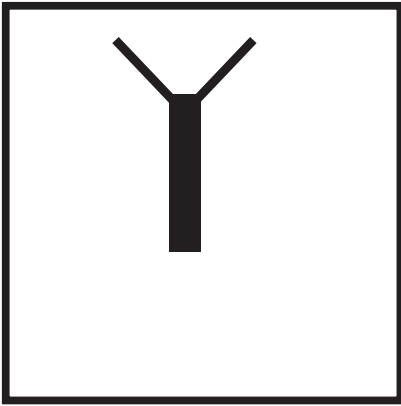


Ground Socket


1




2

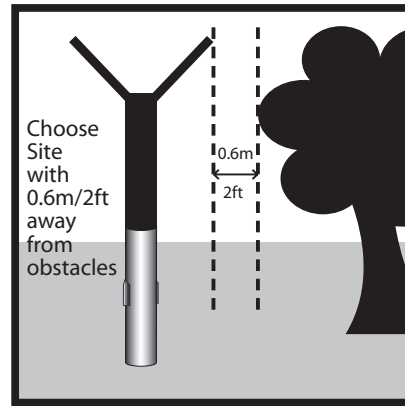


3

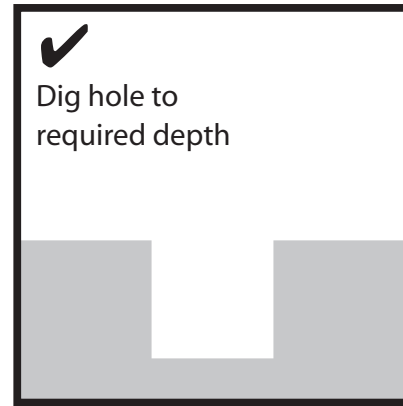


4

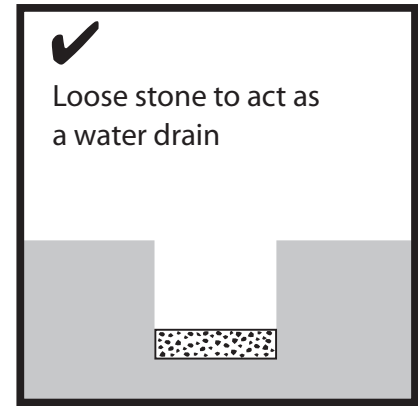


5

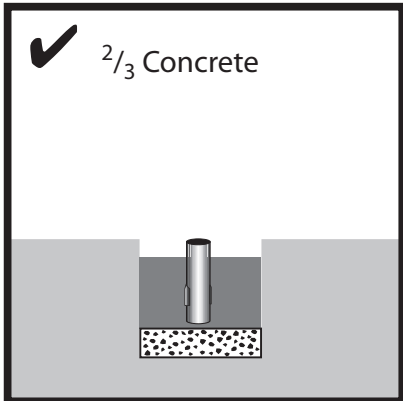


6

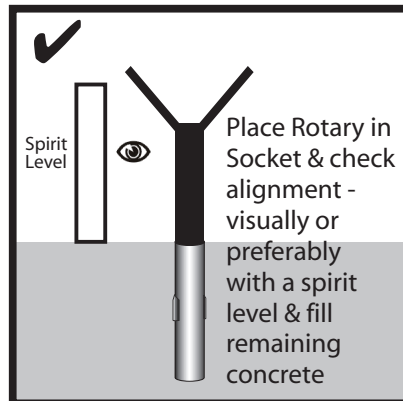

7



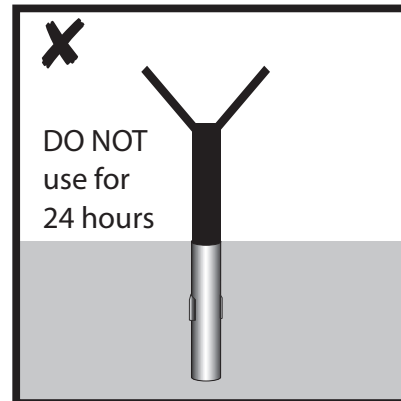


8

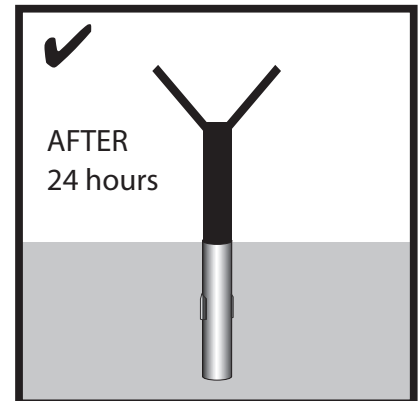



# USER GUIDELINES FOR ROTARY DRIER

Component No. 109355  
Artwork Ref. ISS/A

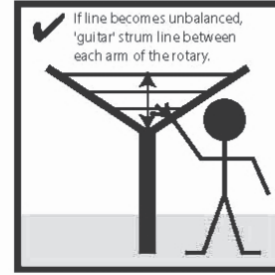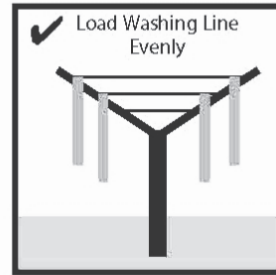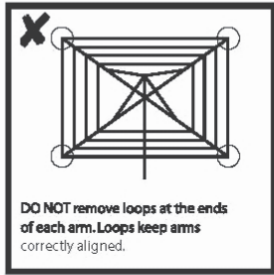

## FOLD AND REMOVE AFTER USE

STORE SAFELY OUT OF THE REACH OF CHILDREN  
CHILDREN SHOULD NOT PLAY WITH THIS PRODUCT  
THIS DRYER IS **NOT** A CHILDRENS' TOY

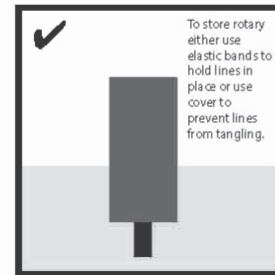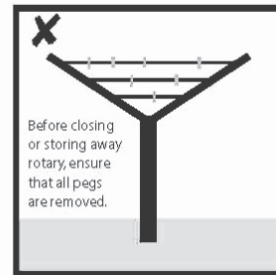


**850/0258 (5 years guarantee against frame failure due to rust, against a dated proof of purchase)**

**850/0502 (4 years guarantee against frame failure due to rust, against a dated proof of purchase)**




**850/0416 (4 years guarantee against frame failure due to rust, against a dated proof of purchase)**

**Customer Helpline  
0845 7697356**

## MECHANISM

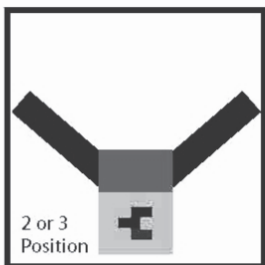

## OPERATING

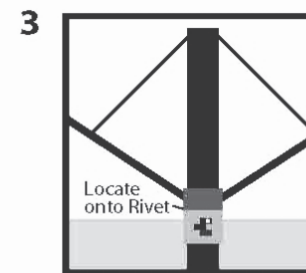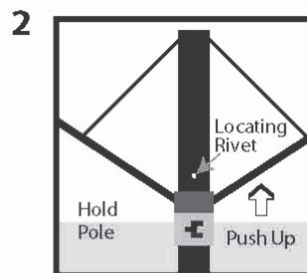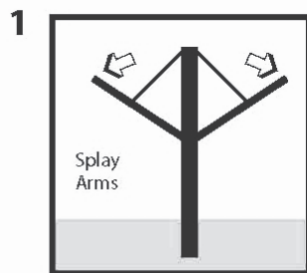

## TENSIONING

