


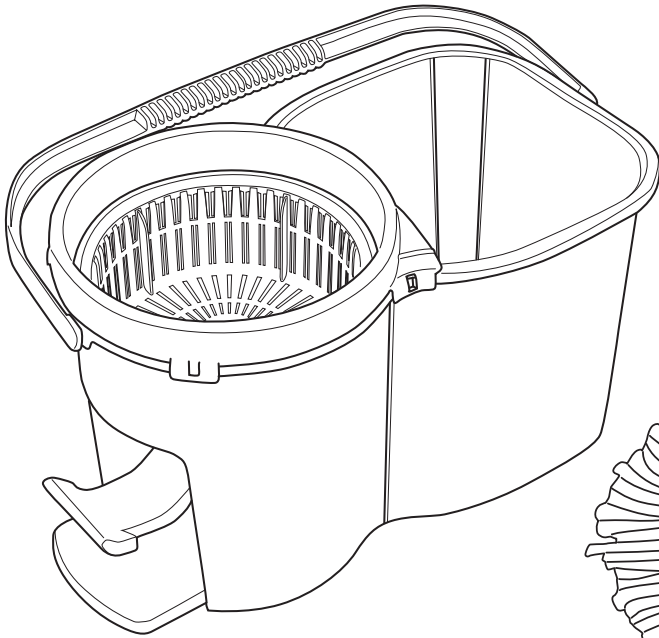

# WHIZZ MOP



Instructions

## Safety Warnings

This is not a toy. Keep away from children.

Keep all body parts away from spin cycle while it is spinning.

Keep all body parts away from the mechanism behind the pedal at all time.

Use the Whizz Mop only for its intended use.

Read the instruction manual carefully and retain for future reference.

Do not use attachments not recommended by the manufacturer.

Never operate the Whizz Mop if it is not functioning properly.

Do not leave children unattended with the Whizz Mop.

## Important information

Ensure the pole is fully upright when operating the spin cycle, and that all microfibre threads are inside the spinning bowl.

**DO NOT** operate the spin cycle if any microfibre threads are out of the spinning bowl.

Hold the mop handle gently during a spin cycle.

**DO NOT** put force or push down on the mop handle, as this can cause damage to the spin mechanism.

Ensure the handle sections are tightly threaded together before using the mop to avoid the handle sections detaching in use.

**DO NOT** put excessive force on the mop handle.



## Washing the mop head

 
The mop head is machine washable. It is recommended that you place the mop head inside a pillow case or cloth cover to avoid damage to your washing machine or the mop head.

**DO NOT** wash with other items or garments

**DO NOT** use bleach, tumble dry, iron or dry clean.

Dry flat naturally.

Always detach mop head from the pole before washing.



## Mop Assembly


To assemble the mop, tightly screw together the three part handle as illustrated.




**PLEASE NOTE:** Pole will only tighten in reverse during assembly (as shown in above image). This is to avoid the pole loosening when you wring the mop.

## Rinsing and spinning


**IMPORTANT: DO NOT** place excessive pressure on the handle when draining water from the mop head. Allow the spinning system to do this.

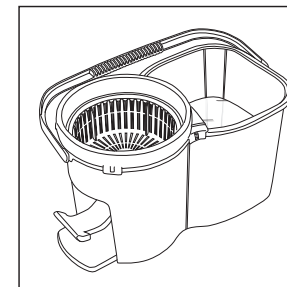


1. Fill bucket with warm water and cleaning detergent, noting the maximum fill level indicated.

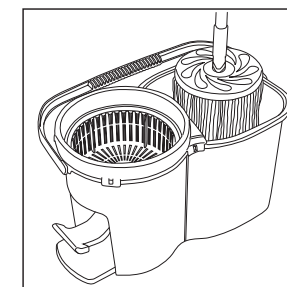

2. Place Whizz Mop into the water.

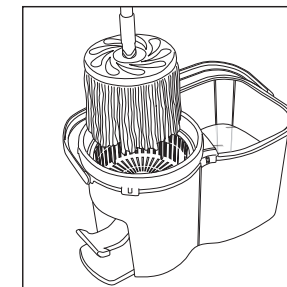


3. Place Whizz Mop in the spin system, making sure all fibres are inside the spinner.

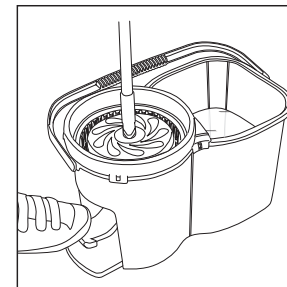


4. Use the foot pedal to spin out excess water and you're ready to go!


# Changing the mop head

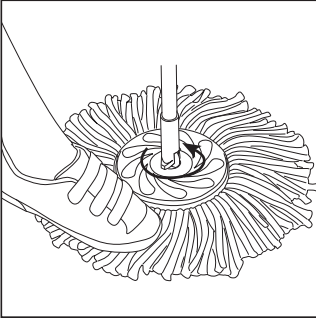


**1.** Step on the mop head fibres, with your foot at the edge of the green disc. Turn the handle so the screw joint is at a right angle to your foot.

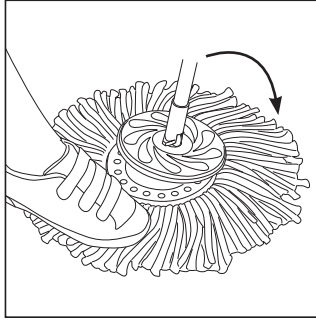

**2.** Push handle away from you to disconnect it from the mop head.

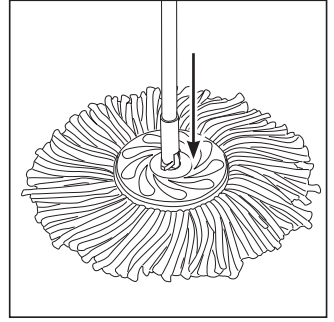

**3.** Place handle over new mop head and push down until you hear a click.

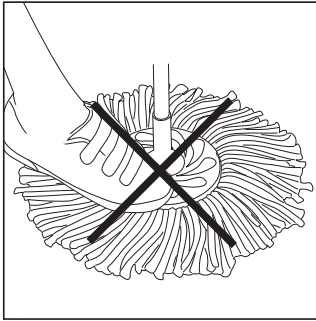

**DO NOT** place foot on the plastic head when removing the mop head.

**JML**

Unit 1 Eastside, Port of Tyne,  
South Shields, NE33 5SP

Freephone: 0800 781 7831

E-mail: [info@JMLgroup.co.uk](mailto:info@JMLgroup.co.uk)

Web: [www.jmldirect.com](http://www.jmldirect.com)

**Product code:** V2334

©JohnMillsLtd/PS/09.10/TW/E