



XROCKER **XH1** HEADSET INSTRUCTIONS MANUAL

SAFETY GUIDELINES

- Should you have trouble operating the device and reminder does not work, go to www.xrockernation.co.uk for support. Do not attempt to fix it yourself at anytime.
- Keep your device away from liquid, humidity or moisture. Operate your device within the specified temperature range of 0° (32°F) to 40°C (104°F).
- Do not take apart the device or change the original accessories (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.
- In order to take good care of your hearing, we recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time.
- Use a dry and soft cloth with a little warm water to clean the surface of the device.

EXCLUSIVE OF WARRANTY

- All our current products have a one-year warranty period beginning from the purchase date.
- In case of defect, return the product to your reseller with failure description, proof of purchase and all accessories.
- During the warranty period, you will receive a replacement product from the reseller if available.
- For missing accessories such as manual, software or other items, contact our Service Centre from local distributors.
- Warranty will be void in case of opened products, physical damage, misuse, modification, repaired by unauthorised persons, carelessness and using the product for another purpose than its intended use.

 
WARRANTY TERMS

- Damage caused by accidents or disasters, such as fire, flood, earthquake, war, vandalism or theft.
- Incompatibility with other hardware/software not defined as minimum system requirements.
- Accessories such as batteries and fuses.


DEVICE LAYOUT

- A** - Headband
- B** - Earmuff
- C** - Stretching Part
- D** - Microphone
- E** - Headset Cable
- F** - 3.5mm Audio Connection*
- G** - Microphone Mute Switch
- H** - Headset Volume Controls

* If your controller does not feature the built in 3.5mm audio jack, then a headset adapter (purchased seperately) will be required.

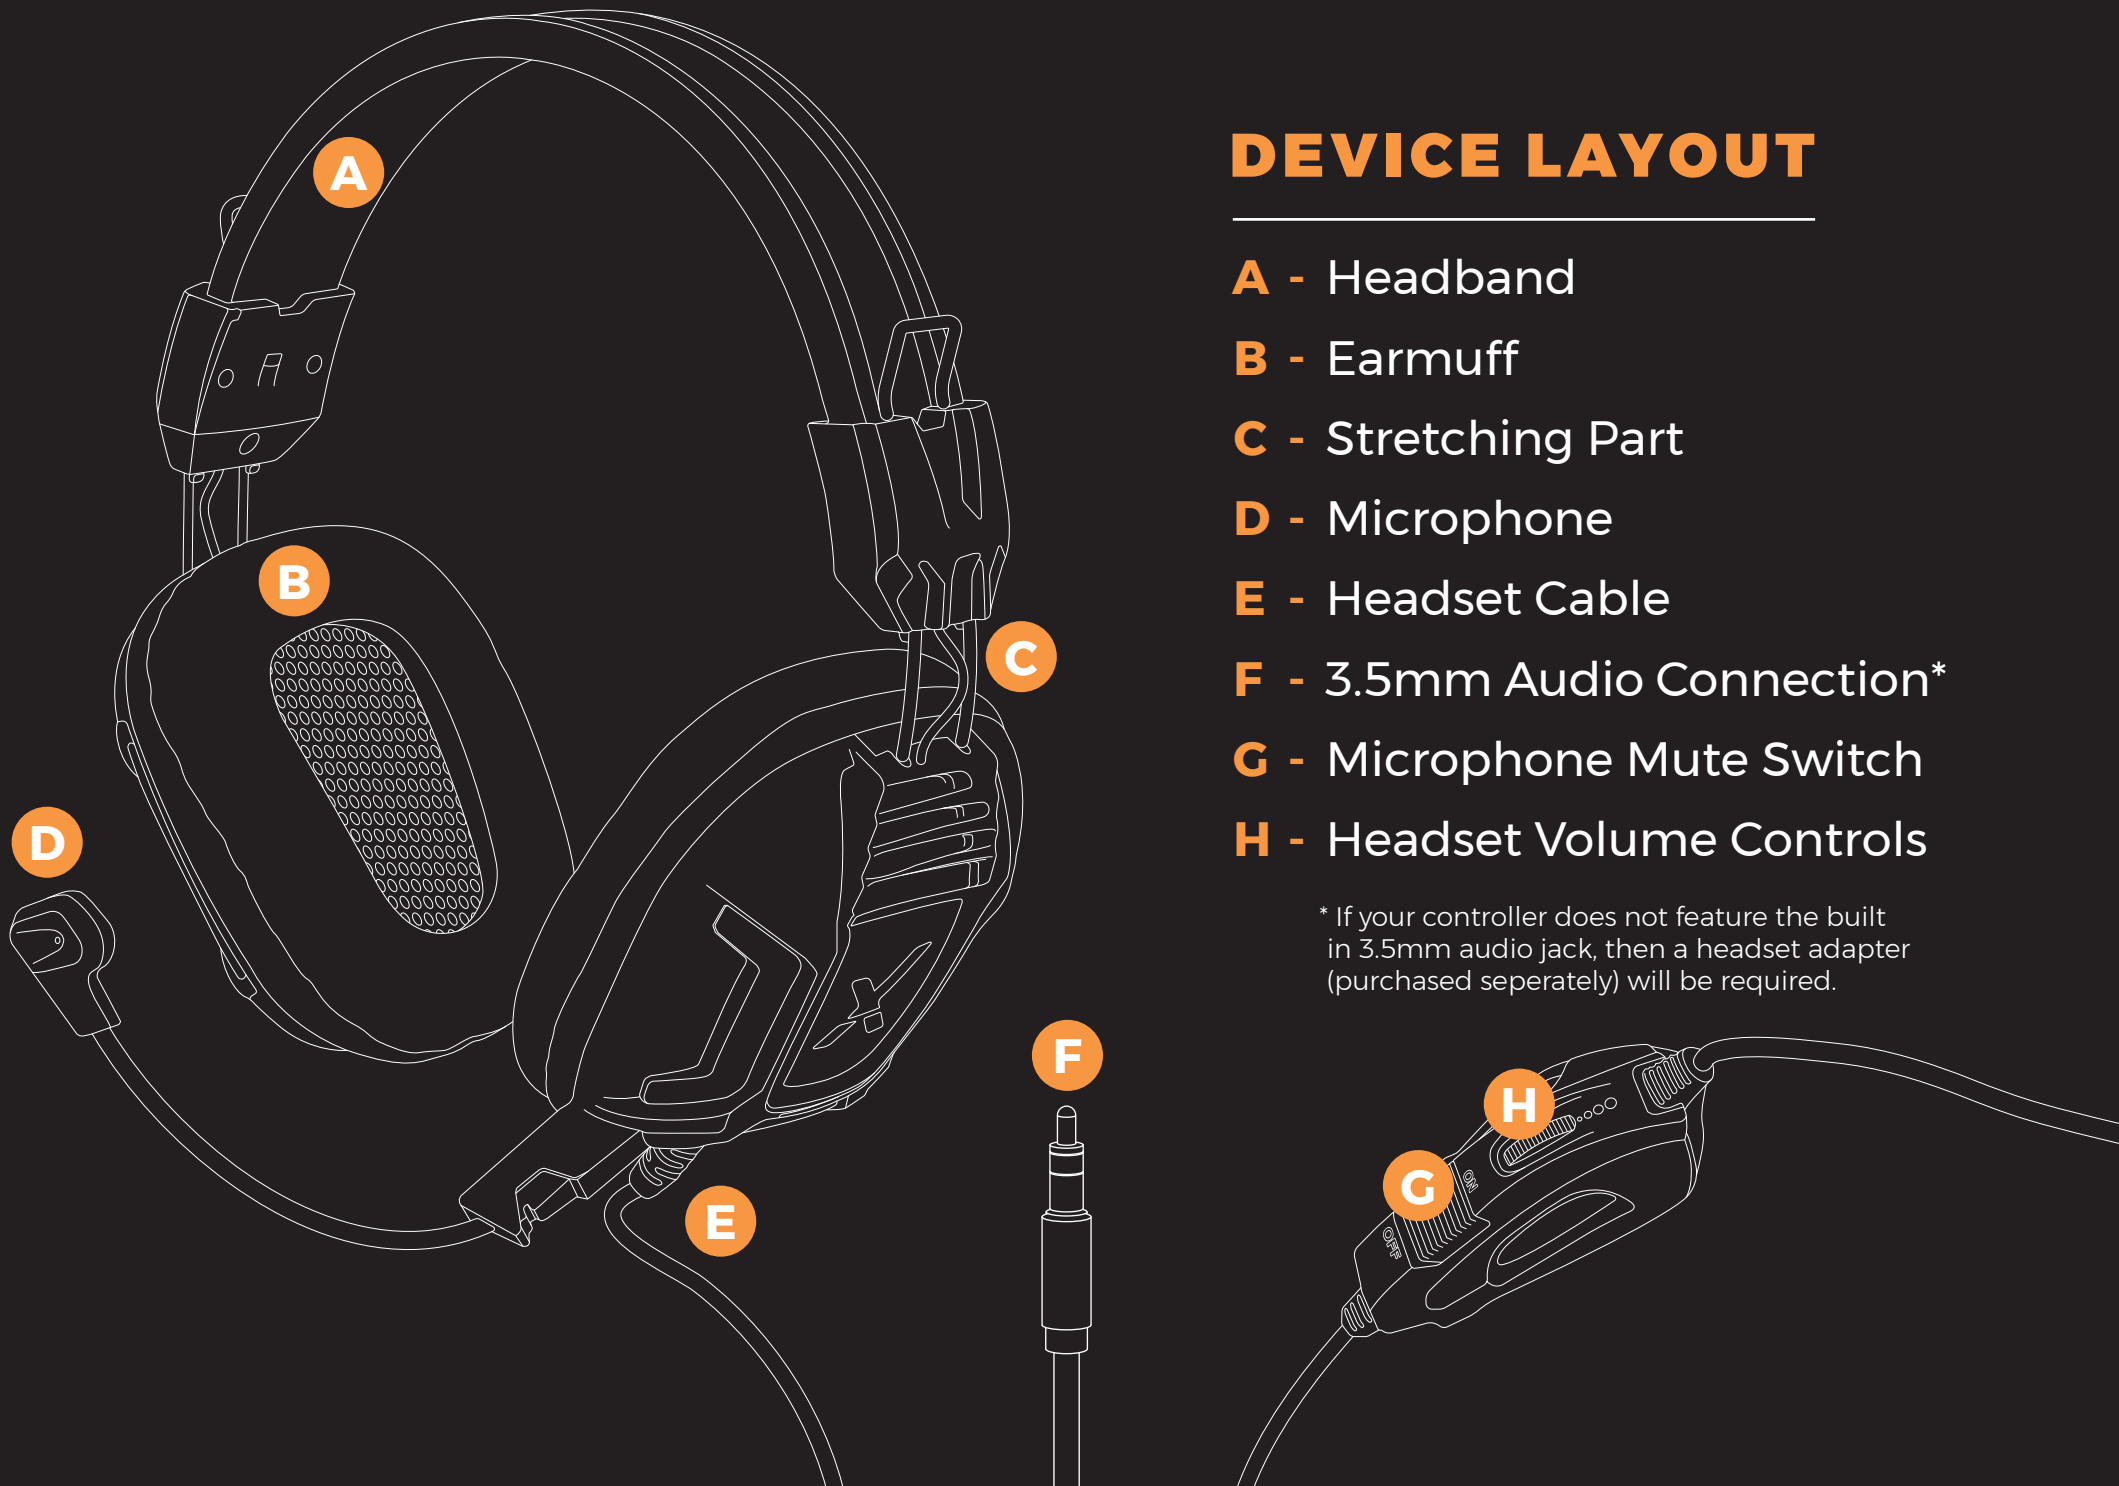

USING THE XH1 HEADSET

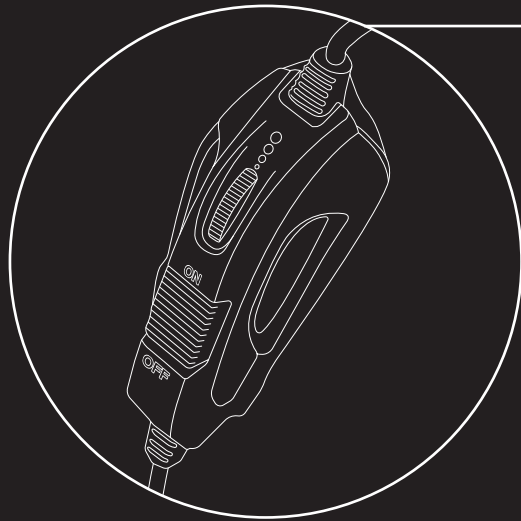 

Adjust the **volume controller** to turn the volume up or down

FIRST TIME USE:

We recommend *stretching the headset gently* apart before placing it over your head to minimize headband stress. However, please avoid overstretching the headset beyond its structural limits.



Flexible microphone

PS4

From the PS4 Settings Menu, Select:



1. Settings



2. Devices



3. Audio Devices



4. Output to Headphones*
(All Audio)



* If using with an X Rocker Gaming chair, set the headset to Chat Audio to use the X Rocker Gaming Chair audio.

XBOX ONE

From the Xbox One Settings Menu, Select:



1. Settings



2. CONSOLE



 
3. Display & Sound



4. Chat Mixer

- Mute all other sounds
- Reduce the volume of other sounds by 80%
- Reduce the volume of other sounds by 50%
- Do nothing



* An additional headset adapter (Sold Separately) will be required if your controller does not feature a headset socket.

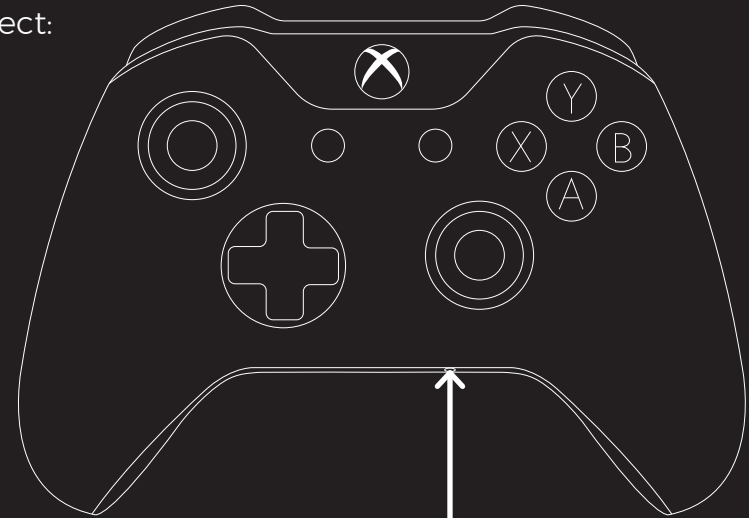

NINTENDO SWITCH / MOBILE



  Simply connect the 3.5mm audio connection from your headset to the socket on your Nintendo Switch or Mobile.

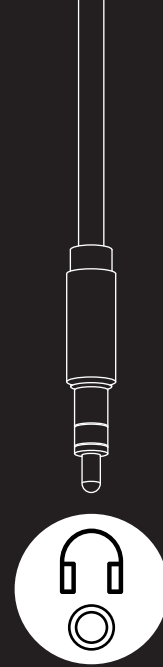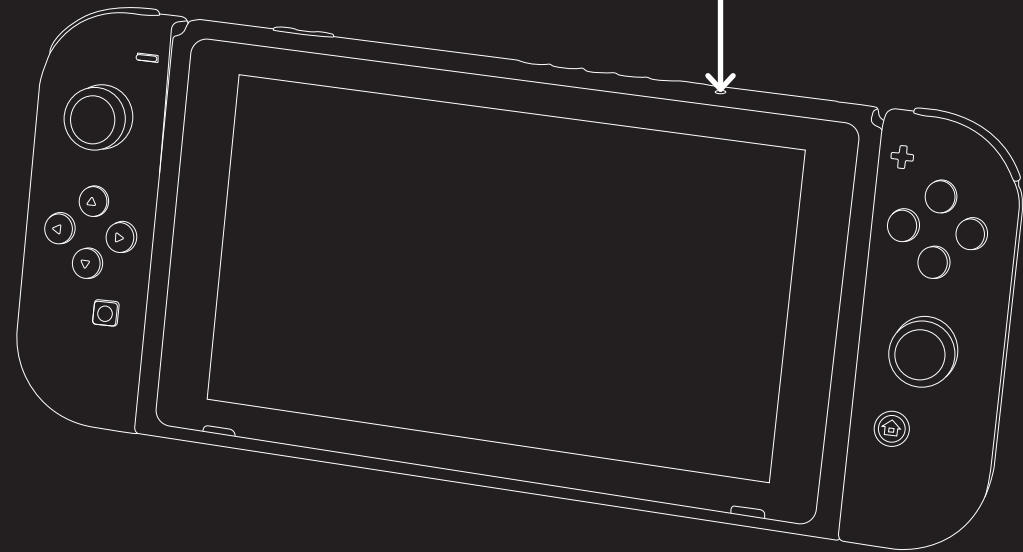

NOW YOU'RE ALL SET UP,
GET ROCKING!

XRocker®

