

9. Any battery may leak battery acid or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.

10. Never recharge a cell of one type in a recharger made for a cell of another type.

11. Discard leaky batteries immediately. Leaky batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

12. Always remove batteries if the product is not going to be used for a month or more. Batteries left in the unit may leak and cause damage.

13. Recommended type batteries-alkaline disposables, size C(LR14-1.5V). Never mix battery types. Change batteries when product ceases to operate satisfactorily.



MAINTAIN AND CLEAN

1) In order to keep the product attractive keep it clean (wipe with a damp cloth). Also avoid long sun exposure.

2) Store item in dry and properly ventilated places.

3) Do not bleach and do not tumble dry.

4) Never soak the musical and vibrating unit.


IMPORTANT! KEEP FOR FUTURE REFERENCE.

cuggl

INSTRUCTIONS FOR ASSEMBLY AND USE

COMPLIES WITH EN 12790:2009

Cat No: 8571294

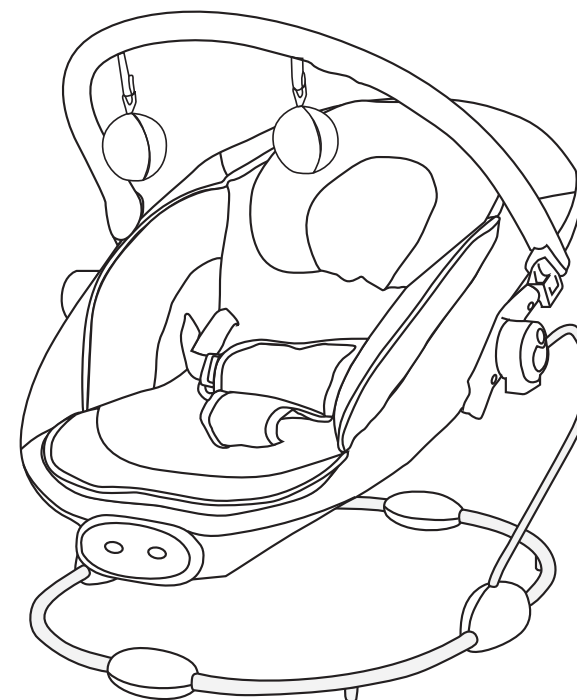


ARGOS LTD

489-499 Avebury Boulevard,
Central Milton Keynes MK9 2NW.

For the safety of your child please read these instructions before using the product.

STANDARD CONFIGURATION PARTS

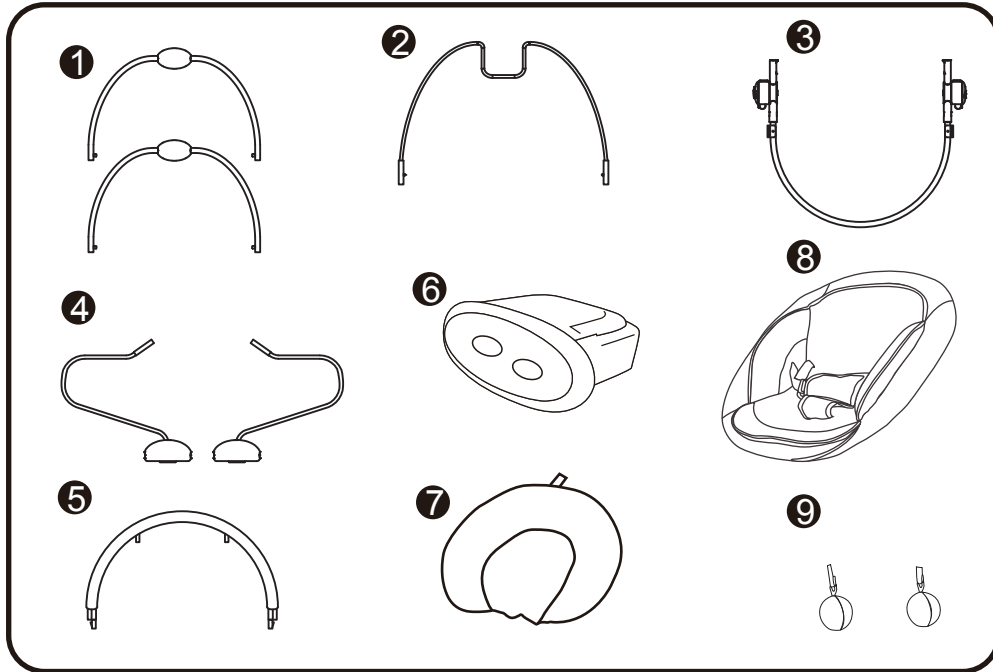

- ① Chassis tube
- ② Seat wire
- ③ Backrest tube
- ④ Support wire frame
- ⑤ Toy bar
- ⑥ Music and vibration
- ⑦ Head support
- ⑧ Seat pad
- ⑨ Toys

WARNING

Read this instruction carefully before using and keep it for future reference. Failure to follow these warnings and the assembly instruction could result in serious injury or death.

Products need to be installed by adult and used under adult's supervision.

1. Use for babies aged around up to 6 months with maximum weight 9kg.
2. Do not use the product if any parts are broken, torn or missing and use only spare parts approved by the manufacturer.
3. Always use harness. Do not move or lift this product with the baby inside it.
4. Never leave child unattended. Do not let children play with this product.




5. Stop using product when child attempts to climb out or reaches 9kg.
6. It is dangerous to place this product on an elevated surface. Always use on a flat, level floor.
7. To avoid injury ensure that children are kept away when unfolding and folding this product.
8. Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. In the vicinity of the product.
9. This product does not intend for prolonged period of sleep. Should your child need to sleep, then place the child in a suitable cot or bed.
10. Do not use the product without the seat cushion.
11. Discontinue using your product should it become damaged or broken.
12. Do not use the reclined cradle once your child can sit unaided.
13. Never use the toy bar to carry the reclined cradle.


FOR SAFE BATTERY USE

1. Keep the batteries out of children's reach.
2. Only the recommended batteries or equivalent are to be used, volts and size.
3. Batteries are inserted with the correct polarity.
4. Remove exhausted batteries from the product.
5. Do not short-circuit supply terminals.
6. Rechargeable batteries are to be removed before being charged.
7. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged.
8. Any battery may leak battery acid if mixed with a different battery type, if inserted incorrectly(put in back-wards) or if all batteries are not replaced or recharged at the same time. Do not mix old and new batteries. Do not mix alkaline, standard(carbon-zinc) or rechargeable(nickel-cadmium) batteries.

9. Place the crotch strap between child's legs and fasten the buckle on both sides. The child should always wear a safety harness. **Warning! Ensure the child's fingers are kept away when fastening the buckles. Always use the restraint system.**

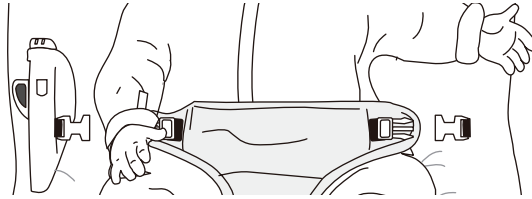


Pull loose ends of the harness to get a snug fit around the child. To release the buckle, press on the prongs and pull apart. Repeat on the other side.

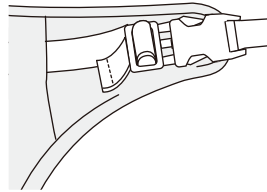


ASSEMBLY

1. Insert chassis tube into plastic hole of support tube until a "click" is heard.

Attention: chassis tube with anti slip pad face to floor.

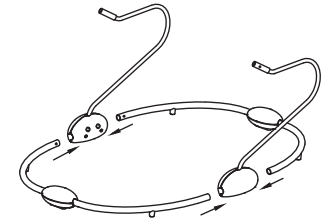


2. 2 support wire frames can rotate inward.

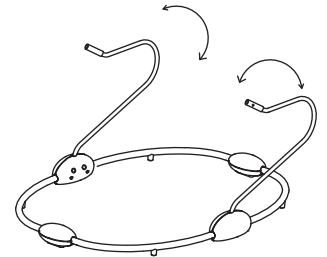


3. Backrest tube and seat wire assembly, insert seat wire into backrest tube until the shrapnel pop-up, like right picture.


Attention: Intermediate folding section of seat wire should face downside.

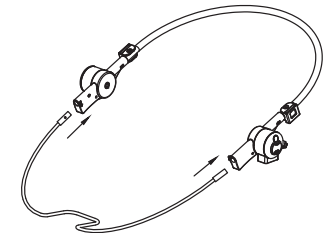

4. Insert support wire frame into seat joint hole until a 'click' is heard, like right picture.

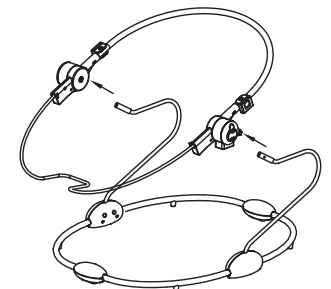



5. Place the seat pad over the seat frame, and fasten velcro tabs at the rear to secure. Position the head support at the top of the seat pad by velcro.

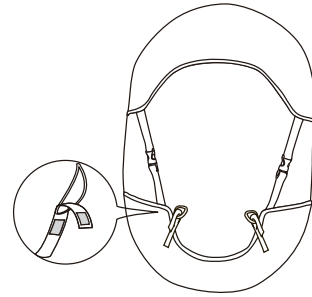


6. The music and vibration unit requires 2 x C batteries (not included). Use a Phillips screwdriver to unfasten the battery cover. Insert batteries.

Secure battery cover back into position.
Warning! Remove batteries before storing the bouncer.


Insert music and vibration unit
Attention: Battery compartment should face downside.

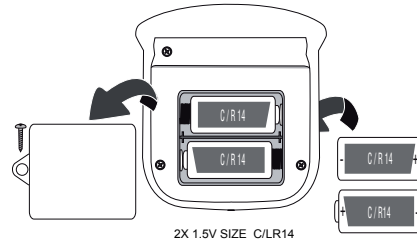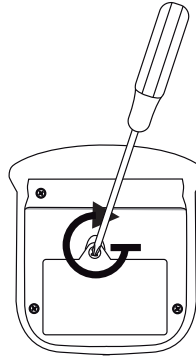

7. Toy bar assembly insert the toy bar frame into plastic holes each side, then adjust the toy bar to suitable degree as you like. And hang up the toys.

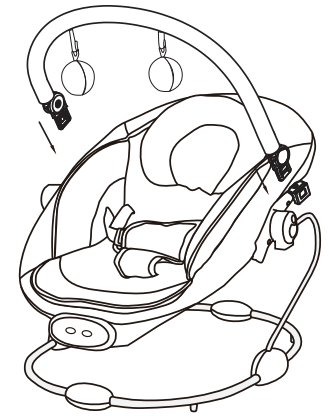

8. Adjust the backrest: Press the 2 side buttons on the seat joint together to adjust the position of the backrest, there are 2 positions.

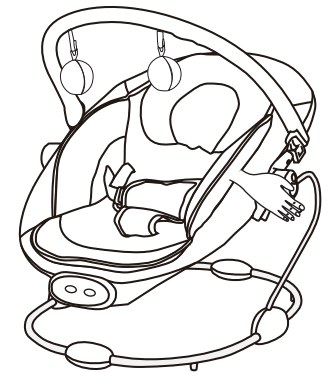

Vibration/sound unit

