Please read all instructions carefully and keep for future reference.

WARNING: This product is only suitable for a child who cannot sit unaided, roll over and cannot push itself up on its hands or knees. Maximum weight of the child 9 Kg.

Before picking up the carrycot, make sure both handles are secure in the hand of the carer.

Use only on firm, horizontal level & dry surface.

The head of the child in the carry cot should never be lower than the body of the child.

WARNING: Do not let other children play unattended near the carrycot.

WARNING: Do not use if any part is broken, torn or missing.

Use only replacement or approved parts supplied by the manufacturer.

WARNING: Do not leave flexible carrying handles inside the carry cot.

WARNING: Maintaining a safe distance from the strong heat sources

such as electric bar fires, gas fires, etc in the near vacinity of moses basket.

If the mattress is purchased separately, it shall fit well into the product and the depth from the top of the side of the product should be less than

170mm when the mattress is in position of use.

Do not add another mattress on top of the mattress provided.

The handles and the bottom should be inspected regularly for signs of damage & wear.

If the moses basket is intended to be used with a stand, then it should be checked that the stand is the appropriate size to accommodate the base of the moses basket. Base size min-max 700-835mm in length and 300-370mm in width.

When the stand is not in use it should be stored away from children

Cleaning Instructions

BASKET: Sponge lightly with warm water and mild detergent **MATTRESS:** If necessary wash by hand in warm water and mild detergent. Dry away from direct heat or sunlight. Do not tumble dry. Do not dry clean.

DRESSING: See care label on product.

CLAIR DE LUNE DEDICATED CUSTOMER CARE HELPLINE 0161-491-9800

TELEPHONE DIRECT FOR SPARE PARTS OR ASSEMBLY PROBLEMS

Please ensure all fittings are accounted for and that nothing is left in the basket which may create a serious hazard to a baby.



for you and your baby, since 1943

Attaching a hood to your Wicker basket




WICKER BASKET - HOOD ASSEMBLY INSTRUCTIONS

Your components and fittings


PLEASE CHECK YOU HAVE THE FITTINGS SHOWN BELOW.

Please note: The quantities below are the correct amount to complete the assembly.

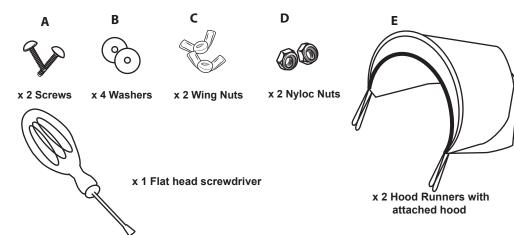


Please note: For safe keeping the hood fittings and fixtures are stored in the back of the mattress.


Position of Components

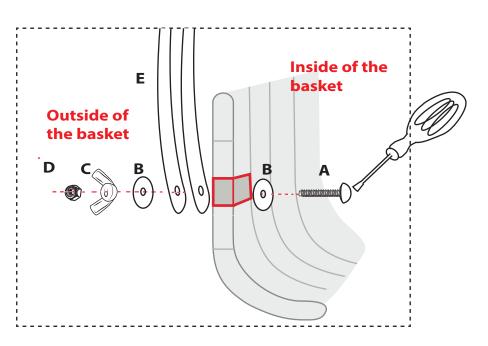


Step 1 - Inserting screw and washer

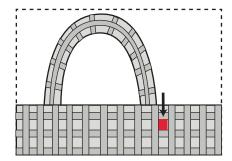

Find the existing hole in your wicker basket and insert a screw and washer through from the inside of the basket.

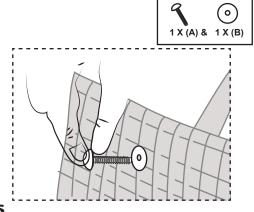

Step 2 - Inserting the runners

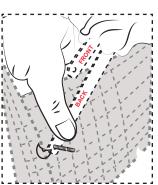

Having located the screw with the washer attached from the inside of the basket, now attach the BACK runner E outside of the basket.



Then attaching the FRONT runner on top of the BACK runner. It is essential that BACK runner is attached first, followed by the **FRONT**

Step 3 - Attaching Wing nut & Nyloc Nut


Attach the Wing nut and the locking Nyloc nut



The locking Nyloc nut should be tightened with a pair of plyers so that it locks and cannot be undone using finger pressure.

Please note: if the hood of the moses basket does not stay up, tighten the wing nut slightly. The Nyloc nut is used for extra security to keep the wing nut in place.

Repeat process, 1, 2 & 3 to attach hood to the otherside of the wicker basket.

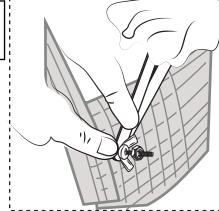

1