

## B620 Abbreviated instruction



ENGLISH

• This watch is light-powered. Be sure your watch is fully charged before use.

• For complete instructions for setting, use, charging time and specifications, refer to the full instruction manual: B620 Click Here



### Component identification

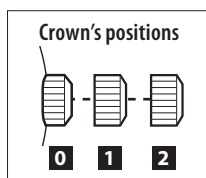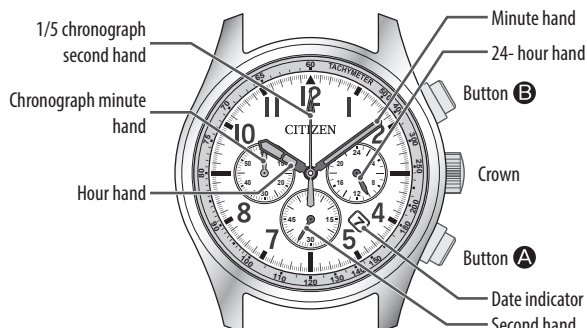

• Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.

### Adjusting the time

#### 1 Pull the crown out to position 2 when the second hand points to 12:00 (0 second).

All the hands stop.

• When using chronograph, the chronograph is reset and 1/5 chronograph second hand returns to 0 second.

#### 2 Rotate the crown to adjust the time.

- The 24-hour hand also moves. Pay particular attention to the hand to ensure AM or PM time is set properly.
- When the watch shows around 12:00 AM, the date indicator starts to change. The date indicator does not change by rotating the crown counterclockwise.

#### 3 Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.

### Adjusting the calendar

Adjust the date indication on the first days of March, May, July, October and December.

• When the time on the watch is between 9:00 PM and 1:00 AM, do not execute the adjustment. Otherwise the date indication may change improperly.

#### 1 Pull the crown out to position 1.

#### 2 Rotate the crown counterclockwise to adjust the date.

#### 3 Push the crown in to position 0 to finish the procedure.


### Using the chronograph

#### 1 Push the crown in to position 0.

**Start/stop:** press and release the upper right button B.

• Press and release the lower right button A to return the chronograph minute hand to 00 minute position before starting measurement if it is not at the position.

**Reset:** press and release the lower right button A while the chronograph is stopped.

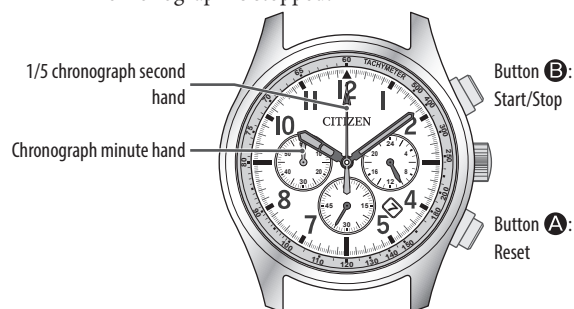

The 60-minute chronograph can indicate a maximum of 59' 59.8".

- After one hour of continuous chronograph operation, the chronograph automatically stops.
- The current time is shown while the chronograph works.
- While the second hand is moving once every two seconds (the insufficient charge warning function), you can not use the chronograph.

### Correcting the reference position of 1/5 chronograph second hand

Do the following procedure when 1/5 chronograph second hand does not return to 0 second by resetting the chronograph.

#### 1 Pull the crown out to position 2.

• The watch stops. All the hands stop.

#### 2 Press and hold the upper right button B for 2 or more seconds.

• You can adjust 1/5 chronograph second hand.

#### 3 Adjust 1/5 chronograph second hand to 0 second by pressing the upper right button B repeatedly.

Each time you press the button, 1/5 chronograph second hand moves by 1 step.

• While you press and hold the button, the hand moves continuously.

• Chronograph minute hand moves as 1/5 chronograph second hand moves.

#### 4 Rotate the crown to adjust the time.

#### 5 Push the crown in to position 0.

#### 6 Press and release the lower right button A.

• When you press and release the button, chronograph minute hand is reset.