 


TIDY RAIL

 
Simple Assembly Instructions - Please keep for future reference

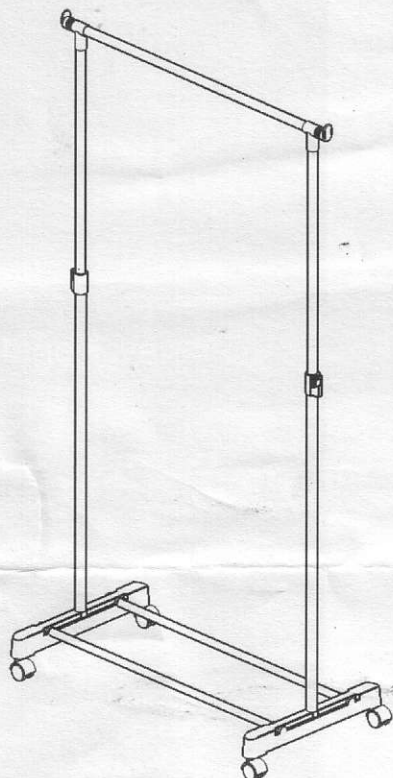

Component parts and fittings

TIDY RAIL = 5 parts

- A** Leg section x 2



- B** Bottom crossbar x 2



- C** Lower side support x 2



- D** Upper side support x 2



- E** Upper crossbar x 1



USEFUL TIPS

1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Assemble this product on a carpet.
3. Keep fittings out of children's reach.
4. We suggest you retain these instructions for future reference.

FITTINGS = 3 parts

- F** Height Adjuster x 2



- G** Corner Bracket x 2



 
- H** Castor x 4



Assembly Instructions Tidy Rail


Stage One - Fit Bottom Crossbar to Leg Sections. (Dia.1)

1. Locate bottom crossbar **B** over leg sections **A** and firmly push into position. (see Dia.1)

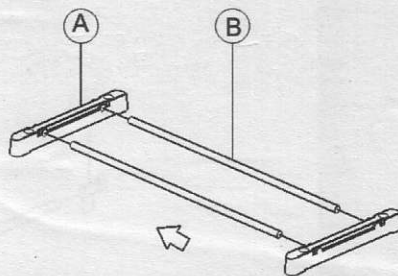


Stage Two - Fit Lower Side Supports. (Dia. 2)

 1. Locate lower side supports **C** over leg sections **A** and firmly push into position. (see Dia2)

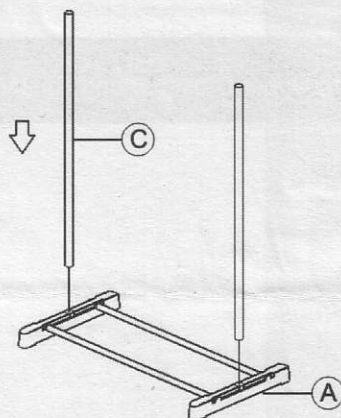

Stage Three - Fit Upper Side Supports. (Dia. 3)

 
1. Locate hight adjuster **F** onto lower side supports **C** and push into position.
2. Fit upper side supports **D** into lower side supports **C** and lock the clip on hight adjuster **F**. (see Dia3)

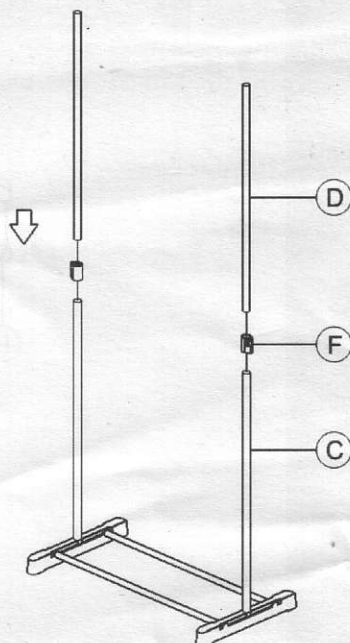

Assembly Instructions Tidy Rail


Stage Four - Fit Corner Brackets to Upper Crossbars. (Dia.4)

 1. Locate corner brackets **G** onto each end of upper crossbars **E** and firmly push into position. (see Dia.4)

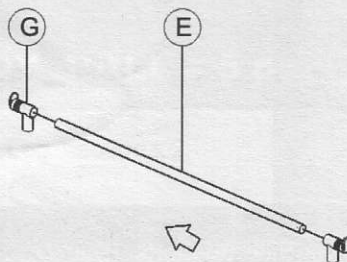

Stage Five - Fitting Upper Crossbar and Castors. (Dia.5)

 
1. Position corner brackets **G** on upper crossbar **E** over upper side supports **D** and firmly push into position.
2. Locate castor **H** under leg sections **A** and firmly push into position.
3. Adjust height of upper crossbar **E** by unlock the height adjuster **F**. Re-lock when desired height is reached. (see Dia.5)

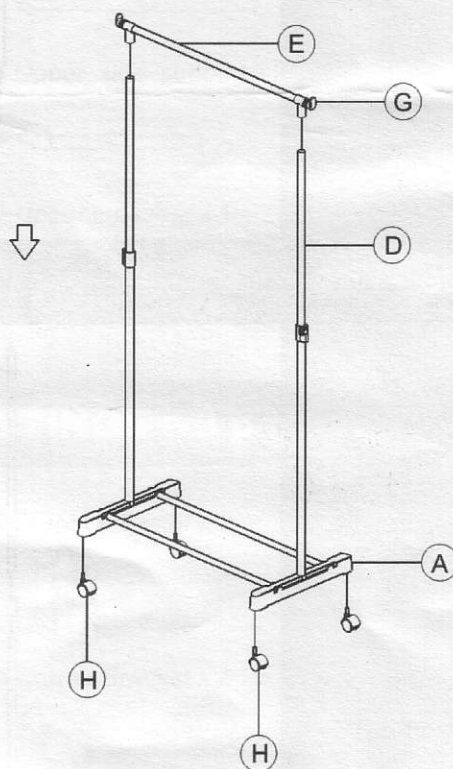

Chrome Tidy Rail

Assembly Instructions – Please keep for future reference

 8753184

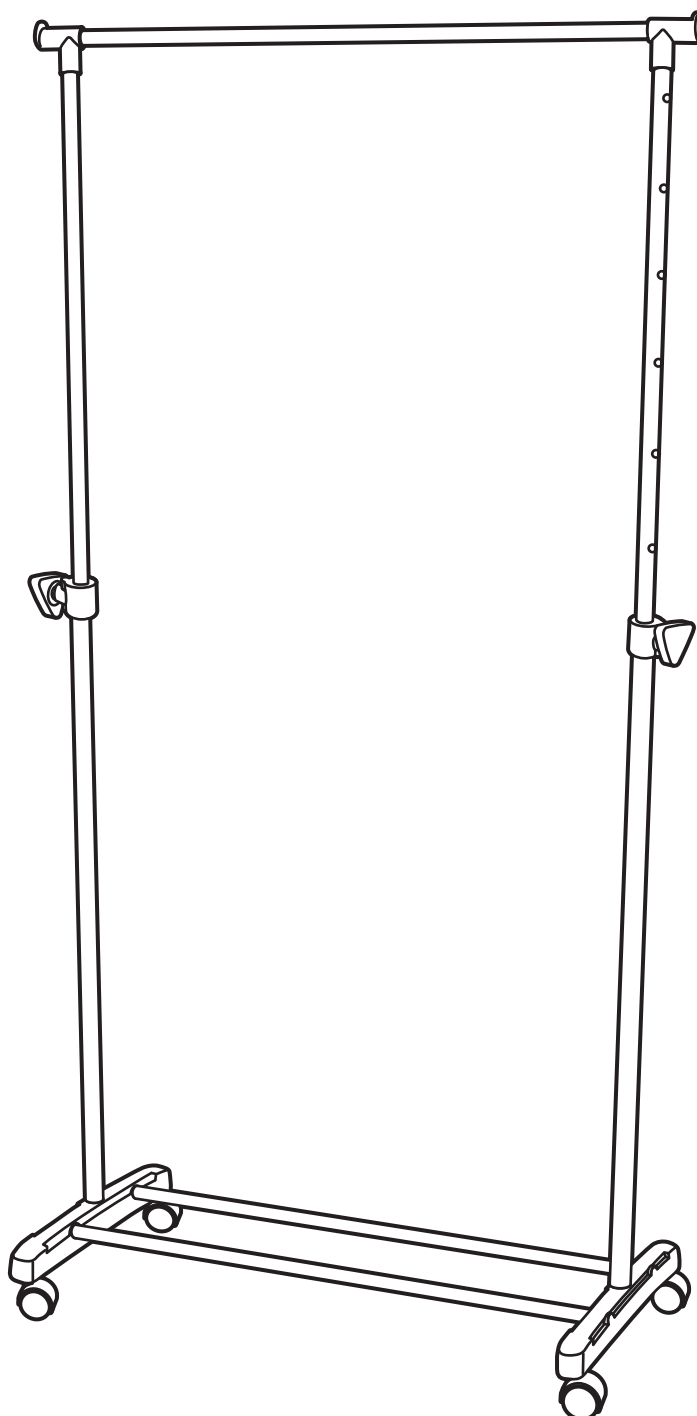

Dimensions

Width - 84.5cm

Depth - 42.5cm

Height - 99.5/167cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and care advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble the unit as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- If using power tools, please follow the safety instructions supplied with the tools.



- We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

 
Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as a reference throughout the assembly. Keep this page with these instructions for future reference.

Components –Parts

Please check you have all the panels listed below




1 Rail x 1 (84cm)



2 Bottom Tube x 2 (78cm)



 3 Lower Side Support x 2 (86cm)



4 Upper Side Support x 2 (78cm)



5 Foot x 2 (42cm)




 
6 Castor x 4

Components – Fittings


If you have damaged or missing components,
call the Customer Helpline: 08456 400800

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A Connector x 2		B Lock x 2		
---------------------------	---	----------------------	---	--

 Tools required



 Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


Fitting the Feet

NOTE: It would be useful to ask someone to help you at this stage.

 a: Insert Bottom Tubes **2** into Feet **5**.

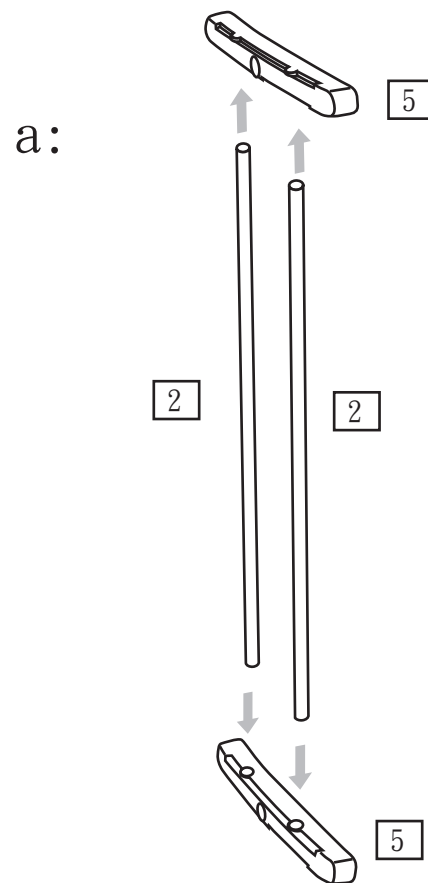

 b: Insert Lower Side Supports **3** into Feet **5**.

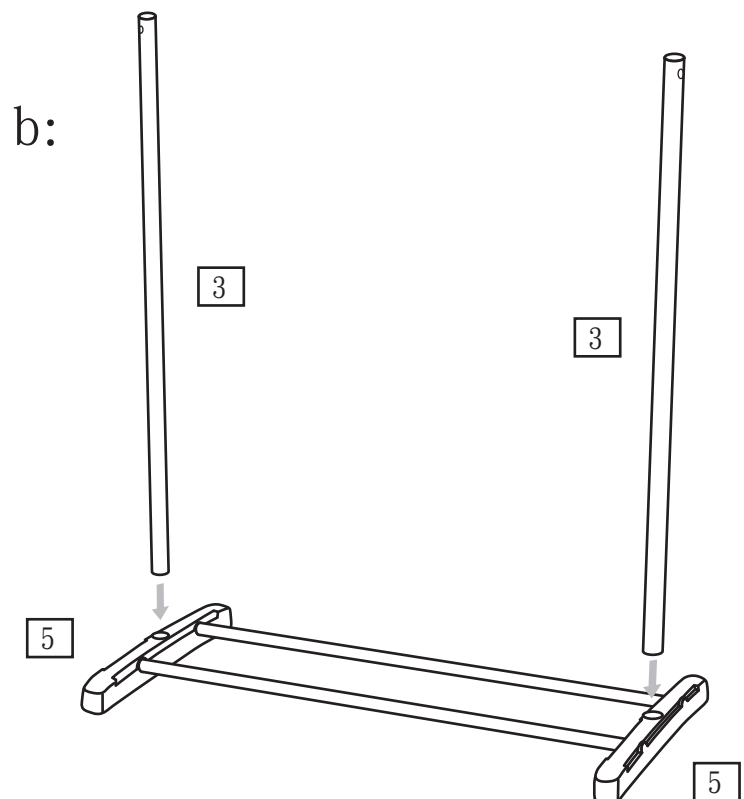

Assembly Instructions

Step 2

 
 
 
Fitting the Rail

NOTE: It would be useful to ask someone to help you at this stage.

a: Insert Rail **1** into Connectors **A**.

b: Insert Upper Side Supports **4** into Connectors **A**.

c: Insert Castors **6** into Feet **5**.

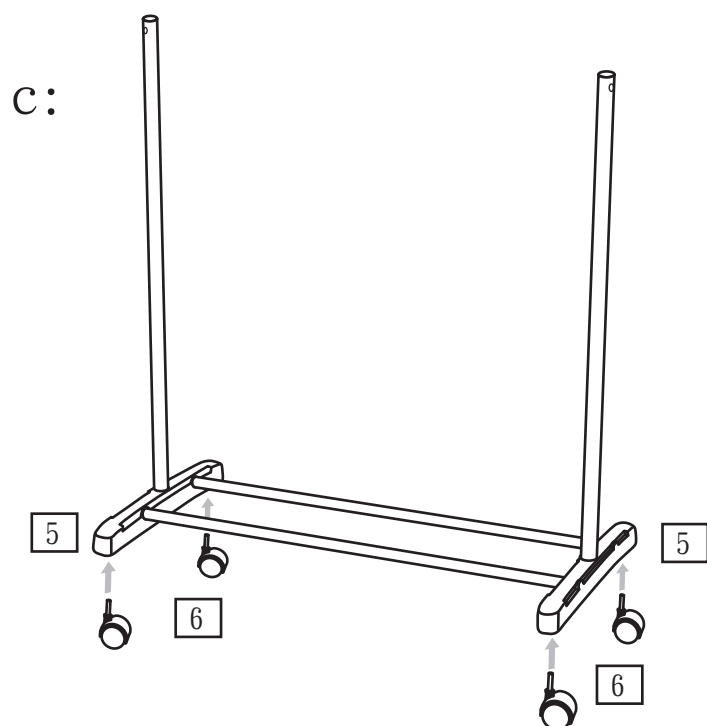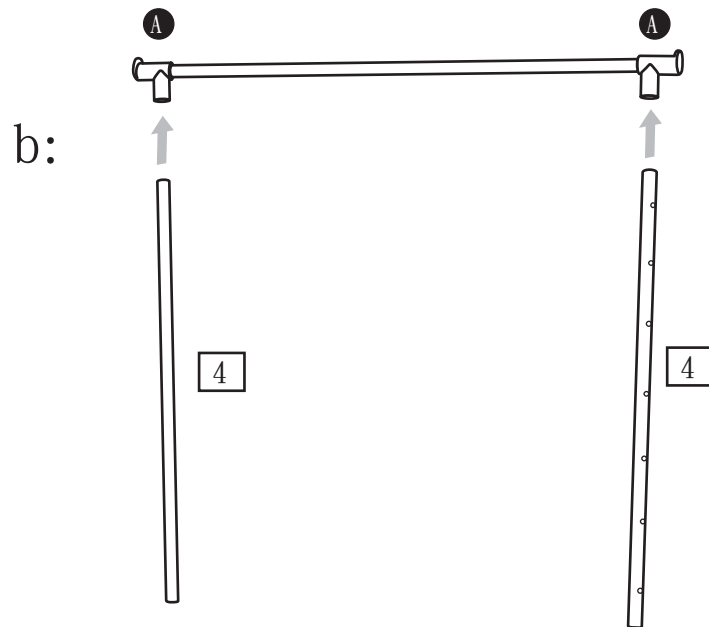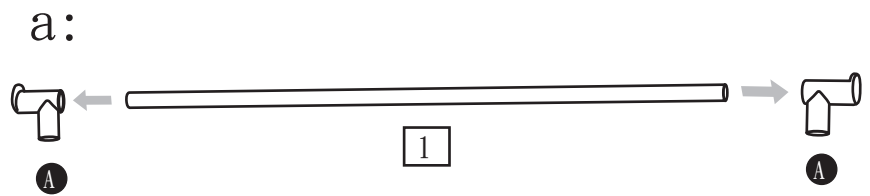

Assembly Instructions

Step 3

Finishing the Unit

NOTE: It would be useful to ask someone to help you at this stage.

a: Insert Locks **B** onto the Top of Lower Side Support **3**. Align the Screw on Lock **B** into the hole on Lower Side Support **3**.

Insert Upper Side Support **4** into the Locks **B**.

 
 
b: Set the height of the unit using the Upper Side Support **4**. Ensuring the Locks **B** are loosened, slide the tubes to the desired height and tighten the Locks to fix in position.

Adjustment Range: 99.5-167cm.

Note: Please hold Upper Side Support and pull downward. It will be fixed if locked or will be glided downward if unlocked.

c: With help, place the unit in the intended position.

The assembly is now complete.

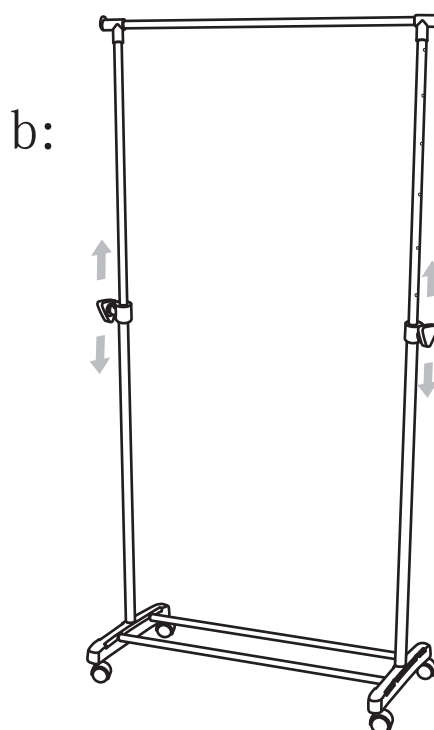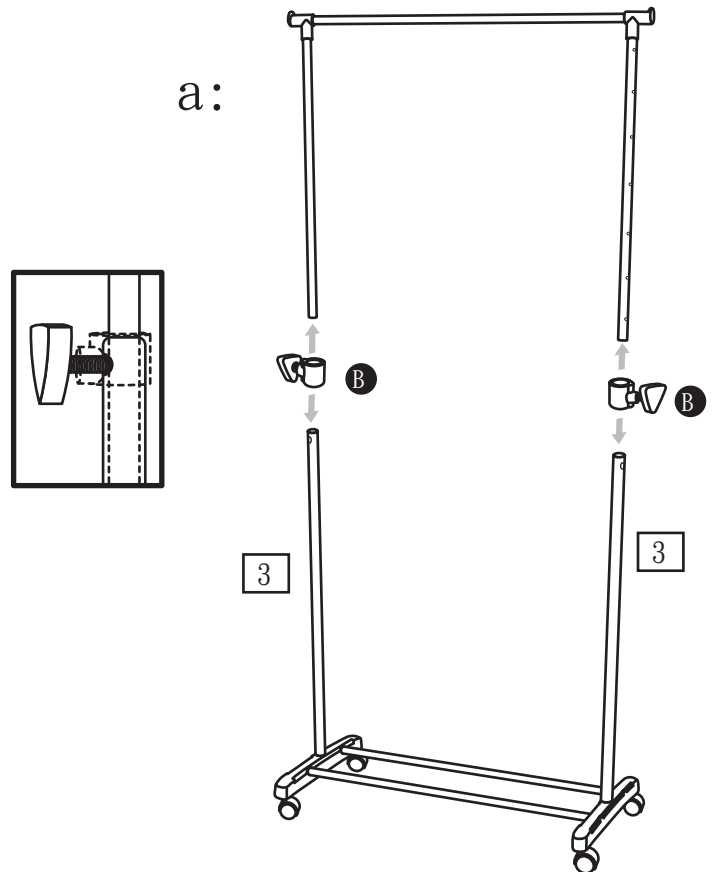


If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

Chrome Tidy Rail

Assembly Instructions - Please keep for future reference

 875/3184

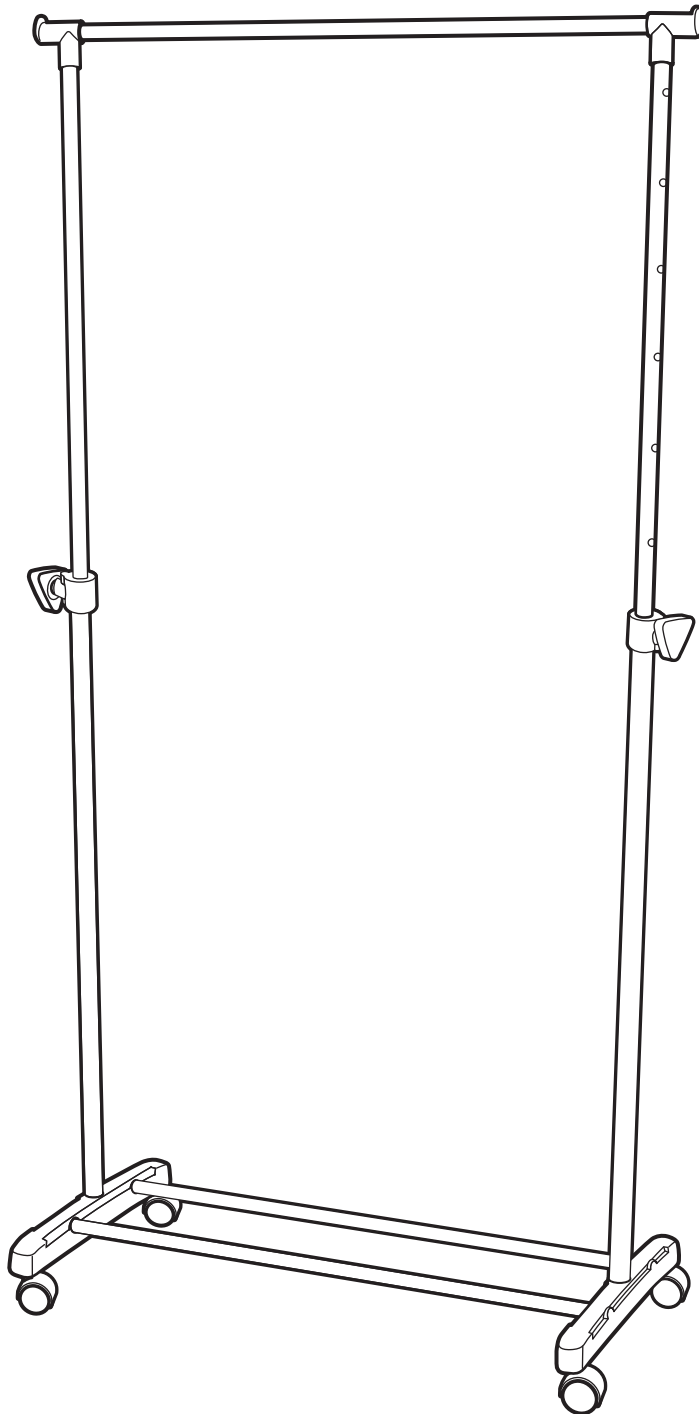

Dimensions

Width - 84.5cm

Depth - 42.5cm

Height - 99.5/167cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts are a choking hazard.

- Make sure you have enough space to layout the parts before starting.

- Assemble on a pad to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.

- If using power tools, please follow the safety instructions supplied with the tools.

- Assemble the unit as close to its final position (in the same room) as possible.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

 
- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the panels listed below

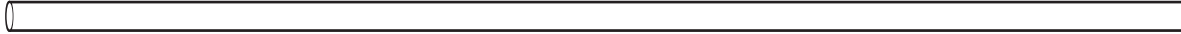


1 Rail x 1 (84cm)



2 Bottom tube x 2 (78cm)



 3 Lower side support x 2 (86cm)

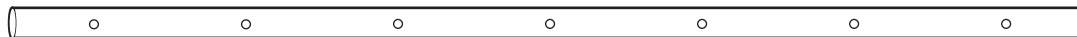





4 Upper side support x 2 (78cm)

Components – Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


<p>A</p>  <p>Connector x 2</p>	<p>B</p>  <p>Lock x 2</p>	<p>C</p>  <p>Leg section x 2 (42cm)</p>
<p>D</p>  <p>Castor x 4</p>		

Assembly Instructions


Step 1

Note: It would be useful to ask someone to help you at this stage.

 a: Insert Bottom tubes **2** into Leg section **C**.

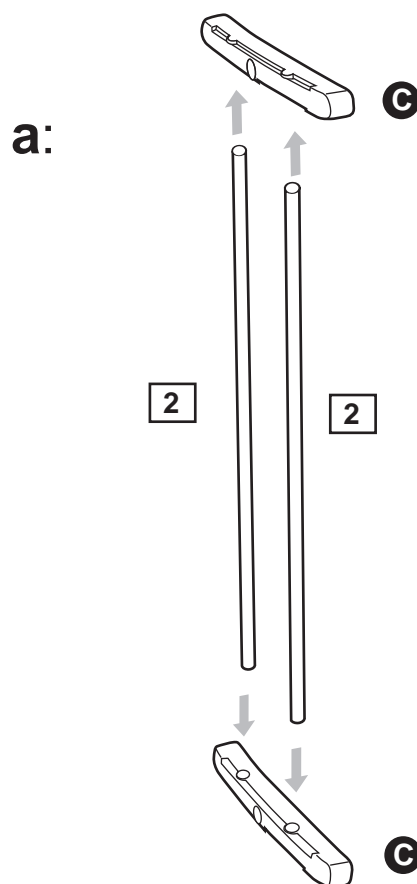

 b: Insert Lower side supports **3** into Leg section **C**.

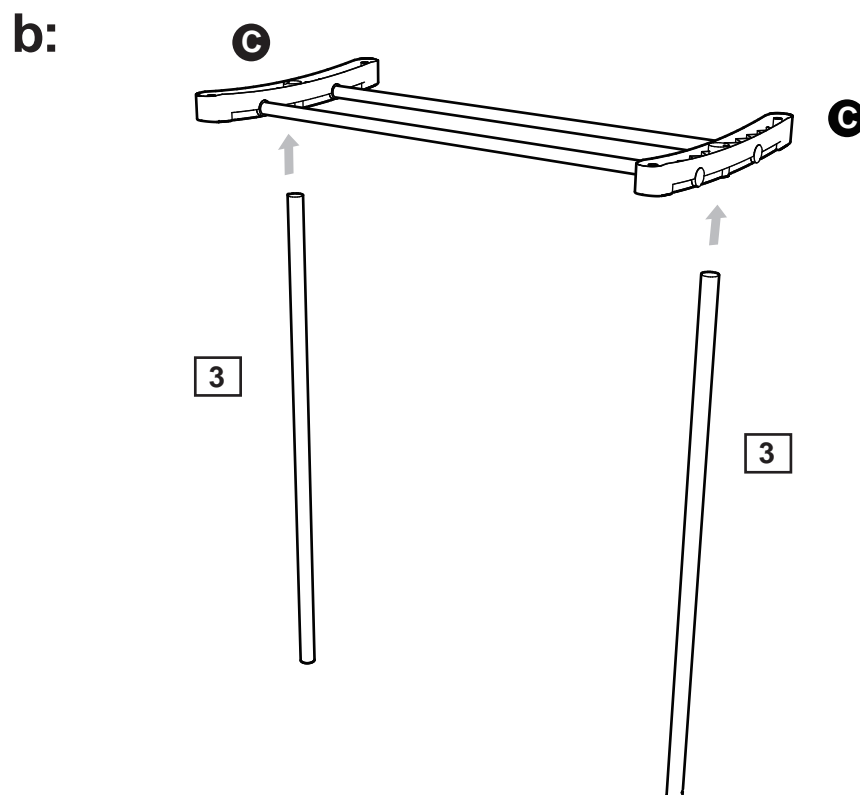


Assembly Instructions


Step 2

Note: It would be useful to ask someone to help you at this stage.

 
a: Insert Rail **1** into Connectors **A**.

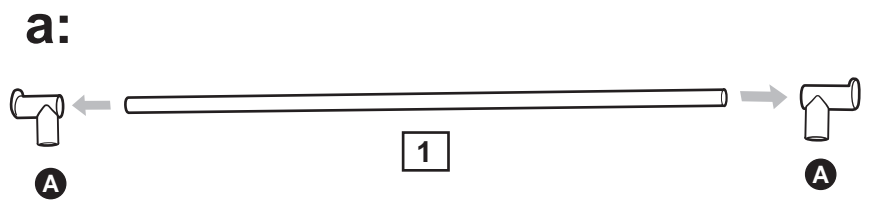

 b: Insert Upper side support **4** into Connectors **A**.

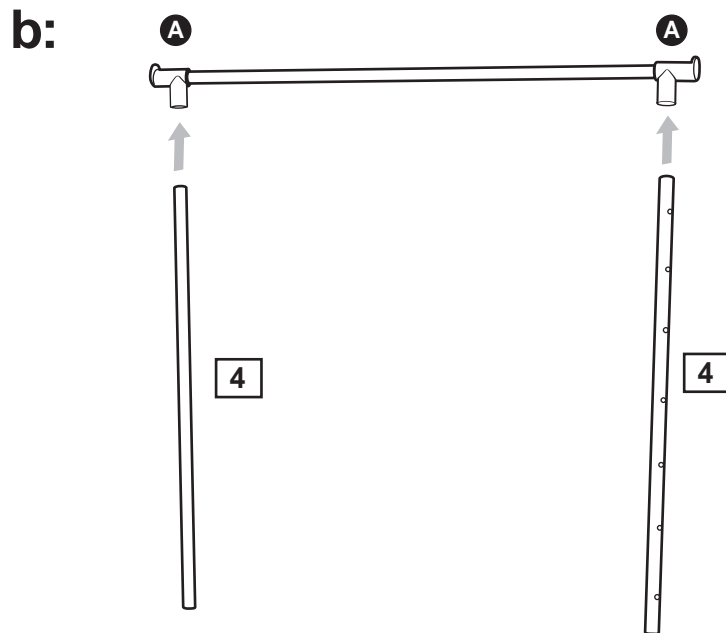

 c: Insert Castors **D** into Leg section **C**.

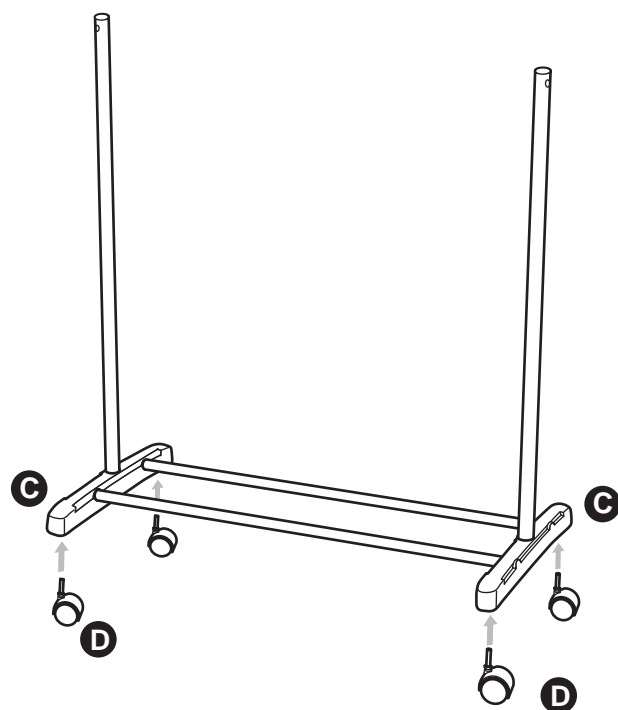


Assembly Instructions

Step 3

Note: It would be useful to ask someone to help you at this stage.

a: Insert Locks **B** into the top of Lower side support **3**.
Insert Upper side support **4** into the Locks **B**.
Don't tighten the Locks **B** until the next step of height setting.

 a:

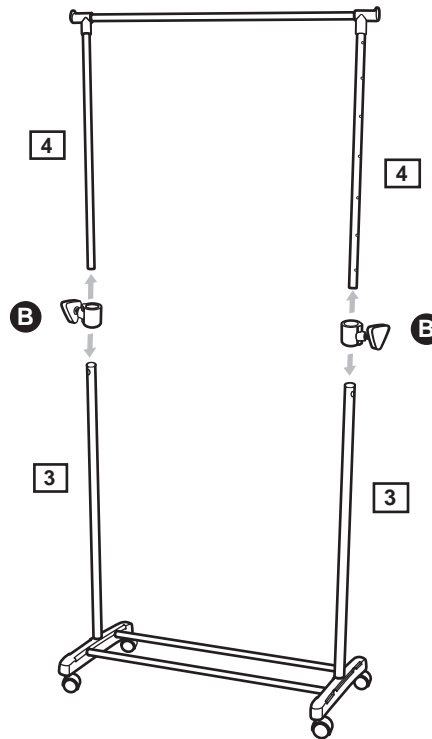


b: Set the height of the unit.

Ensuring the Locks **B** are loosened, slide the Upper side support **4** to the desired height and tighten the Locks **B** to affix in position as shown in fig.1.

Adjustment Range:
99.5-167cm.

Note: Please hold Upper side support **4** and pull downward. It will be fixed if locked or will glide downward if unlocked.

 b:

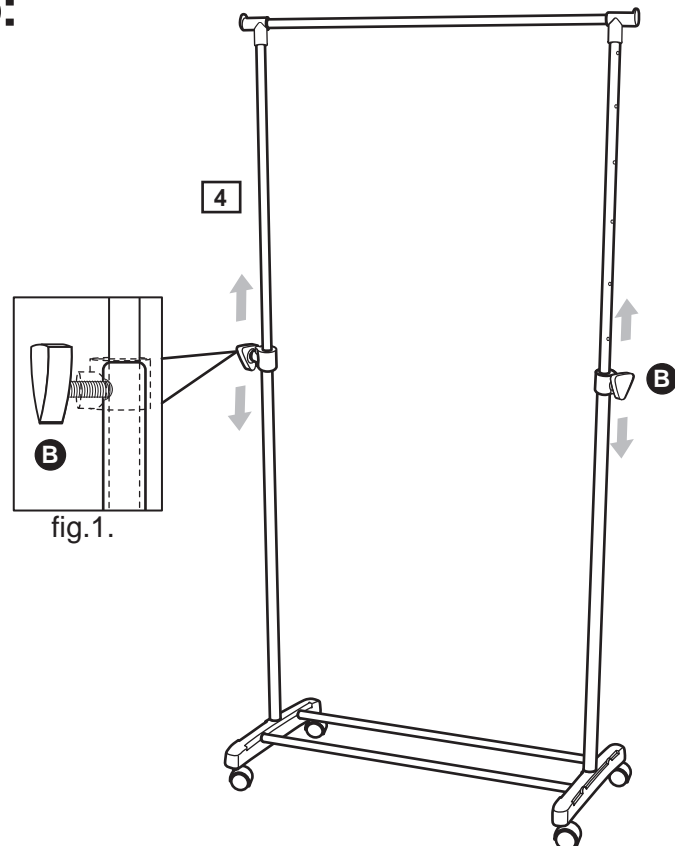

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**