
Twister CD/DVD tower

Assembly Instructions – Please keep for future reference

901 / 0864 D

901 / 0857 D

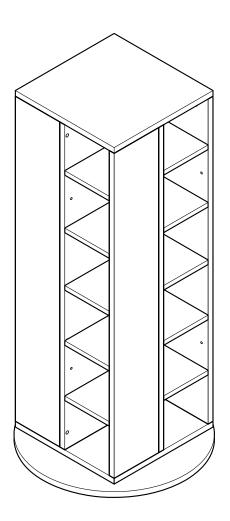

Dimensions

Width - 43 cm

Depth - 43 cm

Height - 92 cm



Warning: 2 persons assemble recommended.

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2 & 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



 We do not recommend the use of power drill/drivers for inserting screws, as

this could damage the unit. Only use hand screwdrivers.


• Dispose of all packaging carefully and responsibly.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Components - Parts

Please check you have all the parts listed below

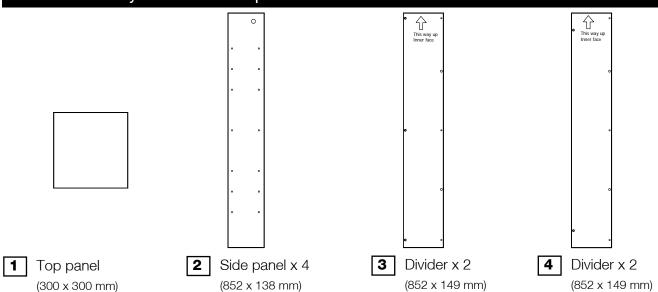

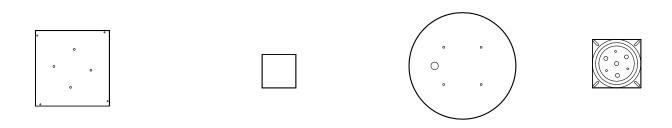

5 Bottom panel (300 x 300 mm) (430 x 430 mm) **8** Turnplate

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A	B (((()	G S
Wood dowel x 24	Metal dowel x 4	Cam lock x 4
Bolt x 8	Screw x 26	Shelf pin x 80
G		
Cover pad x 26		


Tools required

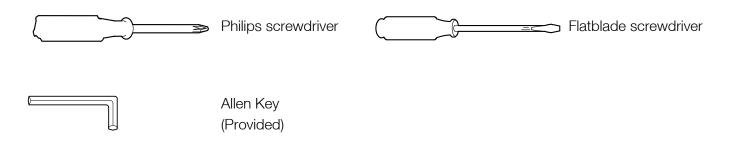

Step 1

Lay Dividers 3 and 4 on the ground with the Way up marks face upward as shown.

Insert Wood dowels **(A)** into the indicated holes in Dividers **(3)** and **(4)**.

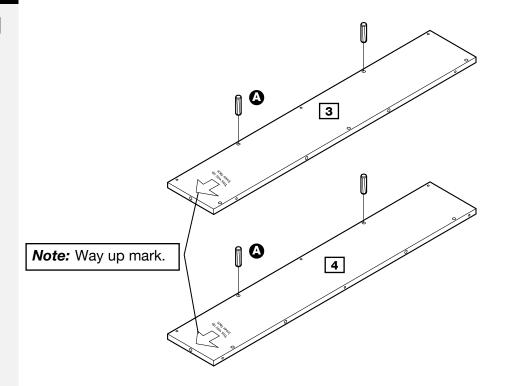

Step 2


Push Divider 3 onto the untapped edge of Side panel 2, make sure the wood dowels enter the corresponding holes.

Note: make sure the big hole in Side panel and the Way up

mark face inwards as shown.

Secure with 3 Screws **(a)** .

Repeat to assemble the other Divider 3 and other 2 Dividers 4 onto Side panels 2.

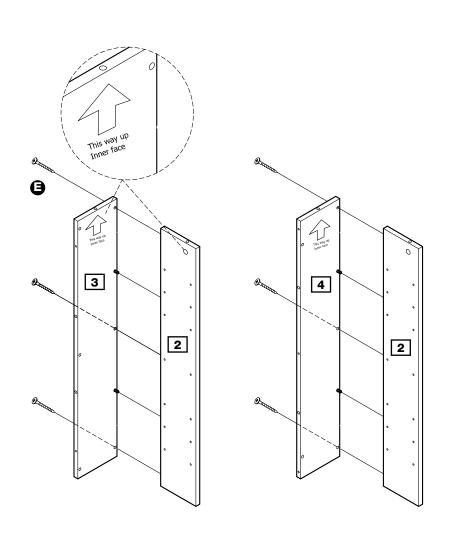

Step 3

Insert Wood dowels **A** into the indicated holes in Divider **4**.

Push one section of panels 2 and 3 from Step 2 to the other section of panels 2 and 4, make sure the wood dowels enter the corresponding holes.

Secure with 3 Screws (a) .


Repeat to assemble the other half section.

Step 4

Insert Wood dowels **4** into the indicated holes in Dividers **4** and **3**.

Push one half section from Step 2 to the other section, make sure the wood dowels enter the corresponding holes.

Secure with 4 Screws (a) .

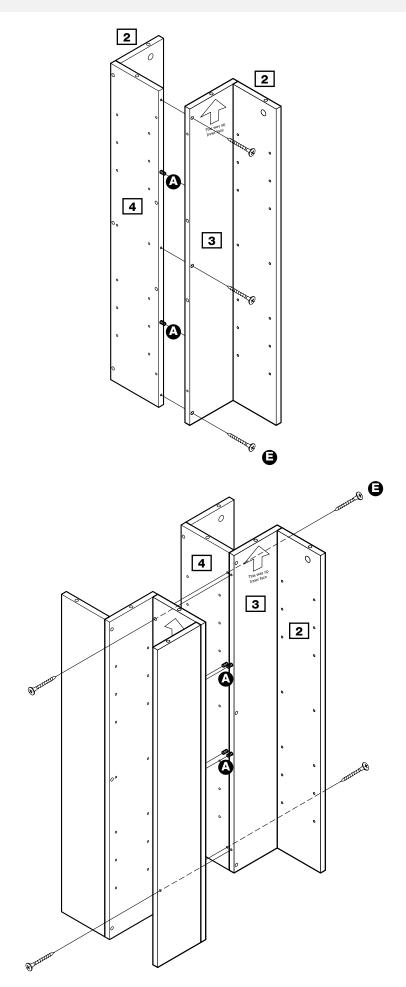

Step 5

Insert Wood dowels **A** into the centre holes of Top panel **1**.

Screw Metal dowels **(B)** into the outer holes of Top panel **(1)**.

Step 6

Firmly Push Top panel 1 onto end of Panel 2,
3 and 4 so that the Wood dowel and Metal dowels enter the corresponding holes.


Insert 4 Cam locks **©** into the big holes in Side panels **2**.



Note: Longer leg of the cross on the


Cam lock must face towards end of panel (as shown).

Then, using a Flatblade screwdriver, screw the Cam locks clockwise until they are 'hand tight'.

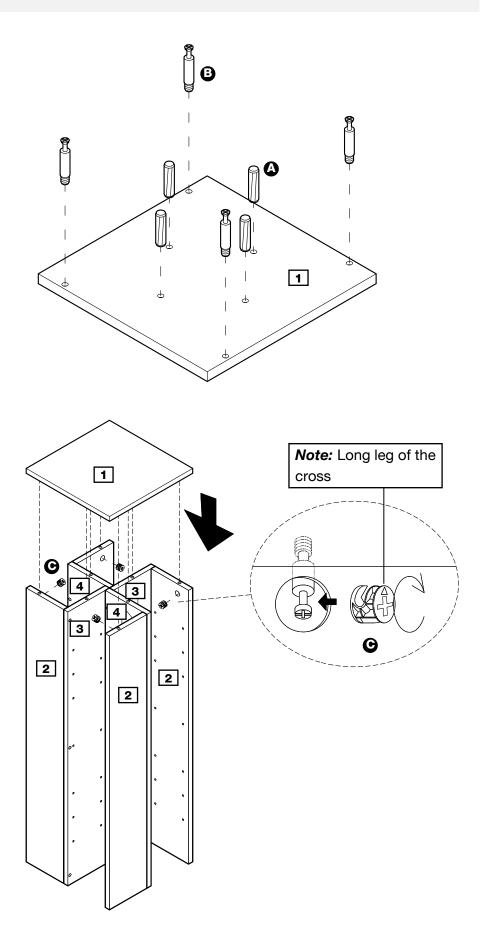

Step 7

Insert Wood dowels **(A)** into the centre holes of Bottom panel **(5)**.

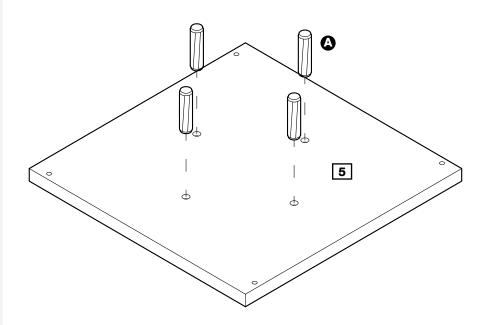


Step 8

lay the box unit from Step 6 on its side.

Firmly Push Bottom
panel 5 onto end of
Panel 2, 3 and 4
so that the Wood dowel
enter the corresponding
holes.


Secure with 4 Screws (a) .

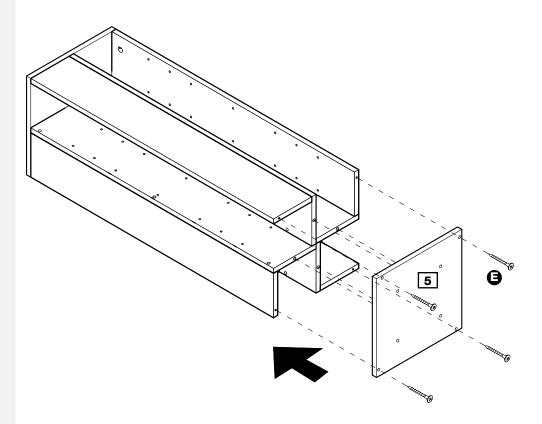

Step 9

Lay the Base panel 7 on the ground.

Secure Turnplate 8 onto the threaded holes in Base panel with Bolts **①**.

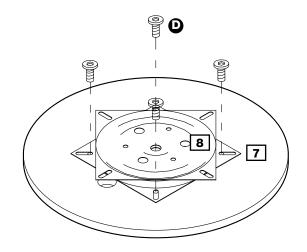

Step 10

Stand item on the Top panel. Locate the base part to the Bottom panel 5, secure the Turnplate 8 onto the threaded holes in Bottom panel, using Bolts • by Allen key.




Note: 2 persons assembly

recommended. Revolve the Base panel to secure the bolt one by one through hole in Base Panel 7 as shown.



Note: Do not tighten the Bolts until all


Bolts have been properly located.

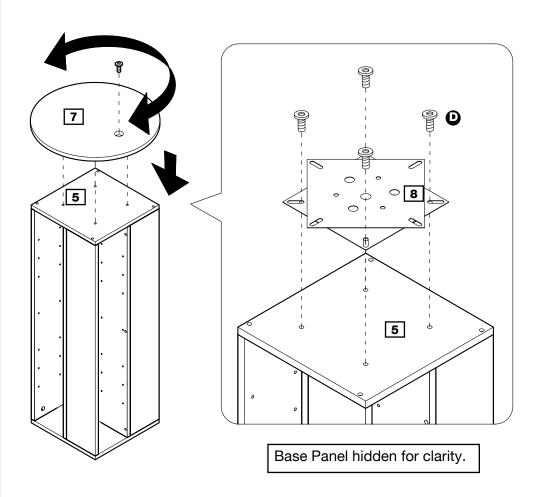

Step 11

Turn the unit upright.

Insert Shelf pins **(5)** into the side holes at desired height.

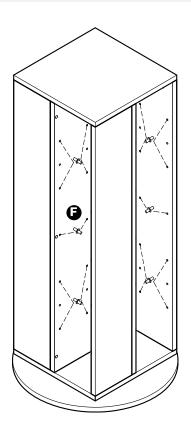


Step 12

Place Adjustable shelves

6 onto Shelf pins 6.

Cover all visual screw holes with Cover pads **©** .

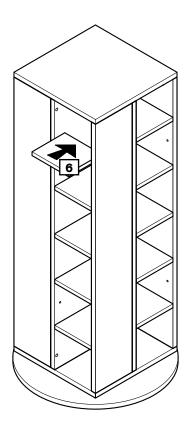

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Help Line: 08456 400800** Home Retail Group plc. Avebury, 489-499 Avebury Boulevard. Milton Keynes. MK9 2NW