

CASIO®


W-214HC-7AEF

Specifications

- ⇒ 50M WR
- ⇒ Daily Alarm
- ⇒ Stopwatch
- ⇒ 50M WR
- ⇒ LED Light
- ⇒ 7-Year Battery



Model variations may differ in appearance from the example above.

Stop Watch	1/100-sec accuracy	Press button B until you reach ST mode. Start and stop stopwatch using button C , reset stopwatch using button A .  A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 59 minutes 59.99 seconds. For longer times, reset and start again. (a) Net time measurement C → C (Time loss) → C → C → A Start Stop Re-start Stop Reset
Alarm	Allows you to specify the hour, minutes, day and month of the alarm.	In Alarm Mode, Press A to set hours and minutes. Press C to advance the alarm setting by each hour. Press A to set minute digits, each Press of C advances the alarm setting by 1 minute. Press A again to exit setting screen once hour and minute digits have been set. *If button B is pressed, the watch reverts to the regular timekeeping mode. (Quick digit advance) when button C is pressed for more than 2 seconds, the digit advances quickly. When released, digit advance will stop.
Water Resistant	Suitable for bathing, swimming, and showering. not for diving.	Not suitable for swimming, snorkelling or diving. *Do not fully submerge for long periods of time.
LED Light	In any mode Press L to illuminate display	
7 Year Battery	Battery power lasts up to approximately seven-years without changing.	CASIO's advanced technology allows extended battery life for up to seven-years . All timekeeping modes and functions of the watch can be used continuously for up to seven-years without a battery change.