


COOKWORKS

COFFEE MAKER

INSTRUCTION MANUAL

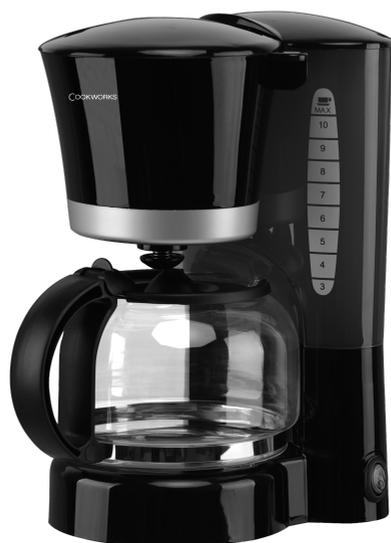

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or personal injury.

1. Children should be supervised to ensure that they do not play with the appliance.
2. Read all instructions. Save the instruction for future reference.
3. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the appliance.
4. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
5. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. This appliance is intended to be used in household and similar applications such as:
8. -staff kitchen areas in shops, offices and other working environments;
9. -by clients in hotels, motels and other residential type environments;


10. - bed and breakfast type environments;
11. - farm houses.
12. Heating element surface is subject to residual heat after use.
13. Use the coffee maker according to this instruction, any misuse may cause electric shock or other hazards.
14. Do not immerse appliance, cord or plug in water or other liquid.
15. Unplug from outlet when not in use and before cleaning.
16. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or personal injury.
18. Do not let cord hang over edge of table or counter, or touch hot surface.
19. To disconnect, remove plug from wall outlet. Always hold the plug, do not pull the cord.
20. Do not use appliance for other than intended use and place it in a dry environment .
21. Do not leave the coffee maker unattended while it is operating, the appliance cannot be operated by children.
22. Be careful steam can burn.
23. Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance. Use carefully as the carafe is fragile.
24. Never use your coffee maker without water in it. Use cold water only.
25. Never leave the empty carafe on the keep warm plate otherwise the carafe is liable to crack.

26. Do not use the carafe to hold ice cubes. Do not put carbonated drinks in the carafe.
27. Do not use outdoors.

SAVE THESE INSTRUCTIONS

KNOW YOUR APPLIANCE

1. Water Tank Cover
2. Water tank
3. Body
4. On/Off Switch
5. Carafe
6. Filter Assembly

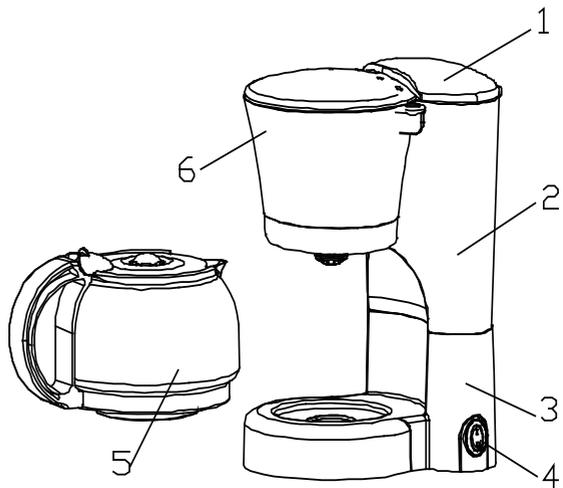

BEFORE FIRST USE

Check that the accessories are complete. Brew cold water up to MAX mark for one or two times. Pour water out and clean carafe and filter holder thoroughly.

USING THE APPLIANCE

1. Open the lid of coffee maker, fill with desired quantity of cold water into the tank. The water level should not exceed the MAX level indicator. The water tanks level indicates the number of cups of coffee.
2. Swing the filter holder out and place the filter into the filter holder correctly.
3. Add coffee grounds into filter. Usually a cup of coffee needs a spoon of coffee ground. You may adjust according to your taste. Swivel the filter holder back to compartment.
4. Place the carafe on keep warm plate horizontally.
5. Plug the power cord into the wall outlet, turn on the switch and the indicator will illuminates. The appliance will begin to work.
6. Do not open the lid when the coffee maker is operating. The hot water in the tank may splash and burn.
7. You can remove the carafe, pour and serve when brewing has finished (about one minute after the coffee stops dripping out.)
8. Once the brewing is finished, the coffee will be stored in the carafe on the keeping warm plate. The appliance will switch itself off automatically after 40 minutes. For an optimum coffee taste, serve it just after the brewing.
9. Always turn off the coffee maker and unplug the power cord from the electrical outlet when the coffee maker is not in use.

Note: the coffee you get will be less than the water you have put in, as some water is absorbed by coffee ground.

Note: you can take out the carafe, pour and serve at any time. The appliance will stop dripping automatically. However, the time should not exceed 30 seconds.

Note: pay attention when pouring out the coffee as the coffee temperature is high right after the brewing.

SPECIAL NOTE : For better energy saving and comply to the relevant regulation, the appliance will switch itself off automatically after 40 minutes

CLEANING

Unplug the appliance before cleaning. To protect against electric shock, do not immerse cord, plug or unit in water or other liquids.

1. Clean the filter holder and carafe after each use in warm water.
2. Wipe the exterior surface with a soft, damp cloth to remove stains.
3. Use a damp cloth to gently wipe the keep warm plate. Never use abrasive cleaner to clean it.

DO NOT IMMERSE IN WATER OR ANY LIQUID

Descaling

Descaling of your coffeemaker is recommended from time to time, this will help maintain peak efficiency of your coffee maker. If you only use your coffee maker once or twice a day, the following guidelines for descaling will apply.

Soft water area	Every 6 months
Medium hard water area	Every 2-3 months
Hard water area	Every 6-8 weeks

- Fill the water tank with **one part white vinegar and three parts cold water**.
- Switch the coffeemaker on. During cleaning, the unit may produce more steam than when brewing normally.
- Keep the coffee maker switched on until the water level is half the original level, then switch off the unit. When the liquid stops dripping into the carafe, remove the filter and carafe and allow the liquid to cool for 15 minutes.
- When the liquid has cooled, pour it back into the water tank. Replace the filter and return the carafe to the keep warm plate.
- Switch the coffee maker on and repeat the procedure, this time allowing all the solution to empty into the carafe. After dripping has stopped switch the coffeemaker off and discard the contents of the carafe.
- Allow the coffee maker to cool for ten minutes and replace the filter, then rinse the unit by brewing a full carafe of fresh cold water a few times.
- Wash the carafe and the filter in hot soapy water and rinse.
- Wipe the exterior with a damp cloth, then dry all the parts.

CONNECTION TO POWER


- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

IMPORTANT

The colours of the wires in the mains lead of this appliance may not

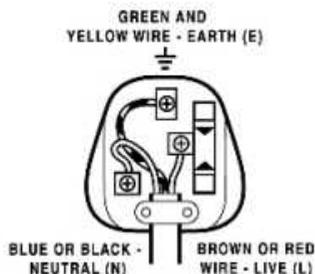

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



Caution

To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. (\perp).

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

DISPOSAL INFORMATION



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd
489 – 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW