

# COOKWORKS

WATER KETTLE

INSTRUCTION MANUAL



## Safety Warnings

1. Please read these instructions carefully before using the kettle for the first time.
2. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Children shall not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. The kettle can only be used with the stand provided.
5. If the kettle is overfilled, boiling water may be ejected.
6. This appliance is intended to be used in household and similar environments such as: staff kitchen areas in shops, offices and other working environments, farm houses: by clients in hotels, motels and other residential type environments bed and breakfast type environments.


7. Avoid spillage on the connector.
8. Heating element surface is subject to residual heat after use.
9. Use the kettle according to this instruction, any misuse may cause electric shock or other hazards.
10. Keep the appliance and its cord out of reach of children less than 8 years.
11. Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
12. The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the on/off switch.
13. After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 secs, the kettle can be switched on again.
14. If the kettle ever boils dry, allow 15 minutes to cool before refilling with cold water. The safety cutout will automatically reset during this time.
15. Place the kettle on a stable flat surface. DO NOT place it on inclined surface.

16. Insure that the kettle is switched off before removing it from its stand.
17. Never immerse the kettle or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.
18. Prevent children from pulling on the mains cord or knocking the kettle over.
19. Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.
20. The kettle may be cleaned with a damp cloth.
21. Pour away the first lot of water boiled in this kettle.
22. Only use the cord supplied with this kettle. If a replacement is required, only approved components may be used.
23. The outside surface of the kettle may get hot during use, please take care when using the kettle.
24. Never fill in water more than the maximum acceptable water level.
25. Do not remove lid while the water is boiling.
26. **WARNING!** This kettle is designed for boiling water only. **NEVER USE IT FOR HEATING UP OTHER LIQUIDS SUCH AS MILK.** It will stop kettle from switching off automatically and result to overheating and product damage.

# Know your appliance

Capacity: 1.7L

Power: 220-240V 50Hz 2550-3000W

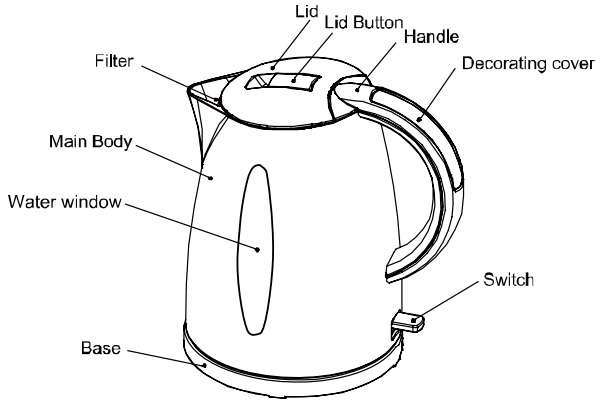

## Before using for the first time

- Fill kettle up to the MAX WATER MARK and bring to a boil. It is recommended that you fill, boil, and empty the kettle at least 3 times to clear the kettle of any tiny particles, metal or plastic taste and to give the rubber seals a chance to settle.

## Using the kettle

### Filling

- Take up the kettle from the base before filling.
- Fill the kettle through either the spout or the lid.
- Fill to the desired level. **WARNING: The water level must be between 'MAX' and 'MIN'**
- Close the lid by pressing it down until it clicks into place securely.
- Be economical: do not boil more water than you need.

### Switching on

- Check the lid is closed.
- Plug the power supply cord into the mains.
- To switch to ON position. The power indicator lights up.

## Switching off

- When the water has boiled the kettle will automatically switch itself off.
- You can stop the boiling process at any time by clicking the ON/OFF switch to off position manually. The power indicator will go out.

**WARNING: Do not open the lid when steam is coming out of the spout. Kettle is only to be used with the stand provided.**

- If you switch on with too little water, your kettle will cut out automatically by the boil-dry protection. Switch off, remove from the powerbase and let it cool down at least 15 minutes before re-filling. When it has cooled down, the switch will reset itself.

## Care and Cleaning

- First read the instructions in the section titled “SAFETY WARNINGS”.
- Before cleaning, unplug your kettle and let it cool down.
- Wipe with a damp cloth, then dry. Avoid using abrasive cleaning agents.
- Do not immerse the kettle, base, cord or plug in water at any time.
- Kettle, filter, and base are NOT dishwasher-safe.
- Always unplug your kettle when not in use.

## Descaling

The major cause of damage to kettles is **limescale** and your kettle will require regular maintenance to ensure that it continues to work properly. Limescale deposits build up over time, blocking important parts of the kettle and stopping it from working properly.

### Remember:

- Descale every few months
- Don't wait for limescale to build up before you descale
- You can buy descaler from us at [www.argosspares.co.uk](http://www.argosspares.co.uk) or in many high street shops
- Clean the limescale filter if your kettle has one

### Types of problems caused by limescale build-up:

- Colour – Limescale will discolour your kettle.
- Performance – your kettle will take longer to boil (wasting electricity) and eventually will switch off before it has boiled.
- Taste – limescale can give the water a chalky taste and limescale flakes will give a gritty texture.

### Other care tips:

- To clean the outside of your kettle use a soft, wet cloth.
- The first time you use your kettle the water may taste of plastic. Always boil your kettle a couple of times before you use it to make drinks. If the taste persists add 2 teaspoons of bicarbonate of soda to the full kettle, boil and discard the water.
- If you find drops of water under your kettle, don't worry - it is just condensation.


- Most kettles will cut-out if they boil dry. If this happens, consult your instruction manual.

## Connection to Power

- Before connecting, check that the voltage indicated on the appliance corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- **WARNING: This appliance must be earthed.** This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

**For your own safety read the following instructions carefully before attempting to connect this unit to the mains.**

You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

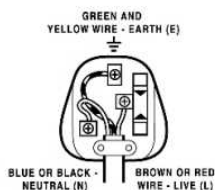

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

GREEN + YELLOW = EARTH



## IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



**Caution**  
**To prevent electric shock disconnect from the  
mains before removing the cover**

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. ( $\perp$ ).

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

## Disposal Information



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# Guarantee

This product is guaranteed against manufacturing defects for a period of

1 year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd  
489 – 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW