

COOKWORKS

COFFEE AND HERB GRINDER

INSTRUCTION MANUAL




Safety Warnings

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. Children should be supervised to ensure that they do not play with the appliance.
3. This appliance is intended to be used in household and similar environments such as: staff kitchen areas in shops, offices and other working environments, farm houses: by clients in hotels, motels and other residential type environments bed and breakfast type environments.
4. Please read these instructions carefully before using the grinder for the first time. Save this instruction for future reference.
5. Before you connect the unit to the mains supply, make sure that the voltage indicated on the rating plate, located on the side / bottom of the unit matches the mains voltage in your home. If it does not, contact your dealer and do not use the unit.
6. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
7. Clean the container and lid with a brush or dry cloth. The lid may also be washed in cold or tepid water.
8. Place the grinder on a stable flat surface.
9. Never immerse the grinder or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this grinder.
10. Before cleaning the grinder disconnect from the power supply.
11. Close supervision is necessary when any appliance is used by or near children.
12. Avoid contacting moving parts. Sharp blade inside.

13. The use of the attachments not recommended may cause fire, electrical shock, or risk of injury.
14. Do not use outdoor.
15. CAUTION : Do not immerse in water.
16. Do not let cord hand over edge of table or counter, or touch hot surfaces.
17. Do not pull on the power cord, but rather on the plug to remove the plug from the mains.
18. Do not pull the power cord over heated hotplates or open flames.
19. Check hopper for presence of foreign objects before using.
20. The grinder may be cleaned with a damp cloth.
21. Use this appliance to grind coffee beans only.
22. Do not run the grinder continuously for longer than 35 seconds. Turn it off and let it cool down at least 5 minutes, otherwise the motor may become damaged.

Know you appliance

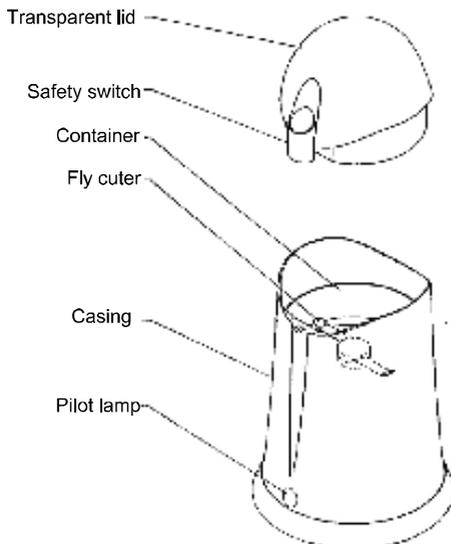

Operation Guide

1. Plug the power cord into a suitable socket.
2. Remove the lid from the base.
3. Fill bowl with coffee bean (max. 36g). Do not overfill.
4. Replace the lid to the base.
5. Press and hold on/off switch to begin grinding.
6. Grind until beans are ground to desired consistency. Release the switch to stop grinding.
7. Remove the plug from the mains.
8. Pour ground coffee into the container for making the coffee in future.

**IMPORTANT NOTE: SHARP BLADE INSIDE.
Do not open the lid when grinder is operating.**

Grinding Suggestions

To obtain ground coffee, the following quantities and times apply:


Weight of coffee	Suggestion time for grinding
12g	20 sec
24g	25 sec
36g	30 sec

Cleaning

- Remove the plug from the mains before cleaning.
- Wash the lid in warm water.
- Don't touch the sharp blades.
- Wipe inside of the bowl with a damp cloth, then dry.
- Never immerse the grinder base in water or use abrasive.
- Dry completely before storage / next usage.
- Parts are not suitable to be washed in dishwasher.

CONNECTION TO POWER

- Before connecting, check that the voltage indicated on the appliance corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.
- For your own safety read the following instructions carefully before attempting to connect this unit to the mains.
- You should only plug the appliance into a 230V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

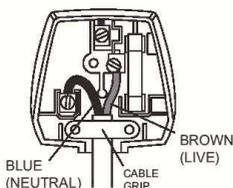

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

Caution

To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- No connection is to be made to the earth terminal of the plug.

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 3A fuse conforming to BS1362 and be ASTA approved. If in doubt contact a qualified electrician

Disposal Information



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Guarantee

This product is guaranteed against manufacturing defects for a period of

1 year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd
489 – 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW