

OZING

IDENTITY FOLDING INLINE SCOOTER


5+



ASSEMBLY INSTRUCTIONS




1

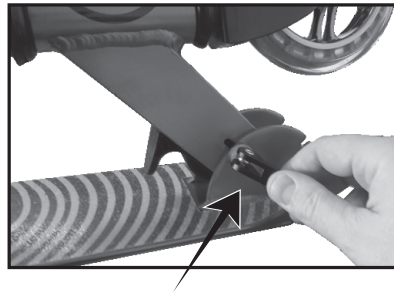


2

Pull open the deck clamp.

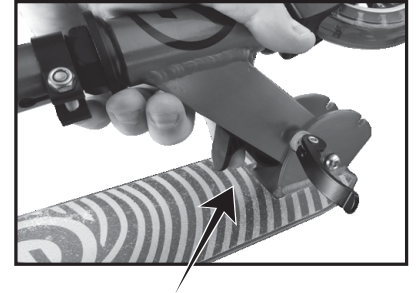


3

Pull up the black lever.

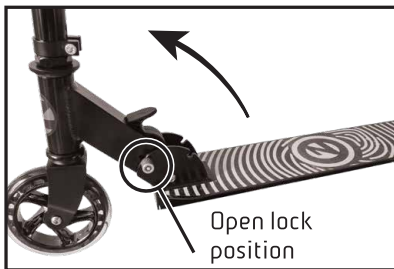

4

Swing open the deck until it locks into place and then close the deck clamp.

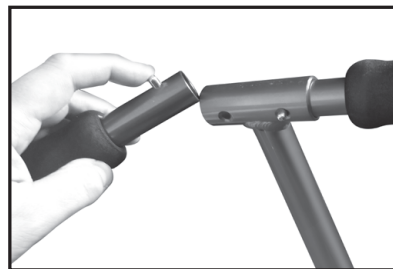

5

Insert handlebars into the T-bar and ensure the spring button pops out to secure in place.



6

Pull open the handlebar clamp. Pull up the handlebars to the desired height. Push in the spring button to change between heights.



7

Push the handlebar clamp closed to lock the handlebars in place.



You are ready to go!
To fold up the scooter, reverse the process.

*CAUTION: Check all clamping devices for tightness and foot brake prior to riding.

- A: Regularly tighten clamp here with hex key.
- B: Regularly tighten back wheel with 2 hex keys.
- C: Regularly tighten deck clamp by hand.
- D: Regularly tighten front wheel with 2 hex keys.
(Two hex keys are included.)

TO USE

- 1 Grip the handlebars with your hands, place one foot on the board and the other foot on the ground.
- 2 Pay attention to your surroundings and make sure that your riding area is clear.
- 3 Kick backwards with your foot beside the scooter to give you motion.
- 4 Repeat this kicking action in order to stay in motion.
- 5 To stop or slow down, place your kicking foot on the brake pedal above the rear wheel, or put your kicking foot on the ground.
- 6 Do not over-steer as this could cause you to fall off from the scooter.

MAINTENANCE

- 1 It is suggested to disassemble, clean, and add lubricant every 6 months paying extra attention to the moving parts, clearing them of grit and dirt so they move freely.
- 2 Please rotate the bearings and wheels to check that they are rolling smoothly.
- 3 Wipe with a damp cloth to remove dirt and dust. Do not use industrial cleaners as they may damage the surfaces. Do not use alcohol, alcohol-based or ammonia-based cleaners as they may damage or dissolve some components or soften the decals or the grip surface adhesive.
- 4 Do not leave this product in high temperature, intense sunlight or dusty areas.
- 5 Store in a dry place.
- 6 Always make sure all screws and nuts are securely tightened before every use.
- 7 The clamp fixtures may lose their effectiveness over time. If any of these components are no longer functioning how they should it is strongly recommended that you discontinue use of the product and seek replacement parts from the dealer or importer of this product.
- 8 The wheels and wheel bearings can become worn after regular use and can be replaced easily. Remove the axle bolts with two Allen keys and slide the wheel off its fork. Replace with the new item, screw in the bolt through the aligned fork and wheel then tighten with two Allen keys securely.

IMPORTANT SAFETY INFORMATION

- 1 The product is recommended for users aged 5+ years.
- 2 After checking that all parts are in good condition, remember to check that all the screws and wheels are tightly in place before using the scooter (Hex keys are supplied to tighten these if necessary).
- 3 Remember to wear a helmet, gloves, knee pads, wrist pads, elbow pads and protective clothing. Always wear shoes.
- 4 The maximum weight for use of this product is 50kg.
- 5 The scooter must only be used by one rider at a time.
- 6 Do not ride the scooter with one hand. Both hands should be on both handles at all times.
- 7 Do not use this product for jumping, stunts or tricks. The scooter is not designed for such use.
- 8 This product is not a road vehicle and should be used for leisure purposes only.
- 9 Do not use this product at night, in poor weather (rain, snow or poor visibility) or around heavily populated areas (pavements, streets, muddy areas, rocky surfaces and slippery surfaces). We recommend that you use this product in a park or other open space.
- 10 Do not take this product apart. Do not make any modifications to this product.
- 11 Obey all local traffic and scooter riding laws and regulations.
- 12 Check and secure all fasteners before every ride. Replace worn or broken part immediately.
- 13 Watch out for pedestrians.
- 14 Avoid excessive speed associated with downhill rides.
- 15 Brake will get hot from continuous use. Do not touch after braking.
- 16 Adult supervision is recommended. The supervisor should check all bolts, wheels and handlebars and tighten before and after every use. In addition the supervisor should ensure the rider is wearing ALL appropriate safety equipment.
- 17 Do not ride the scooter on steep slopes as it can cause brake failure and can damage the unit. Avoid excessive speeds associated with downhill rides.

WARNING

The hand grips contain a metal tube, a foam grip and a plastic end piece and are attached by an elasticated string. Be careful not to drop the scooter when not in use. If the scooter is dropped after use, over a period of time you will damage the plastic end piece, the foam and the tube.

If you damage this part of the scooter, it is strongly advised that you replace the damaged parts as soon as possible to avoid any accident caused by making contact with these parts.

It is strongly recommended that you wear protective equipment whilst using this product and the scooter should not be used on any other surface other than on flat even ground. It is not designed for gravel roads, on grass surfaces or any other uneven surfaces as this could cause not only damage to the scooter but also injure the rider.

Protective equipment should be worn. Not to be used in traffic. 50kg max. The scooter should be used with caution, since it requires great skill, so as to avoid falls or collisions causing injury to the user and the third parties. Do not take this scooter on the road or public highway.

CUSTOMER HELPLINE

Hy-Pro advise you to contact us directly and not to return this item to the place of purchase. Hy-Pro has taken great care to ensure this item has reached you in good condition, should you have a query please ring our helpline +44 (0) 800 731 0006 where your call will be dealt with promptly. Alternatively please call us on email: customerservices@zincinq.com



*ADULT SUPERVISION IS RECOMMENDED
*PLEASE RETAIN FOR FUTURE REFERENCE
*COLOUR & CONTENTS MAY VARY FROM THOSE SHOWN ON PACKAGING

HY-PRO®
LU5 5BN, UK

Hy-Pro House, Centrus Park
Arenson Way, Dunstable
Bedfordshire LU5 5BN
United Kingdom

Customer Care Line
Tel: +44 (0) 800 731 0006
www.hy-pro.co.uk
www.zincsports.com