 


# PHOENIX Gold

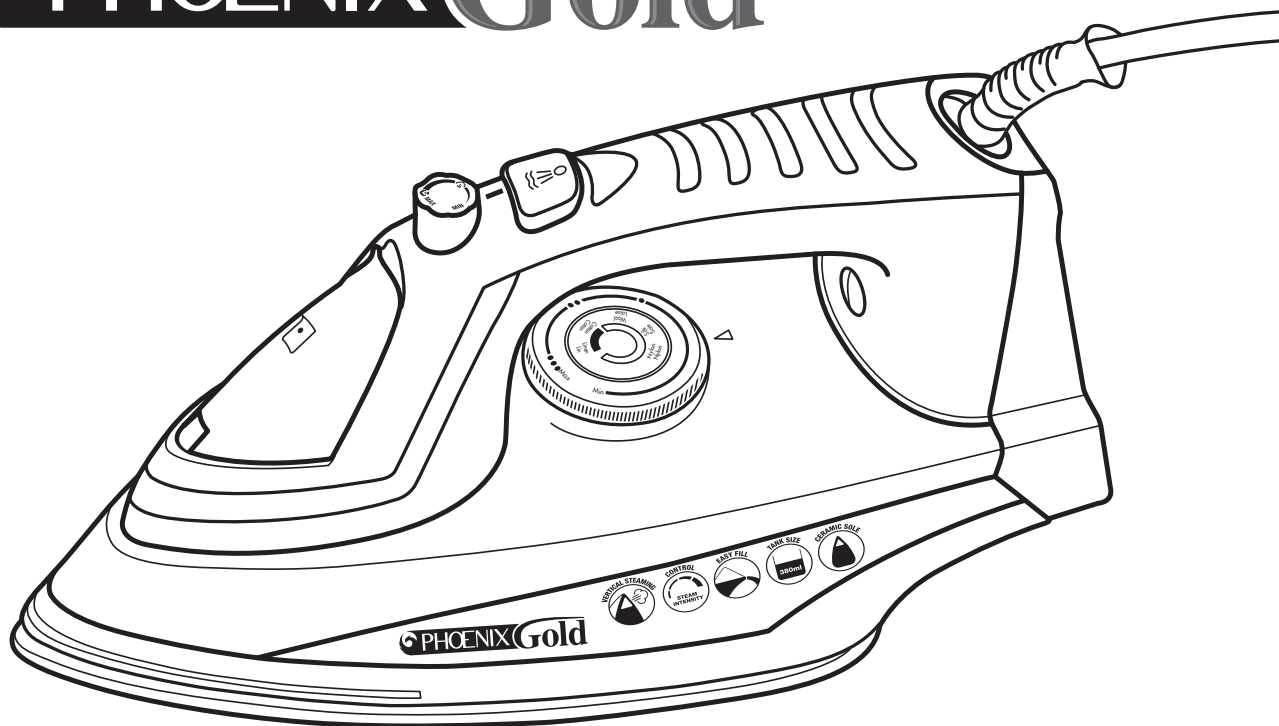

# PHOENIX Gold



Thank you for purchasing Phoenix Gold from JML. To get the best crease-free results from this iron, please read these instructions in full and keep them safe for future reference.

## Contents

<b>Safety Warnings &amp; Advice</b> _____	<b>2</b>	<b>Ironing Tips</b> _____	<b>7</b>
<b>Your Phoenix Gold</b> _____	<b>4</b>	<b>Cleaning &amp; Care</b> _____	<b>8</b>
<b>Using Phoenix Gold</b> _____	<b>5</b>	General care _____	8
Using Phoenix Gold for the first time _____	5	Cleaning the Filter _____	8
Basic instructions _____	5	<b>Guarantee</b> _____	<b>8</b>
To dry iron _____	5	<b>Technical Information</b> _____	<b>9</b>
For steam ironing _____	6	Technical specifications _____	9
Using bursts of steam _____	6	Fuse & mains plug replacement _____	9
Using vertically _____	6	Disposal and the environment _____	9
After ironing _____	7		

## Safety Warnings & Advice

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Only use Phoenix Gold for its intended purpose as described in this manual.

Keep Phoenix Gold and its cord out of the reach of children of less than 8 years of age at all times.

Burns can occur from touching hot parts, hot water or steam. The Ceramic Plate and will become extremely hot during use. Do not touch the Ceramic Plate during or soon after use.

Never point the steam jet towards people or animals. Take care to ensure it never comes into contact with your skin.

Intended for indoor household use only. Not intended for industrial or commercial use.

Do not use on a surface which could be damaged by heat or steam such as a worktop or polished wood.

Do not use attachments that are not specifically recommended to be used with this iron.

Never leave unattended when plugged in.

## Safety Warnings & Advice continued

Always unplug Phoenix Gold immediately after use.

Do not use any part that has become damaged.

Never operate Phoenix Gold if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged or dropped into water.

Do not attempt to repair Phoenix Gold, the power cord, or plug if they become damaged. Repairs must only be made by a qualified service engineer.

Always unplug Phoenix Gold before filling the water tank. Do not overfill with water.

Fill the Water Tank with distilled or boiled water to prevent calc/limescale build-up.

Never touch the Ceramic Plate when the iron is switched on or immediately after switching off.

The Power Cable should never touch the Ceramic Plate during or soon after use.

Ensure the Water Tank Cap is closed firmly before use.

 
Do not allow the Water Tank to run dry during use.

Only use on a stable, flat, ironing surface.

Allow the Ceramic Plate to cool completely before cleaning.

Check that the voltage on the rating plate of Phoenix Gold corresponds with your house electricity supply, which must be A.C. (alternating current).

# Your Phoenix Gold

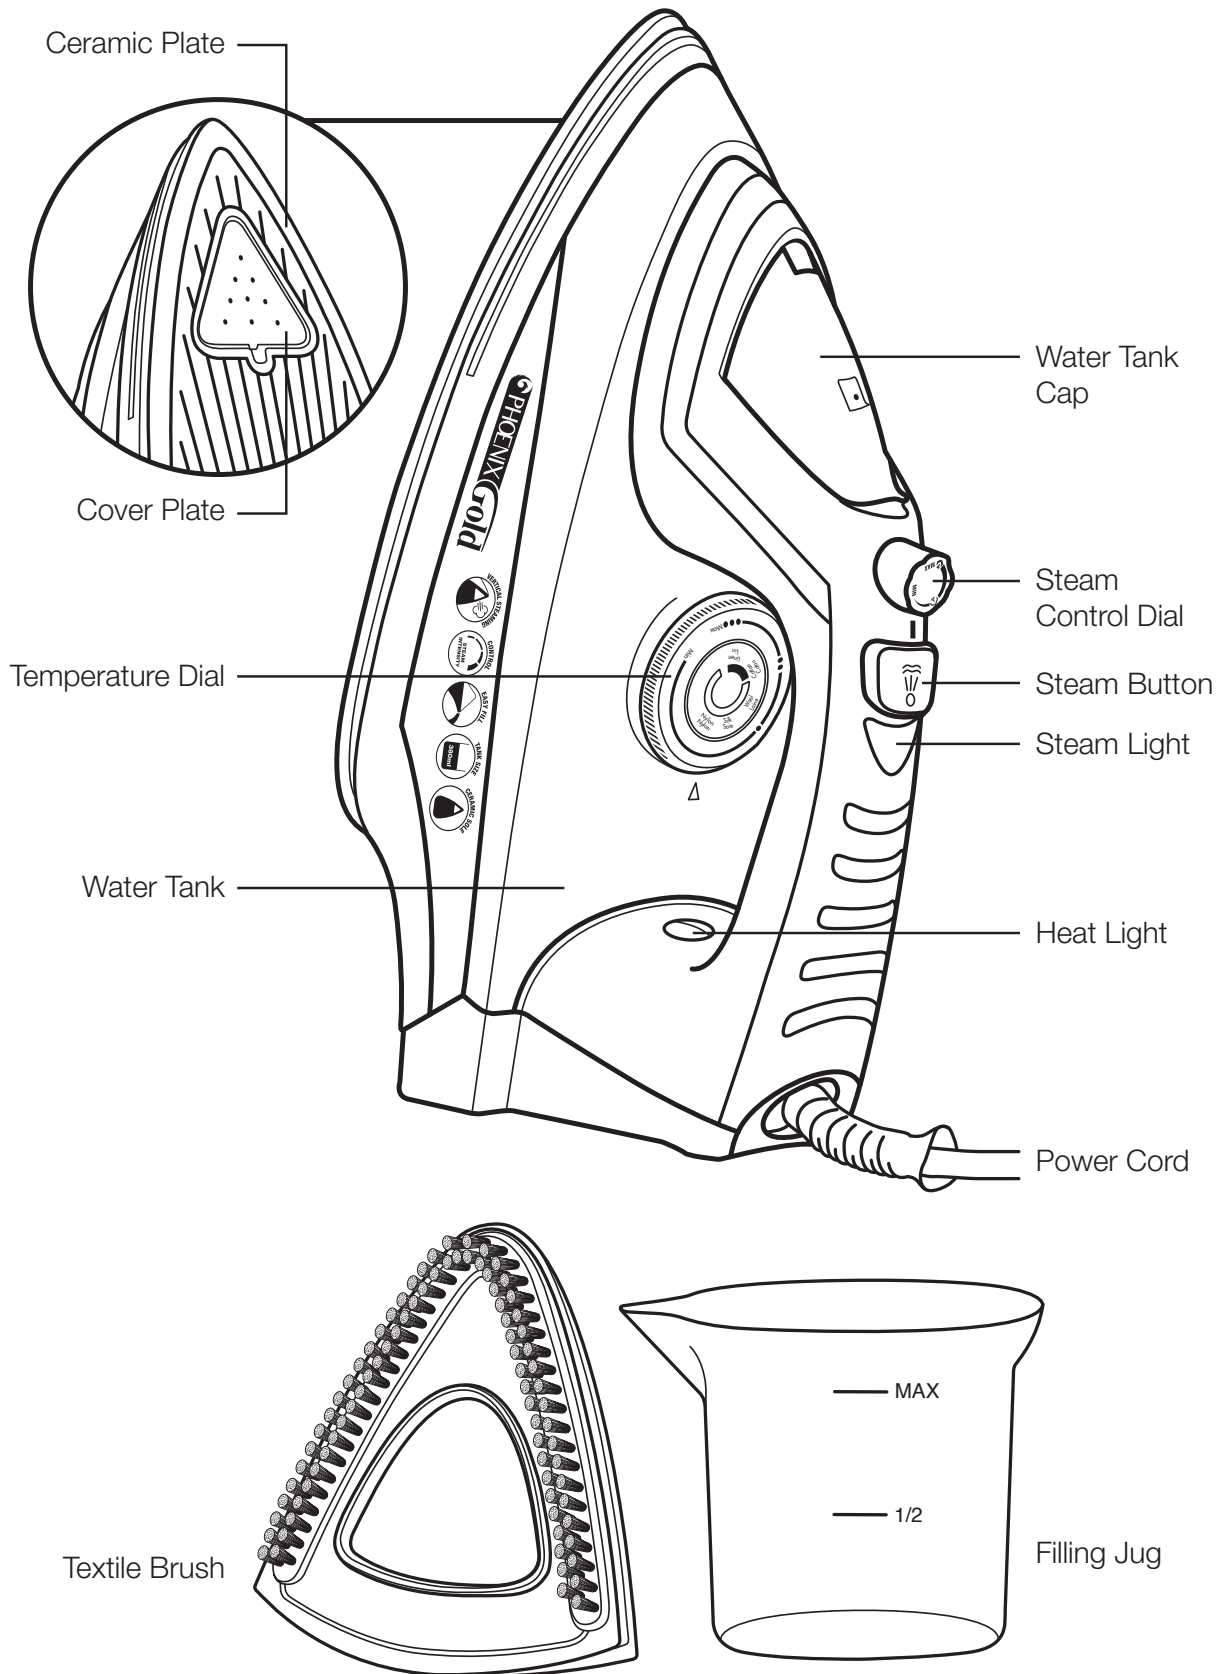

# Using Phoenix Gold

 
## Using Phoenix Gold for the first time

Before ironing your clothing or fabrics for the first time, it is recommended that you use Phoenix Gold on a damp piece of cloth for a few minutes. This will ensure that any residue left over from the manufacturing process is burnt off the Ceramic Plate and won't transfer to your clothes.

You may notice a slight odour and a small amount of smoke during this time, but this is perfectly normal and should disappear quickly.


## Basic instructions

1. Lift the Water Tank Cap and fill the Water Tank with water. Do not overfill the tank; use the MAX line on the Filling Jug as guidance for how much to use. Close the Cap when you have finished.

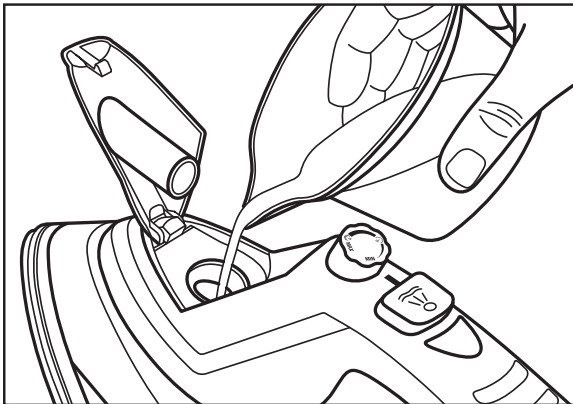

**Please note:** Use bottled or filtered water when filling the iron. Water from the tap will increase the risk of calc/limescale build-up and could reduce the lifespan of the iron.

 2. Plug Phoenix Gold into the mains and switch on. Ensure the Steam Light is off (press the Steam Button once if it is on) and the Steam Control Dial is set to Min.
3. Turn the Temperature Dial to the setting you require. There are seven settings: Min, Nylon, Silk, Wool, Cotton, Linen and Max. The Heat Light will turn on when you rotate the Dial.

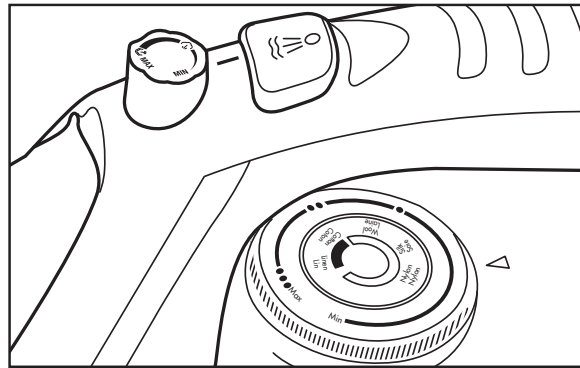

4. Stand the iron vertically and wait for the Heat Light to turn off. This means Phoenix Gold has reached the required temperature.
5. Phoenix Gold is now ready to use. The Heat Light may turn on and off during use as the iron maintains the Ceramic Plate temperature.

## To dry iron

1. Ensure the Steam Button is not pressed down and the Steam Control Dial is turned to minimum.
2. Set the Temperature Dial to the setting you require and wait for the Ceramic Plate to heat up. Use once the Heat Light has turned off.

Note: You do not need to fill the Water Tank if you are dry ironing.

# Using Phoenix Gold continued

## For steam ironing

---

1. Turn the Steam Control Dial from Min to the setting you require.  
There are four settings: Min, Light Steam, High Intensity and Max.
2. Set the temperature using the Temperature Dial. If using the High Intensity or Max steam settings, you should set the Temperature Dial to Linen or Max.
3. Press the Steam Button once to turn on and then start to iron your clothes.
4. If standing the iron upright, ensure that the Steam Control Dial is set to Min and press the Steam Button to turn the steam off. This will prevent steam from continually being released from the iron.

**Please note:** Phoenix Gold can be used over features such as logos, prints, zips, sequins, etc. To avoid any risk of damage, when ironing, lift the Ceramic Plate and allow the steam jet to remove creases near and around the features.

## Using bursts of steam

---

When ironing stubborn or deep creases, you can create a sudden burst of steam to help remove them.

While ironing on either the Wool, Linen or Cotton settings, press down on the Steam Button to release a sudden burst of steam. Immediately press the Button again to turn off the steam.

 
For a second burst, wait for a few moments, and then press again. Repeat for as many times as you need to.

## Using vertically – for garment and fabric steaming

---

1. If using the Textile Brush attachment carefully slide it over the tip of Phoenix Gold before turning on.
2. Once plugged in, turn to a high temperature, either the Cotton, Linen or Max settings. Set the Steam Control Dial to the intensity setting you require.
3. Wait for the Heat Light to turn off. Pick up Phoenix Gold and hold vertically, with the tip tilted slightly forward.
4. Press the Steam Button and move the iron up and down the garment or fabric you want to steam. For stronger bursts of steam, switch the Steam Button off and then on again.
5. If the steam output declines, simply tilt the iron forward into a horizontal position and then tilt back vertical to continue.

DO NOT tilt the iron upside down while using vertically.

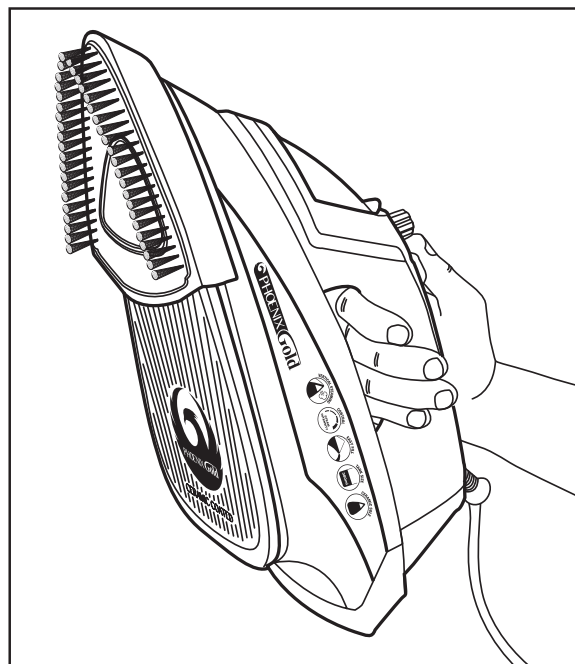



## Using Phoenix Gold continued

### After ironing

---

1. Allow to cool completely. Unplug and empty the Water Tank.
2. Clean the Ceramic Plate and the Cover Plate with a damp cloth, removing any residues.
3. Store vertically on a clean, dry, flat surface, with the cable wrapped around the iron.

## Ironing Tips

- Before ironing garments, always read and follow the instructions on the care label.
- For the best results, always use a mesh type ironing board, which will allow steam to escape
- Sort and group your clothes together depending on the ironing temperature they require. Start by ironing clothes that require the lowest temperature first, as Phoenix Gold heats up faster than it cools down.
- Mixed fibre fabrics should be ironed on a low temperature. If you are unsure about which temperature to use, test on an inconspicuous area, such as an inside seam, to test the iron.
- Pure wool fabrics can be ironed with Phoenix Gold by using with the steam turned on and by placing a dry cloth over the area you wish to iron. Use on a high steam intensity setting, but with only a medium temperature.
- When ironing garments made of velvet, or fabrics that have a tendency to become shiny, keep the iron moving in only one direction and apply only light pressure.
- Silk should be ironed inside out. To prevent staining, do not spray water directly onto silk or other delicate fabrics.

# Cleaning & Care

 
## General care

Ensure Phoenix Gold is unplugged and has completely cooled down before cleaning. Clean the Ceramic Plate and the body of the iron using a lightly-damp cloth. Do not use abrasive scourers or brushes to clean any part of the iron.


Empty the Water Tank before storing.

## Cleaning the Filter


1. Use a flat-head screwdriver to remove the Cover Plate.

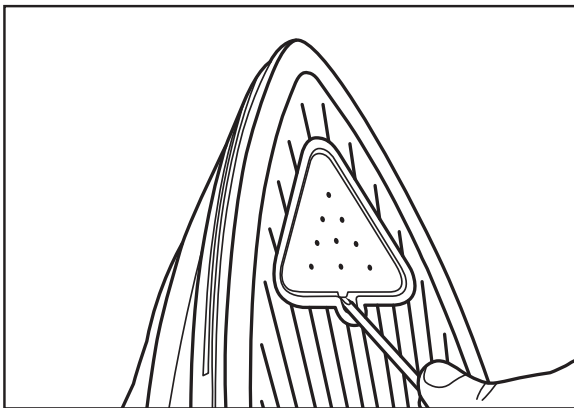

 2. Using a Philips-head screwdriver, remove the three screws in the Heat Filter

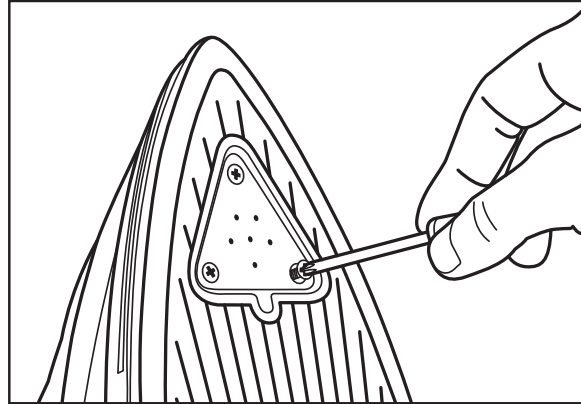

 3. Remove the Heat Filter and clean with a brush to remove any blockages or debris inside.

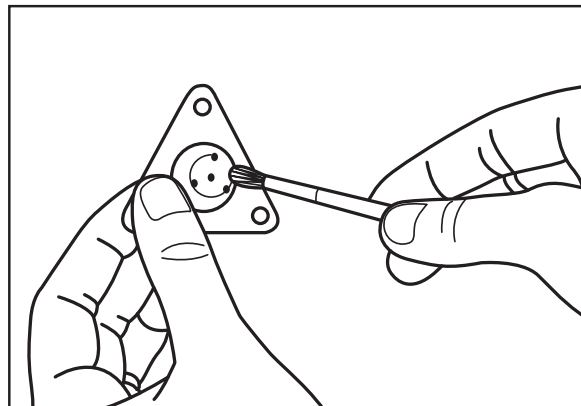

4. Re-attach the Heat Filter using the screws and click the Cover Plate back in place.

# Guarantee

This product is unconditionally guaranteed for one year against all defects of workmanship and materials. This guarantee does not

affect your statutory rights. If you have any problems or queries about this product please contact JML customer services.

# Technical Information

Technical Specifications	
Cord length	2.44m
Steam output	24.5g/min
Tank size	380ml
Power consumption	2200W
Power supply	220-240V ~ 50Hz
Model	LB-113

## Fuse & mains plug replacement (UK & Ireland only)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only use those that are AS TA or BSI approved to BS 1362 and have a rated current of 13 amps.

Should you need to replace the plug; the wires in the power cord are coloured in the following way:

- Blue – Neutral
- Brown – Live
- Green & Yellow – Earth

 
As the colours of the wires in the power cord may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire that is coloured green & yellow must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol  $\perp$ .

The wire that is coloured blue must be connected to the terminal that is marked with the letter N.

The wire that is coloured brown must be connected to the terminal that is marked with the letter L.

If the power lead is damaged, it must be replaced by a qualified electrician.

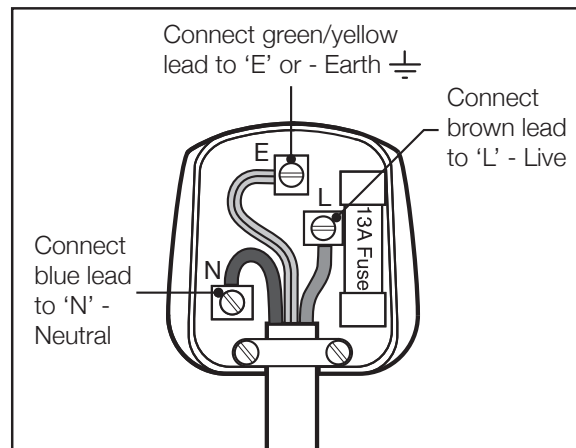

## Disposal and the environment



This product is covered by the waste electrical and electronic equipment (WEEE) regulations. It should not be discarded with normal household waste, but taken to your local collection centre for recycling. For further information, please contact your local authority or approved disposal agency.



**Distributed by JML**

JML, Unit 1 Eastside, Port of Tyne, South Shields, NE33 5SP  
Customer Services: UK: 0800 781 7831 (Freephone) • ROI: 041-978 0003 (Local rate)  
Email: info@JMLgroup.co.uk • Web: www.JMLdirect.com

©JohnMillsLtd/MB/06.14/CIX/A • Product code: V16102 • Made in China

