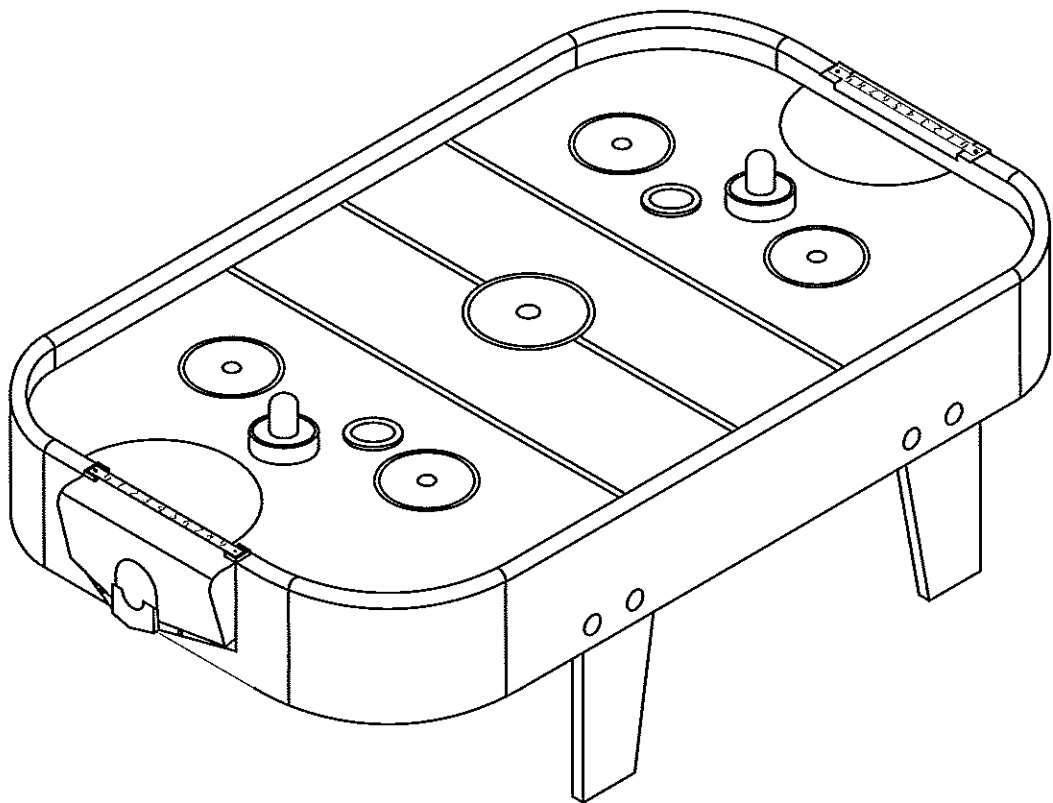




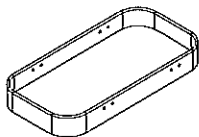


 
 
 
 

 

CHAD VALLEY 3 FT TABLE TOP PUSH HOCKEY ASSEMBLY INSTRUCTION



Item number: 935/3473

If you have a problem with this product, we want to help. For immediate assistance, please phone: 0871 226 2034

Parts

| | | | |
|---|--|--|---|
| #1  Table Top 1 piece | #2  Tool 1 piece | #3  1/2" Round head screw 8 pieces | #4  Goal 2 pieces |
| #5  Pusher 4 pieces | #6  Puck 2 pieces | #7  Leg A 2 pieces | #8  Leg B 2 pieces |
| #9  1/4" Bolt 8 pieces | #10  1/4" Washer 8 pieces | | |



WARNING: Choking Hazard--Toy contains small balls and/or small parts. Not for children under 3 years.

-Caution! Adult assembly required.

-Sharp point on screws; unpack and assemble with care. Keep small parts and polybag away from children during & after assembly. You will need a wrench and screwdriver (not included) to assemble.

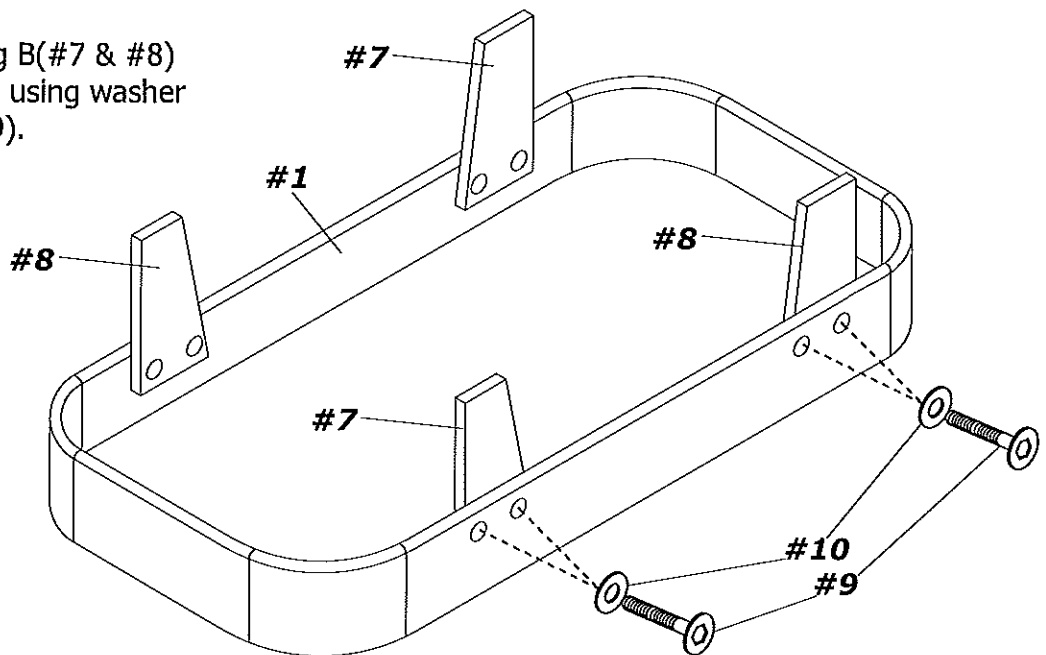
IMPORTANT!

Please Keep Your Instructions. Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this game. Please refer to the Parts List above and be sure that all parts have been included.

CHAD VALLEY 3 FT TABLE TOP PUSH HOCKEY

Step 1:

Attach Leg A and Leg B(#7 & #8) to the table top (#1) using washer (#10) and screw (#9).



Step 2:

Carefully turn the table over and fix the goal (#4) to the table top using screws(#3).

