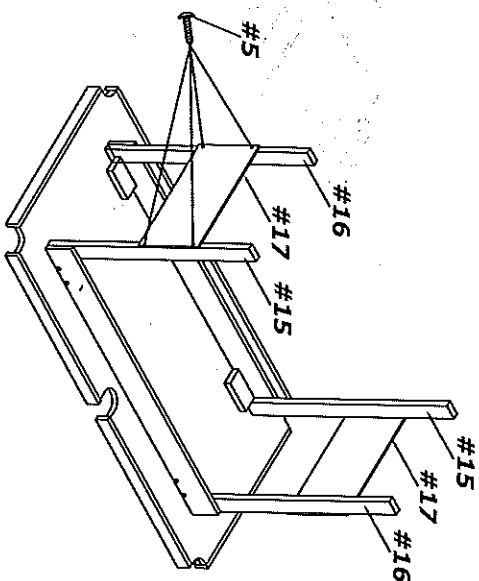


CHAD VALLEY 4 FT SNOOKER/POOL TABLE

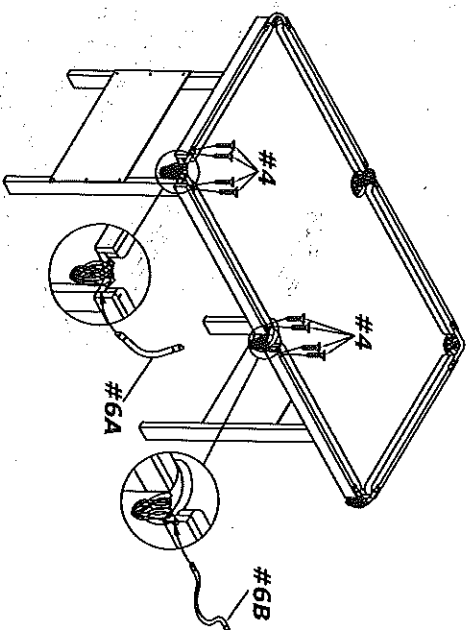
Step 3:

Secure end leg panel #17 to the assembled legs using screw #5.



Step 4:


Carefully turn the table upright. Slide the pocket bridge #6A and #6B through the net sleeves and secure to the table rail using screw #4.



3







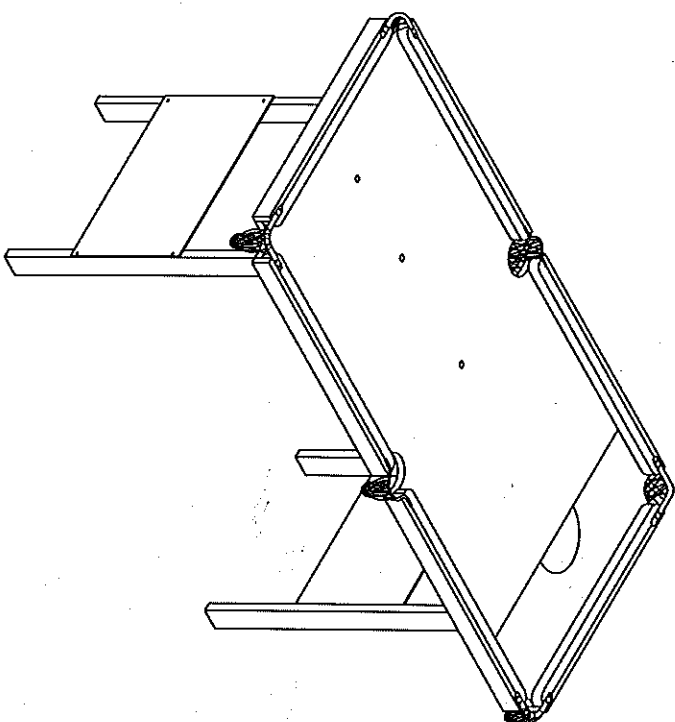
CHAD VALLEY 4 FT SNOOKER/POOL TABLE ASSEMBLY INSTRUCTIONS



Item number: 935/3576

If you have a problem with this product, we want to help. For immediate assistance, please phone: 0871 226 2034

    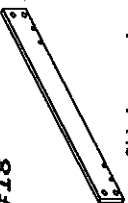Parts

#1	 Bolt 8 pieces	#2	 Washer 8 pieces	#3	 Round head screw 8 pieces	#4	 Flat head screw 24 pieces
#5	 Round head screw 8 pieces	#6	 A B Pocket Bridge 1 set	#7	 Tool 1 piece	#8	 Triangle 1 piece
#9	 Cue 2 pieces	#10	 Chalk 2 pieces	#11	 Snooker balls 1 set	#12	 Brush 1 piece
#13	 Scoreboard 1 piece	#14	 Table box 1 piece	#15	 Leg A 2 pieces	#16	 Leg B 2 pieces
#17	 End leg panel 2 pieces	#18	 Side leg panel 2 pieces				

 **WARNING: Choking Hazard**—Toy contains small balls and/or small parts. Not for children under 3 years.

—Caution! Adult assembly required.

—Sharp point on screws; unpack and assemble with care. Keep small parts and polybag away from children during & after assembly. You will need a wrench and screwdriver (not included) to assemble.

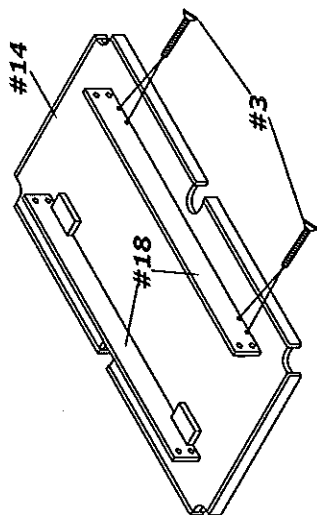
IMPORTANT!

Please Keep Your Instructions. Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this game. Please refer to the Parts List below and be sure that all parts have been included.

CHAD VALLEY 4 FT SNOOKER/POOL TABLE

Step 1:

Using screws #3 attach the side leg panel #18 to the wooden blocks on the table base #14.



Step 2:

Attach leg A #15 and leg B #16 to the side leg panel #18 using screw #1 and washer #2. Please ensure the pre-drilled holes in leg #15 and #16 face outside.

