




EST IN SWITZERLAND 1895 - WATERPROOF

WATCH INSTRUCTIONS

For more information, or to view the Rotary watches collections, please visit:
www.rotarywatches.com
service@rotarywatches.com

DISPLAY AND CROWN/BUTTON OPERATION

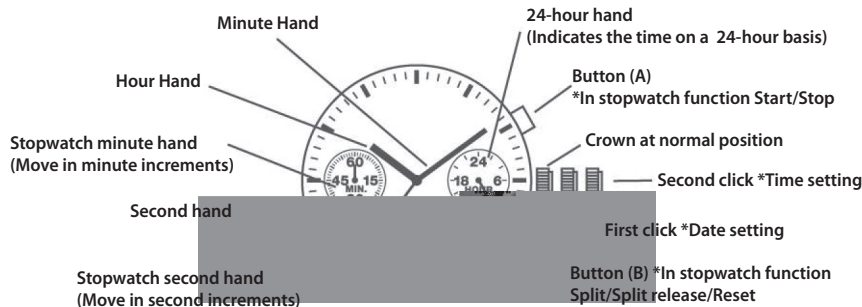


ADJUSTING THE STOPWATCH HAND POSITION

Before setting the time, check if the Stopwatch second and minute hands are at the "0" (12 o'clock) position. If the stopwatch is in use, press the button in the following order to reset it, and then, check if the hands return to "0" position. (For details, see "HOW TO USE THE STOPWATCH")

- If the stopwatch is counting: (A) > (B)
- If the stopwatch is stopped: (B)
- If the stopwatch is counting: (B) > (A) > (B)

* If either of the stopwatch hands are not at the "0" position, reset them following the procedure below.


ADJUSTING THE STOPWATCH HAND POSITION

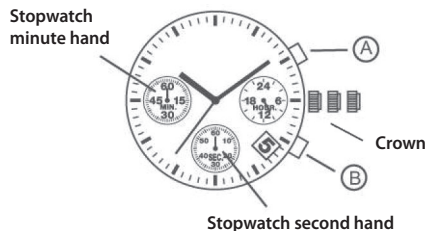

1. Pull out the crown to the second click
2. Press button (A) or (B) to reset the stopwatch second and minute hands to the "0" position.
 - * By pressing button (A), the hands move counter clockwise.
 - * By pressing button (B), the hands move clockwise.
3. Push the crown back to normal position

TIME SETTING

** (Before setting the time, check that the chronograph measurement is stopped)*

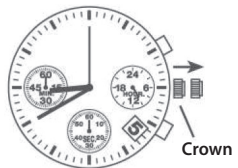

1. Pull out the crown to the first click.



2. Turn the crown clockwise until the previous day's date appears



3. Pull out the crown to the second click when the second hand is at the 12 o'clock position. It will stop on the spot and advance the hour and minute hands by turning the crown. (Check that 24-hour hand is set correctly)
 - * When the crown is at the second click position do not press any button. Otherwise, the chronograph hands will move.

4. Push the crown back in to the normal position

* Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside it, set the date and then reset the correct time.

EST IN SWITZERLAND 1895 - WATERPROOF




For more information, or to view the Rotary watches collections, please visit:
www.rotarywatches.com
service@rotarywatches.com

HOW TO USE THE STOPWATCH (Basic operation)

START

Press button (A) to start.

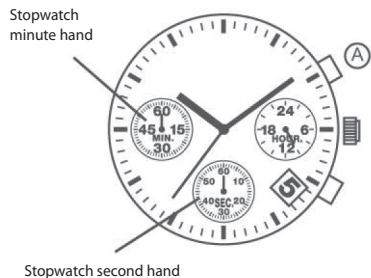

STOP (Finish)

After elapsed time, press button (A) to stop.
Press button (B) to reset to "0'00".



HOW TO USE THE STOPWATCH (Accumulated elapsed time measurement)

START

Press button (A) to start



STOP (Finish)

After elapsed time, press button (A) to stop.
To continue timing, press button (A).
Once the elapsed time has passed, press button (A) to stop.
Press button (B) to reset to "0'00".



HOW TO USE THE STOPWATCH (Split time measurement)

START

Press button (A) to start.



SPLIT

Press button (B) to stop.
Press button (A) to begin again.



STOP

Press button (B) to stop.
Press button (B) once more to
reset to "0'00".



Rotary Watches is the oldest Swiss watch brand that is still owned and run by a direct descendant of the founder. Originally established in Switzerland in 1895 by Moise Dreyfuss, Rotary Watches is dedicated to designing and manufacturing high quality, affordable and stylish timepieces. By choosing a Rotary timepiece, you are investing in a timepiece that will offer you a lifetime of reliability and a wealth of memories.

Swiss Watchmaking is our Family's Tradition

Lifetime Guarantee

All Rotary watches should be serviced at 3 year intervals at a Rotary Service Centre to ensure the Lifetime Guarantee remains valid.

Service centre details

Rotary Watches Limited
277 Prince Avenue
Westcliff on Sea
Essex
SS0 OJS

01702 337 061