

WI16




EST IN SWITZERLAND 1895 - WATERPROOF

WATCH INSTRUCTIONS

For more information, or to view the Rotary watches collections please visit www.rotarywatches.com
service@rotarywatches.com

1. Display and Buttons (Diagram 1)

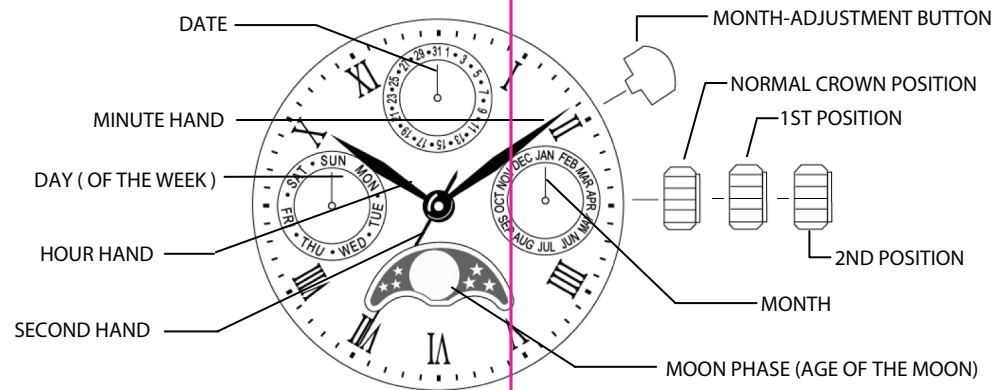

2a. Setting the Day and Time

The hour, minute, second and day are set by the same operation.

SETTING PROCEDURE
 DAY > HOUR > MINUTE > SECOND

A) SETTING THE DAY
 Pull the crown out to the 2nd position (see Diagram 1) to stop the second hand at 0 (12 o'clock). Turn the hour/minute hands in a clockwise direction to set a day by advancing the hour hand by 24 hours per day.

NOTE:
 *Do not set the day by turning the crown in counterclockwise direction.
 * The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.

2b. Setting the Day and Time (cont.)

B) SETTING THE TIME
 After setting the day, set the hour (and 24 hour) and minute hands.
 Turn the hour/minute hands in a clockwise direction to set the time.
 To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time. After setting the time, push the crown to the normal position (see Diagram 1) to start the second hand going.

NOTE:
 Make sure you have correctly set AM/PM before setting the time when the day changes over, it is a.m (Day changes over between 0:00a.m. and 5:30a.m. or little later)

3. Setting and Reading the Age of the Moon

The moon phase represents the age of the moon and not the actual shape of the moon.

A) SETTING THE AGE OF THE MOON WITH AGE SCALE
 * Check on the age of the moon for the day. Check the newspaper or other source for the age or phase of the moon for today or tomorrow. Subtract one day before a setting is made if the listings for tomorrow are used.
 * Setting procedure(Example: age of the moon:4.4)
 Pull the crown out to the 1st position.
 Turn the moon disc clockwise until the center of the moon is in line with 4.4 on the scale.



B) SETTING THE AGE OF THE MOON WITHOUT THE AGE SCALE
 * Check the newspaper or other source that lists current age or phase of the moon. Set the moon phase to the age (0,7,15 or 22) closest to the listed.
 More accurate setting can be made at the same time of the new moon (0) or full moon(15).

C) READING THE AGE OF THE MOON
 The age of the moon is indicated in units of days. The average period from a new moon to the next new moon is equivalent to about 29.5 days.or little later)

4. Setting the Month and Date

A) SETTING THE MONTH (BY QUICK OPERATION)
 Each time the month-adjustment button is pushed, the month advances one month at a time.
 Be sure to press firmly on the button when making month changes.

** Do not set the month when the date hand is between the 26th and 31st. Temporarily move the date hand out of this period to avoid a possible error in advancement for the following month.
 * The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct month.*

The month hand begins changing to the next month around midnight of the 30th day. It completes the change around midnight of the 31st.

B) SETTING THE DATE (BY QUICK OPERATION)
 Pull the crown out to the 1st position. Turn the crown counterclockwise to set the date quickly.
** Do not set the date between the hours 9:00p.m. and 0:30a.m.. The date may not change correctly the next day.*

WI16




EST IN SWITZERLAND 1895 - WATERPROOF

WATCH INSTRUCTIONS

For more information, or to view the Rotary watches collections please visit www.rotarywatches.com
service@rotarywatches.com

1. Display and Buttons (Diagram 1)

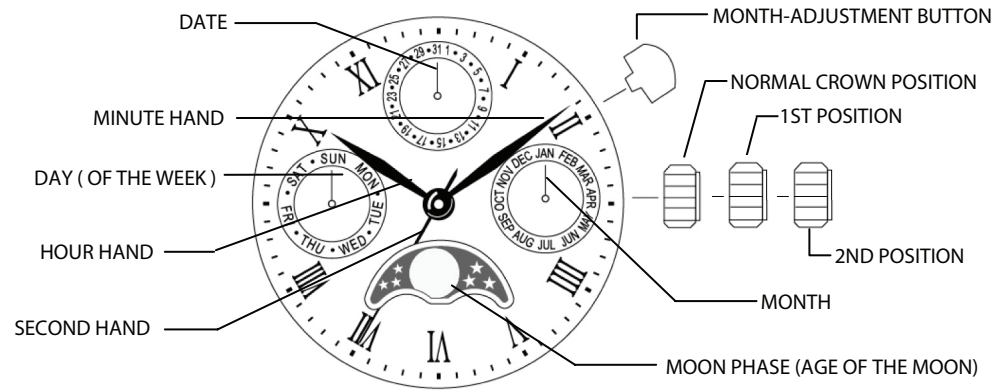

2a. Setting the Day and Time

The hour, minute, second and day are set by the same operation.

SETTING PROCEDURE

DAY > HOUR > MINUTE > SECOND

A) SETTING THE DAY

Pull the crown out to the 2nd position (see Diagram 1) to stop the second hand at 0 (12 o'clock). Turn the hour/minute hands in a clockwise direction to set a day by advancing the hour hand by 24 hours per day.

NOTE:

*Do not set the day by turning the crown in counterclockwise direction.
 * The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.

2b. Setting the Day and Time (cont.)

B) SETTING THE TIME

After setting the day, set the hour (and 24 hour) and minute hands.
 Turn the hour/minute hands in a clockwise direction to set the time.

To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time. After setting the time, push the crown to the normal position (see Diagram 1) to start the second hand going.

NOTE:

Make sure you have correctly set AM/PM before setting the time when the day changes over, it is a.m (Day changes over between 0:00a.m. and 5:30a.m. or little later)

3. Setting and Reading the Age of the Moon

The moon phase represents the age of the moon and not the actual shape of the moon.

A) SETTING THE AGE OF THE MOON WITH AGE SCALE

* Check on the age of the moon for the day. Check the newspaper or other source for the age or phase of the moon for today or tomorrow. Subtract one day before a setting is made if the listings for tomorrow are used.

* Setting procedure(Example: age of the moon:4.4)

Pull the crown out to the 1st position.

Turn the moon disc clockwise until the center of the moon is in line with 4.4 on the scale.



B) SETTING THE AGE OF THE MOON WITHOUT THE AGE SCALE

* Check the newspaper or other source that lists current age or phase of the moon. Set the moon phase to the age (0,7,15 or 22) closest to the listed. More accurate setting can be made at the same time of the new moon (0) or full moon(15).

C) READING THE AGE OF THE MOON

The age of the moon is indicated in units of days. The average period from a new moon to the next new moon is equivalent to about 29.5 days.or little later)

4. Setting the Month and Date

A) SETTING THE MONTH (BY QUICK OPERATION)

Each time the month-adjustment button is pushed, the month advances one month at a time. Be sure to press firmly on the button when making month changes.

** Do not set the month when the date hand is between the 26th and 31st. Temporarily move the date hand out of this period to avoid a possible error in advancement for the following month.*

** The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct month.*

The month hand begins changing to the next month around midnight of the 30th day. It completes the change around midnight of the 31st.

B) SETTING THE DATE (BY QUICK OPERATION)

Pull the crown out to the 1st position. Turn the crown counterclockwise to set the date quickly.

** Do not set the date between the hours 9:00p.m. and 0:30a.m.. The date may not change correctly the next day.*