

WI14

**ROTARY**

Established in Switzerland 1895

**CHRONOSPEED**

WATCH INSTRUCTION


For more information, or to view the  
Rotary watches collections please visit  
[www.rotarywatches.com](http://www.rotarywatches.com)  
[service@rotarywatches.com](mailto:service@rotarywatches.com)

Rotary Watches is the oldest Swiss watch brand that is still owned and run by a direct descendant of the founder. Originally established in Switzerland in 1895 by Moise Dreyfuss, Rotary Watches is dedicated to designing and manufacturing high quality, affordable and stylish timepieces. By choosing a Rotary timepiece, you are investing in a timepiece that will offer you a lifetime of reliability and a wealth of memories.

*Swiss Watchmaking is our Family's Tradition*

*Dreyfuss*

## 1. Display and Buttons (Diagram 1)

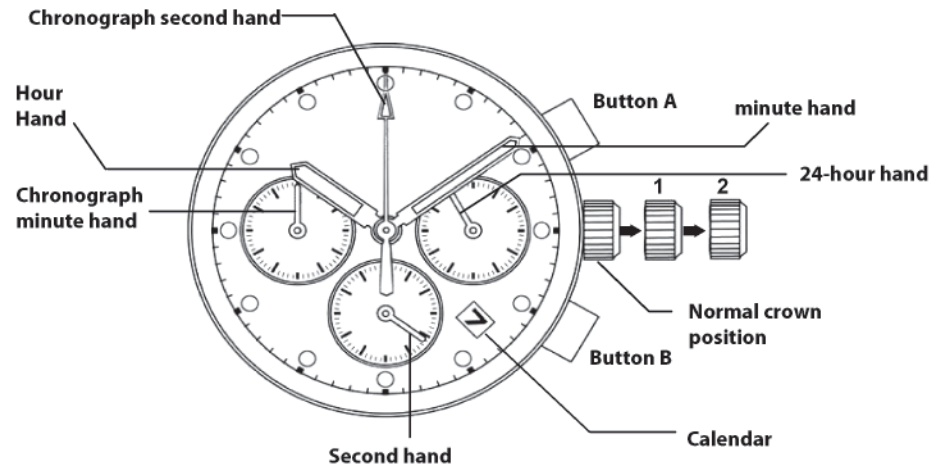

## 2. Instruction Manual

### A) SETTING THE TIME

1. Pull the crown out two notches to position 2 so that the second hand stops at 0.
2. Turn the crown to set the hour and minute hands.

### B) SETTING THE DATE

1. Pull the crown out one notch to position 1.
2. Turn the crown to the left to set the date.  
(Please note: If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.)
3. After the date has been set, push the crown back to the normal position.

### C) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 seconds up to a maximum of 59min 59sec.

#### Measuring time with the chronograph

1. The chronograph can be started and stopped using button "A".
2. Pressing button "B" resets the chronograph and all hands return to their 0 positions.

### D) CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the 0 second position after the chronograph has been reset, including after the battery has been replaced.

*(Continued next page)*

### D) CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY) (Continued)

1. Pull the crown out to the 2nd position (as per diagram 1).
2. Press button "A" to set the chronograph second hand to the 0 position.
3. The chronograph hands can be advanced rapidly by continuously pressing button "A"
4. Once the hands have been returned to the 0 position, reset the time and return the crown to its normal position.