

3 Using your TV for the first time

Let's get started

Using the Electronic Program Guide Channel selection

Open the guide by pressing the EPG button on the remote.



The program guide displays a list of 8 channels along with the program schedule for the next 8 programmes.

The current channel marker is highlighted with a green block. The selected day/ date is listed along the top left.

- Use the ◀▶▲▼ navigation buttons to highlight any current or future programmes.
- Pressing the ▼ button repeatedly so that the highlight marker proceeds past the displayed 8 programmes will load the next set of programmes.

Along the bottom left of the guide is a key showing the usage of the colour buttons found on the remote control.

- Press the CH+/- buttons on the TV or remote control repeatedly; or use the 0-9 buttons on the remote control to select a channel.

Alternative:

Press the OK button to enter the channel list. Then use the ◀▶ buttons to highlight and select the channel.

Press the OK button to view the selected channel.

Display channel information

- Press the INFO button to view the current information.

Volume adjustment

- Press the VOL+/- buttons on the TV or remote control to adjust the volume.
- If you wish to switch the sound off, press the MUTE button on the remote control. Press the MUTE button once more or the VOL+/- buttons to resume the audio.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

4 Troubleshooting

Help is always at hand

Help and assistance

If you require any technical guidance or find that your DVD Player is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of the instruction manual or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105***. To help us give you a fast and efficient service please have the following information ready:

Model Ref.

CTV401

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of the instruction manual or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 604 0105**



Contact:

www.argos-support.co.uk

Helpline: 0345 604 0105



 
1 Connections

Bringing it all together

You'll soon be enjoying your new TV.

This guide will help you get started, full details of your TV and its features can be found in the Instruction manual.

Connecting the power and aerial

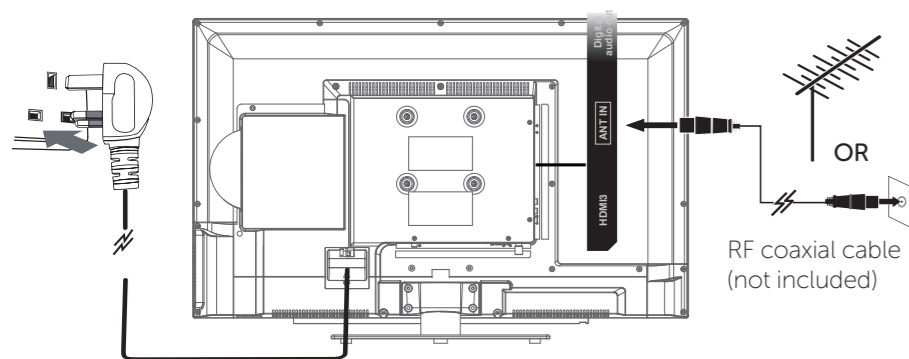


1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the aerial socket at the rear bottom of the TV.
2. Connect the mains cable to a mains socket (after completing all other connections).
3. At this stage the TV will power on in standby mode (red LED indicator on the front panel). Press the STANDBY button on the TV or the button on the remote control to turn on your TV (the red LED will change to green).



- The STANDBY button is located on the rear right hand side of the TV.
- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The STANDBY button on the rear right hand side of the TV or the button on the remote control is only used for switching the TV into standby. It does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains cable from the mains socket.

2 Getting to know your TV

 You'll be up and running in no time

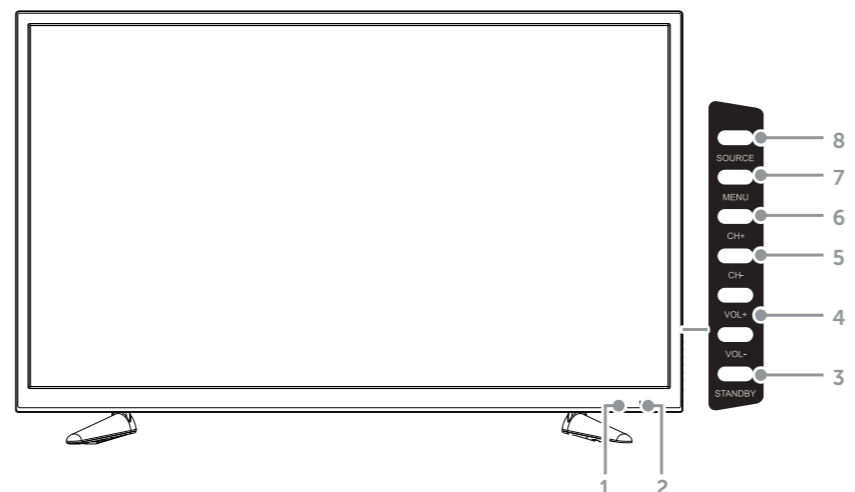

Item	Description
1. Power LED	Illuminates green when the TV is turned on. Illuminates red when the TV is in standby mode. The LED will alternate between red and green when the PVR timer programming has started in the standby mode.
2. IR (infrared receiver)	Receives IR signals from the remote control. Do not place anything in front of the sensor, as its function may be affected.
3. Standby	Switches the TV on or off from standby mode.
4. Vol + / -	Adjust the volume level. Press to select and adjust a setting in the OSD menu.
5. CH -	Press to select a channel or select a sub-menu from the OSD menu.
6. CH +	Press to select a channel or select a sub-menu from the OSD menu.
7. Menu	Displays the OSD (On Screen Display) menu.
8. Source	Press to select the various input signal sources. DTV, ATV, COMPOSITE-AV, SCART, VGA-PC, YPBPR (COMPONENT), HDMI1, HDMI2 and HDMI3. Confirm a selection on the OSD menu.

2 Getting to know your TV

You'll be up and running in no time

Radio: Switch between TV and Radio

Mute: Mute sound

Free View: Switch to Freeview digital

Menu: Switch between Picture, Sound, Channel, Feature & Setup

Numeric buttons: Direct channel input

Rec: Start recording

Exit: Exit from any menu

Navigation: Press to navigate

OK: Press to select an option

EPG: Press to enter the EPG menu.

Picture: Switch sound & aspect ratio modes

Volume: Increase or decrease the volume level

Soft keys: Actions are displayed on-screen

Teletext: Display associated teletext information

Stop: PVR and Multimedia

Event List: Show the record schedule list (DTV mode)

Quickstart: Searches all ATV and DTV channels

Power: Turn on or standby

USB: Switch to USB mode

DVD: Non-operational on this model.

Recall: Return to last selected channel

Info: DTV mode displays now/next. 2nd press extended program info.

When recording displays detail of the recording and space available on the card.

TXT mode - Index function

Sound: Switch sound modes & audio language.

Channel +/-: Increase or decrease the channel number

Source: Switch input

Subtitle: DVD / DTV modes only

Repeat: Select a repeat mode

Next track: next track, File, Day (Media, PVR & EPG)

PVR and Multimedia: PVR and Multimedia

Fast forward: Fast forward

PVR list: Display list of recorded programs (DTV mode)

 
3 Using your TV for the first time

Let's get started


Turning the TV on for the first time

1. If this is the first time you are turning on the TV and there are no programs in the TV memory, the First Time Installation menu will appear on the screen.

Use the navigation buttons to enter the settings, select the 'auto tuning' option and press the OK button to begin the setup process.

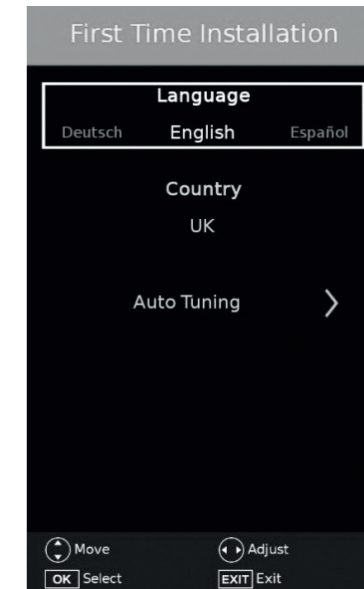

Selecting the input source

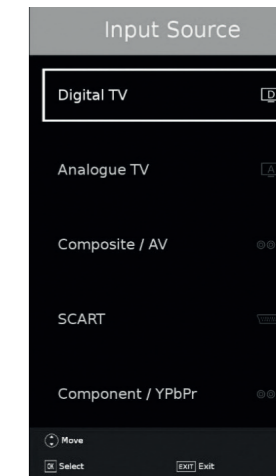 

1. Press the SOURCE button on the TV or the remote control to display the input source list.
2. Press the buttons to select the input source you require: DTV, ATV, COMPOSITE-AV, SCART, PC-VGA, YPBPR, HDMI1, HDMI2 or HDMI3.
3. Press the OK button to confirm your selection.



- In DTV mode, press the RADIO button to switch to TV/Digital radio channels directly.