



# BUSH

## Instruction manual

WJ-D88



You'll soon be enjoying your new Stereo DAB/FM Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your Stereo DAB/FM Radio. Should you require any guidance, a simple solution can often be found online at:

[www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on 0345 604 0105.

## Contents

### 1 Safety information

General safety information	8
Power source	8
Positioning the Stereo DAB/FM Radio	9

### 2 Getting to know your Stereo DAB/FM Radio

Your Stereo DAB/FM Radio	14
Connection	16
Initial set-up	16
Change the mode	18
Using headphones	18

### 3 Using your Stereo DAB/FM Radio

DAB Radio mode	22
Changing DAB stations	22
Scanning for DAB stations	22
Prune DAB stations	23
Storing a DAB station preset	23
Tune to a DAB preset station	24
DAB display information	24
Dynamic range control (DRC)	25
FM Radio mode	26
Tuning to an FM station	26
Changing the Scan setting	26
Audio mode	27
Storing an FM station preset	27
Tune to an FM preset station	28

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com). If you still require further assistance, call one of our experts on 0345 604 0105.

# Contents

FM display information	28
Setting the alarm	29
Snooze	31
Sleep timer	31
Display backlight timeout	32
Display language	32

## 4 Other information

Software version	36
Factory reset	36
Technical specification	37

## 5 Product support


Troubleshooting	40
Disposal	42
Declaration of Conformance	42
Your Bush Guarantee	43

This page is left intentionally blank

# Safety information

1

This page is left intentionally blank

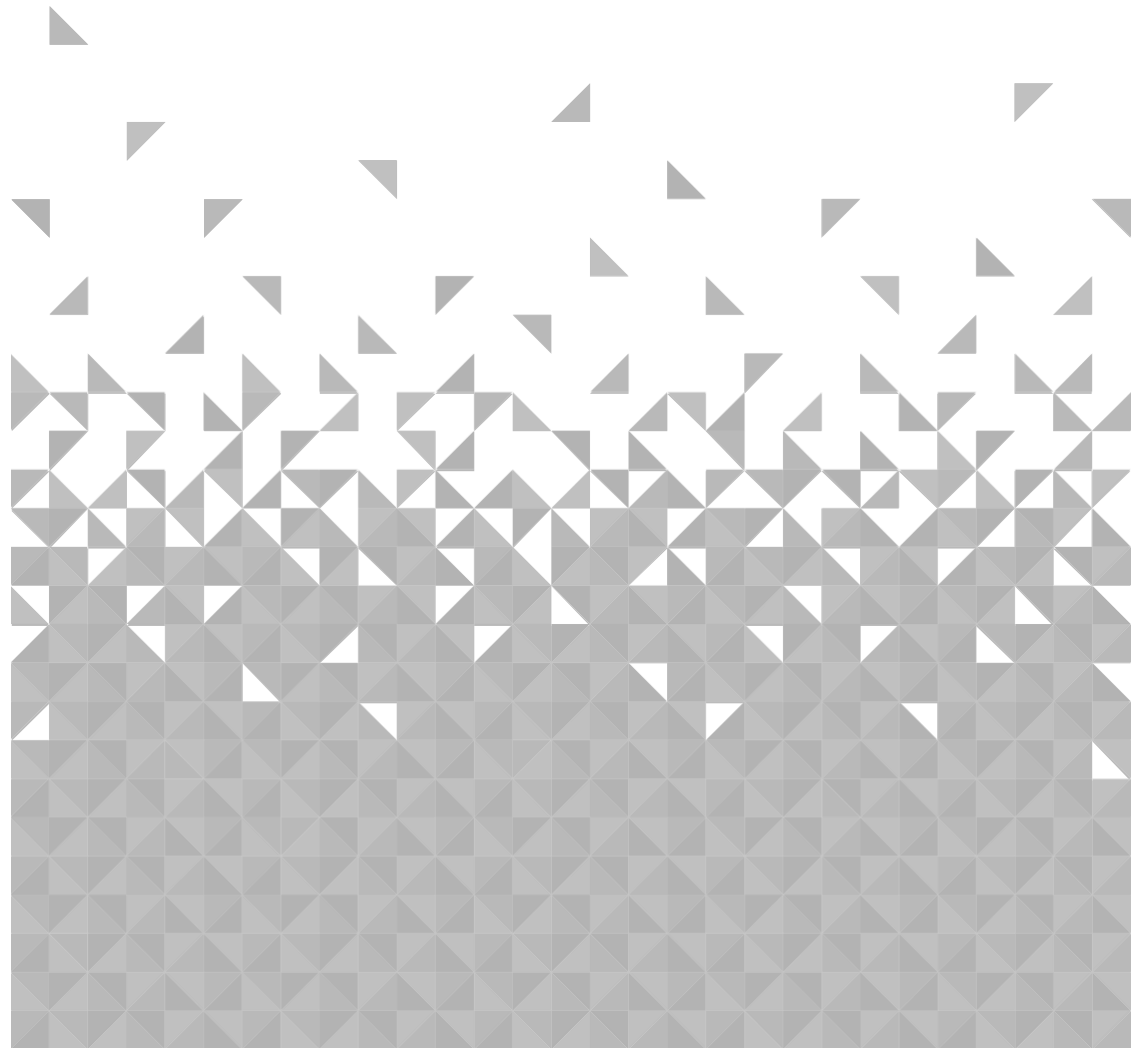

## Safety information

Important - Please read these instructions fully before installing or operating

### General safety information

Keep the product and all its parts out of reach of small children.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Radio near emergency/intensive care medical equipment; or during an electrical storm.
- Clean only with a dry cloth.



To avoid possible hearing damage, do not listen to this radio at high volume levels for long periods of time. Always keep the volume within reasonable limits.

### Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irreversibly damage the product.
- Disconnect your Radio from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Radio, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and the mains power is unplugged.
- Only use recommended batteries or those of the same or equivalent type.
- Do not mix old and new batteries or batteries of different types.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

## Safety information

Important - Please read these instructions fully before installing or operating

- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove the batteries from the Radio if they will not be used for an extended period of time.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

### Positioning the Stereo DAB/FM Radio

It is important that you consider carefully in advance where your Radio will be situated and make sure that it is:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead is not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where you can fully extend the telescopic aerial.
- Never place your Radio directly onto antique or polished surfaces.

### Moisture and water

- To reduce the risk of fire or electric shock, Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Objects filled with liquid, such as vases, should not be placed on or near the product.
- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.



## Safety information

Important - Please read these instructions fully before installing or operating

### Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

### Heat sources and flames


- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.
- No naked flame sources, such as lighted candles, should be placed on or near the product.

This page is left intentionally blank

# Getting to know your Stereo DAB/FM Radio

2

This page is left intentionally blank

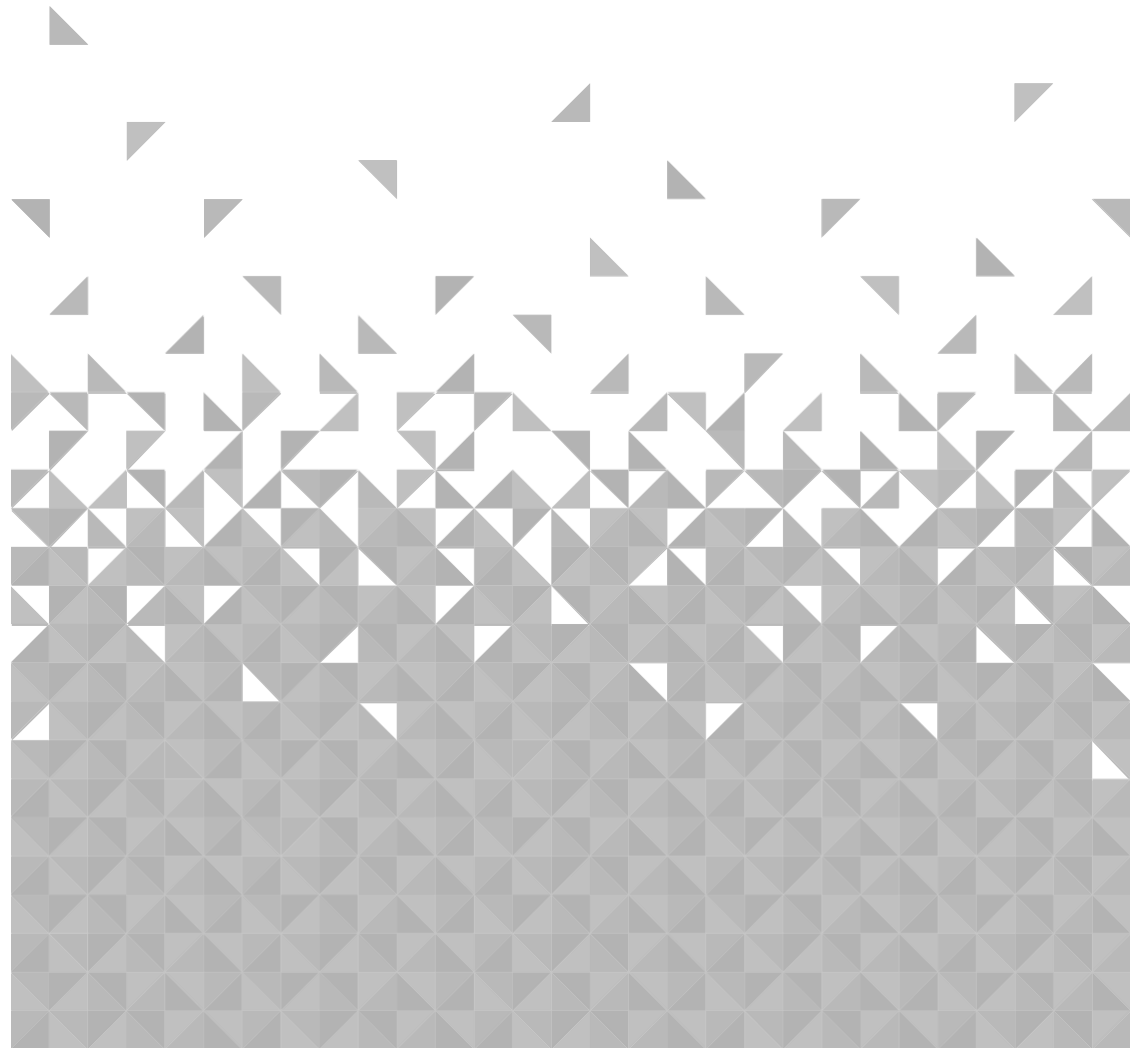

## Getting to know your Stereo DAB/FM Radio


You'll be up and running in no time

### Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Fig 1.

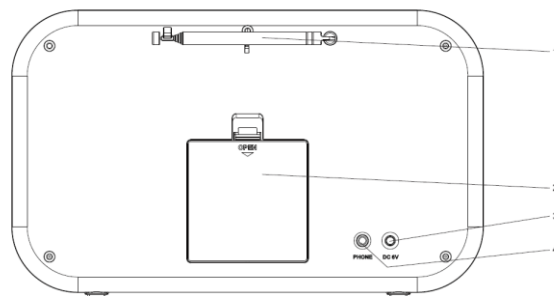

1. Telescopic aerial
2. Battery compartment
3. Power socket
4. Headphone socket


Fig 2.

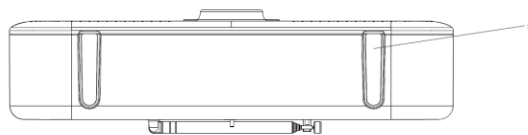

5. Foot Pad

## Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

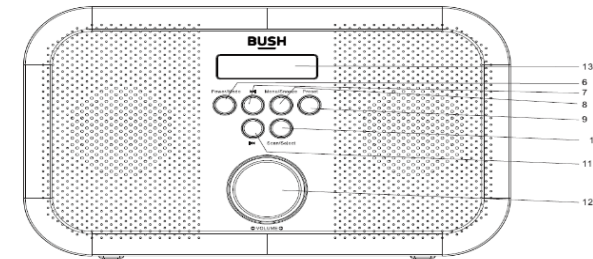

6. Power/Mode
  - Short press: Power on
  - Short press: Changes the mode (DAB/FM)
  - Long press (mains power): Standby
  - Long press (batteries in standby): Power off
7. Prev (⏮)
  - Short press in DAB mode: Move down the radio station list
  - Short press in FM mode: Move down the frequency band by 0.05MHz
  - Short press in Menu: Move through the Menu options
8. Menu/Snooze.
  - Long press: Enter the Menu
  - Short press in the Menu: Steps back through Menu options
  - Short press: Changes displayed radio station information
9. Preset
  - Short press: Preset recall
  - Long press: Preset store
10. Scan/Select
  - Short press in DAB mode: Scans for radio stations
  - Short press in FM mode: Scans up the frequency band
  - Short press in the Menu: Select a menu option
11. Next (⏭)
  - Short press in DAB mode: Move up the DAB station list
  - Short press in FM mode: Move up the frequency band by 0.05MHz
  - Short press in the Menu: Move through the Menu options
12. Rotary Volume control
  - Rotate to adjust the volume
13. Backlit display

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.



# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

## Connection

1. Connect the mains power lead into the socket on the back of the Radio.
2. Plug the power adaptor into the mains power wall socket and switch on. The Radio will switch on, Welcome to Digital Radio will be displayed and then your Radio will go to Standby mode.

## Inserting batteries (optional)

1. Before installing the batteries (not included) please ensure that the Radio is switched off and has been unplugged from the mains power supply.
2. On the back of the Radio, press in the tab on the battery compartment cover to remove it.
3. Insert 4 x 1.5V AA-size (also known as LR-6) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around.
4. Replace the battery cover, making sure that it 'clicks' shut.

---

Note: For battery operation please ensure that the mains power is switched off and remove the mains power plug from the socket on the back of the Radio.

---

## Initial set-up

1. Extend the telescopic aerial to ensure the maximum signal strength when you scan for radio stations.
2. Short press the Power button of your radio. Your radio will switch on and begin an automatic scan for DAB stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.
3. When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

---

Note: The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place. It is possible to scan manually for stations by pressing and releasing the Scan button.

---

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

4. Short press the Prev or Next button, to scroll through the available stations in the station list. When the station that you would like to listen is displayed, short press the Select button. There will be a short delay whilst your radio tunes to your selected station.

## Adjusting the volume

- Turn clockwise to increase the volume.
- Turn anti-clockwise to decrease the volume.

## Time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, turn on the radio and follow the steps below:

1. Long press the Menu button to enter the menu options.
2. Short press the Prev button to scroll to <System>. Short press the Select button.
3. Short press the Next button to scroll to <Time>. Short press the Select button. <Set Time/Date> is displayed. Short press the Select button.
4. Set time is displayed and the hour digits will flash. Use Prev or Next button to scroll to the correct hour. Short press the Select button.
5. The minutes will now flash. Use the Prev or Next button to scroll to the correct minutes. Short press the Select button.
6. Set date is displayed and the day will flash. Use the Prev or Next button to scroll and short press the Select button, to confirm the day, month and year, using the same method as you used to set the time.

When you confirm the correct date. 'Time Saved' is displayed and the display returns to <Set Time/Date>.

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

## Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

You can now use the Prev or Next button to scroll and short press the Select button, as you did to set the time and date to change the settings for:

12/24 hour clock display, the date format, DD-MM-YYYY or MM-DD-YYYY and to auto update the time from the DAB signal, FM signal, DAB or FM signal(Any) or no update.

7. Short press the Menu button to step back through the Menu options and exit the Menu.

### Change the mode

Short press the Power/Mode button to change between DAB and FM modes. Please check the display, which will confirm the mode.

### Using headphones

You can connect headphones with a 3.5mm plug (not included) to your radio. The headphone socket can be found on the back of the radio at the bottom. When you have headphones connected the radio speaker is switched off and all sound is via the headphones.

---

Note: Always keep the volume within reasonable limits.


---

This page is left intentionally blank

# Using your Stereo DAB/FM Radio

3

This page is left intentionally blank

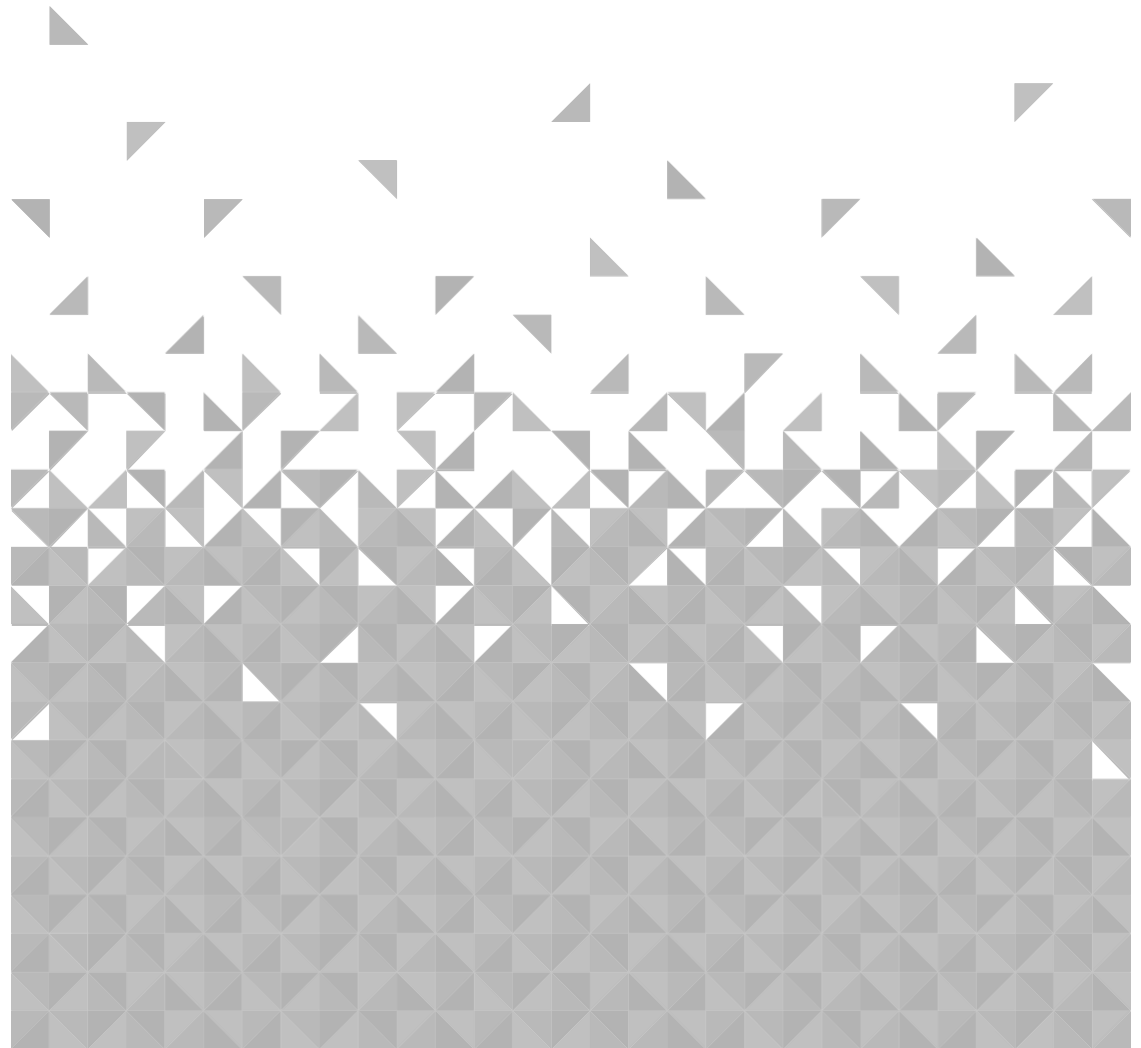

## Using your Stereo DAB/FM Radio

Let's get started

### Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to a DAB station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

### DAB Radio mode

- Check that your Radio is in DAB mode. If you are not already in DAB mode, short press the Power/Mode button until you are in DAB mode (check the display).
- The first time you use the Radio or if the station list is empty, your radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.
- If you were listening to a DAB station when you switched the radio off, then this station will automatically be selected when you switch the radio back on.

### Changing DAB stations

1. Short press the Prev or Next button to scroll through the available stations.
2. When the station that you would like to listen to is displayed, short press the Select button. There will be a short delay whilst your radio tunes to your selected station.

### Scanning for DAB stations

With DAB radio additional stations and services regularly become available, so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your Radio. If you have moved your Radio to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

## Using your Stereo DAB/FM Radio

Let's get started

In DAB mode:

1. Short press the Scan button to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

### Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

In DAB mode:

1. Long press the Menu button to enter the menu options.
2. Use the Prev or Next button to scroll to <Prune>. Short press the Select button.
3. Prune? Yes <No> is displayed. Short press the Prev button to scroll to Yes. Short press the Select button and prune the station list. Stations with a '?' prefix will now no longer be displayed.

### Storing a DAB station preset

Your Radio can store up to 30 DAB radio stations in its preset memories for instant access to your favourite stations.

---

Note: When you store DAB radio station presets, these do not overwrite your FM station presets.

---

1. Tune the Radio to the DAB radio station that you wish to preset.
2. Long press the Preset button for approximately 2 seconds until Preset Store <1:(Empty)> is displayed.
3. Use the Prev or Next button to move to the preset location that you would like to store the radio station to (1-30).
4. Short press the Select button. The display will confirm Preset X stored, where 'X' is the number of the preset (1-30).

## Using your Stereo DAB/FM Radio

### Let's get started

---

Note: If there is already an existing DAB station stored under a preset, it will be over written when you store the new station.

---

### Tune to a DAB preset station

In DAB mode:

1. Short press the Preset button. Preset Recall <1:> is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
2. Use the Prev or Next button to move to the Preset location and station that you would like to listen to (1-30).
3. Short press the Select button. The radio will instantly tune to that station and begin to play.

---

Note: If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

### DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- Dynamic Label Segment (DLS) - this is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
- Signal Strength - An empty  will appear on the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicates the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.
- Program Type (PTY) - such as 'Rock', 'Pop', 'Talk' or 'News'
- Multiplex Name - displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.
- Channel and Frequency - e.g.: 12B 225.648 MHz

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

## Using your Stereo DAB/FM Radio

### Let's get started

- Signal error - This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.
  - Signal information - The data rate at which the signal is being transmitted.
  - Time and date - supplied by the broadcaster.
1. Repeatedly short press the Menu/Info. button to cycle through the different information options.

### Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC off - no compression. This is the default setting.
  - DRC low - medium compression.
  - DRC high - maximum compression.
1. Long press the Menu button to enter the menu options.
  2. Use the Prev or Next button to scroll to <DRC>. Short press the Select button.

---

Note: The current DRC setting will have an '\*' in the display.

---

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.

## Using your Stereo DAB/FM Radio

### Let's get started

3. Use the Prev or Next button to scroll through the options and short press the Select button.

### FM Radio mode

- If you are not already in FM mode, short press the Power/Mode button to go to FM mode (check the display).
- If you were listening to an FM station when you switched the Radio off then this station will be automatically selected when you switch the Radio back on.

### Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to a FM station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

### Tuning to an FM station

- Short press the Scan button to scan down the frequency band.
- Short press the Prev or Next button to fine tune each frequency in 0.05MHz steps.

---

Note: If reception is still poor try adjusting the aerial or moving the radio to another location.

---

### Changing the Scan setting

In FM mode:

1. Long press the Menu button, <Scan setting> will be displayed. Short press the Select button..

---

The current Scan setting will have an '\*' in the display.

---

## Using your Stereo DAB/FM Radio

### Let's get started

There are two different options to choose from:

**Strong stations:** The scan will only stop when a strong signal strength is received which should also result in a better audio quality. It is possible that the station you are scanning for may be missed using this option.

**All stations:** The scan will stop for every station it receives, even if the signal strength is poor.

2. Use the Prev or Next button to choose from the two options available and short press the Select button.

### Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between Stereo and Mono.

1. Long press the Menu button to enter the menu options.
2. Use the Prev or Next button to scroll to <Audio setting>. Short press the Select button.
3. There are now two different options of <Forced mono> and <Stereo allowed> and the current setting will have an '\*' in the display.
4. Use the Prev or Next button to choose from the two options available and short press the Select button.

### Storing an FM station preset

Your radio can store up to 30 FM stations in its preset memories for instant access to your favourite stations.

---

Note: When you store FM radio station presets, these do not overwrite your DAB station presets.

---

## Using your Stereo DAB/FM Radio

### Let's get started

1. Tune the Radio to the FM radio station that you wish to preset.
2. Long press the Preset button for approximately 2 seconds until Preset Store <1:(Empty)> is displayed.
3. Use the Prev or Next button to move to the preset location that you would like to store the radio station to (1-30).
4. Short press the Select button, the display will confirm Preset X stored, where 'X' is the number of the preset (1-30).

---

Note: If there is already an existing FM station stored under a preset, it will be over written when you store the new station.

---

### Tune to an FM preset station

In FM mode:

1. Short press the Preset button. Preset Recall <1:> is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
2. Use the Prev or Next button to move to the Preset location and station that you would like to listen to (1-10).
3. Short press the Select button. The radio will instantly tune to that station and begin to play.

---

Note: If no FM station has been stored under the preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

### FM display information

When listening to an FM station you can change the information that will appear on the second line of the display.

- Radiotext (RT) - This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
- Program Type (PTY) - Such as 'Rock', 'Pop', 'Talk' or 'News'

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

## Using your Stereo DAB/FM Radio

### Let's get started

- Station name or frequency - Such as BBC R4 or 93.30MHz
  - Audio mode – Stereo or Mono
  - Time and date - Supplied by the broadcaster.
1. Repeatedly short press the Menu/Info. button to cycle through the different information options.

### Setting the alarm

---

Note: Check that the radio has the correct time and date before you set an alarm.

---

1. Long press the Menu button to enter the menu options.
2. Short press the Prev button to scroll to <System>. Short press the Select button.
3. Short press the Next button to scroll to <Alarm>. Short press the Select button. Alarm 1 Setup is displayed (Short press the Next button to set Alarm 2). Short press the Select button.
4. Alarm 1 Wizard On time is displayed and the hour digits for the alarm will flash.
5. Use the Prev or Next button to scroll to the hour for the alarm and short press the Select button.
6. The minutes will now flash. Use the Prev or Next button to scroll to the minutes for the alarm and short press the Select button. The duration time will now flash.
7. Use the Prev or Next button to scroll to the duration for the alarm and short press the Select button.. You can choose from 15, 30, 45, 60 and 90 minutes. Short press the Select button. The source for the alarm will now flash.
8. Use the Prev or Next button to scroll to the sound source for the alarm. You can choose from Buzzer, DAB or FM. Short press the Select button.

---

Note: If you select DAB or FM radio for the alarm source, 'Last listened' will flash in the display. Short press the Select button and the last listened to radio station in DAB or FM, as appropriate, will be used for your alarm.

---

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.

## Using your Stereo DAB/FM Radio

### Let's get started

9. Use the Prev or Next button to scroll to the frequency for the alarm. You can choose from Daily, Once, Weekends or Weekdays. Short press the Select button.

---

Note: If you select 'Once', you will then be prompted to set the date for your alarm.

---

10. Short press the Prev or Next buttons to set the volume for your alarm. Short press the Select button. Alarm Saved is displayed

---

Note: Remember to set the alarm radio volume (using the Prev. or Next button) to one that will wake you. You will not be able to set the volume for less than 4 bars for this reason.

---

11. A bell icon will appear in the radio display, together with a '1' or '2' as appropriate, to confirm that an alarm has been set.

---

Note: If the time is not set or has failed to update from the radio signal, Invalid date will be displayed when you try to set the alarm. The radio will then prompt you to set the time. An alarm can only be set after the time has been set.

---

### Stop the Alarm

When the alarm sounds, short press Power button, Alarm off will be displayed. Alternatively, you can short press the Snooze button to Snooze (see Snooze function below).

---

Note: When you press power button to stop the alarm, the alarm symbol will remain in the display and the alarm will sound again at the same time the next day, unless it was set for 'Once' only.

---

### Snooze

When the alarm sounds you can short press the Snooze button to Snooze. Snooze will be displayed, followed by the snooze time countdown from 9 minutes, until the alarm sounds again.

## Using your Stereo DAB/FM Radio

### Let's get started

### Turn off the Alarm

Follow the steps for 'Setting an Alarm' and select 'Off' in step 4.

### Sleep timer

You can set your radio to switch to Standby mode automatically using the sleep timer. You can choose from Sleep off, 15, 30, 45, 60 and 90 minutes.

With your radio switched on (not in Standby mode):

1. Long press the Menu button to enter the menu options.
2. Short press the Prev button to scroll to <System>. Short press the Select button. <Sleep> is displayed. Short press the Select button.
3. Use Prev or Next button to scroll through the available options. Stop when the sleep time you would like is displayed and short press the Select button. <Sleep> will be displayed.
4. In the top right of the radio display the number of minutes until your radio will switch to Standby mode automatically will be displayed e.g. S90.

### Cancel the Sleep timer

With your radio switched on (not in Standby mode):

Follow the steps for 'Sleep timer' and select 'Sleep off' in step 3.



# Using your Stereo DAB/FM Radio

Let's get started

## Display backlight timeout

You can adjust the display backlight timeout. Options of permanently On, 10, 20, 30, 45, 60, 90, 120, and 180 seconds are available. The current setting will have an '\*' in the display.

With your radio switched on (not in Standby mode):

1. Long press the Menu button to enter the menu options.
2. Short press the Prev button to scroll to <System>. Short press the Select button. Use the Prev or Next button to scroll to <Backlight>. Short press the Select button. <Timeout> is displayed. Short press the Select button. Use the Prev or Next button to scroll through the available backlight timeout options of On, 10, 20, 30, 45, 60, 90, 120 or 180 seconds. Stop when the backlight timeout you would like is displayed and short press the Select button. <Timeout> will be displayed.

You can now use the Prev or Next button to scroll and press the Select button, as you did to set the Backlight timeout, to change the settings for the backlight brightness for the <Dim level> and <On level>. There are 3 options available, High, Medium and Low.

## Display language

You can change the display language of your radio, there are 4 options available; English, French, German and Italian. An '\*' will be displayed next to the current setting.

With your radio switched on (not in Standby mode):


1. Long press the Menu button to enter the menu options.
2. Short press the Prev button to scroll to <System>. Short press the Select button.
3. Use the Prev or Next button to scroll to <Language>. Short press the Select button.
4. Use the Prev or Next button to scroll to the language you would like. Short press the Select button.

This page is left intentionally blank

# Other information

4

This page is left intentionally blank

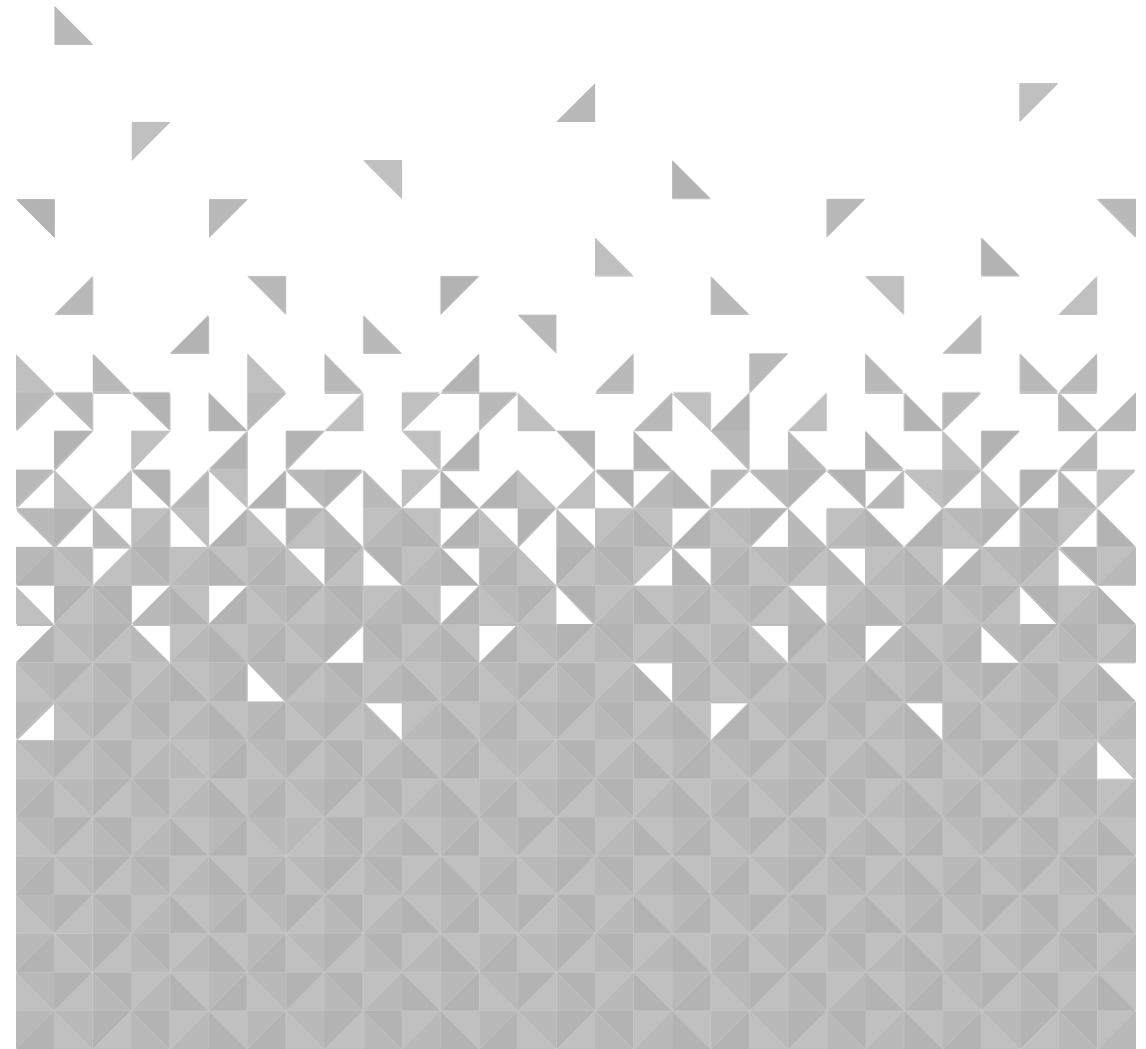

## Other information

### Helpful technical information

#### Software version

You can check the software version of your radio.

With your radio switched on (not in Standby mode):

1. Long press the Menu button to enter the menu options.
2. Short press the Prev button to scroll to <System>. Short press the Select button.
3. Use the Prev or Next button to scroll to <SW Version>. Short press the Select button.  
The software version will be displayed.

#### Factory reset

You can reset your radio and restore all of the original factory settings.

---

Note: If you reset your radio all of your stored station presets and the radio station list will be deleted.

---

With your radio switched on (not in Standby mode):

1. Long press the Menu button to enter the menu options.
2. Short press the Prev button to scroll to <System>. Short press the Select button.
3. Use the Prev or Next button to scroll to <Factory Reset>. Short press the Select button.  
Factory Reset? Yes <No> will be displayed.
4. Short press the Prev button to scroll to <Yes>. Short press the Select button.  
Restarting... will be displayed. After a few seconds your radio show Welcome to digital Radio and your radio is reset to default setting.

## Other information

### Helpful technical information

#### Technical specification

Power adaptor:	Output DC 6V 1A Input AC 100-240V, 50/60Hz
Audio output:	2 x 2W RMS
Batteries:	4 x 1.5V AA size (LR-6)
Frequency range:	
DAB:	Band III, 174 MHz to 240 MHz
FM:	87.5 MHz to 108 MHz
Dimension:	250*150*65 mm
Weight:	0.58 kg

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting


section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.

Product support

5



This page is left intentionally blank

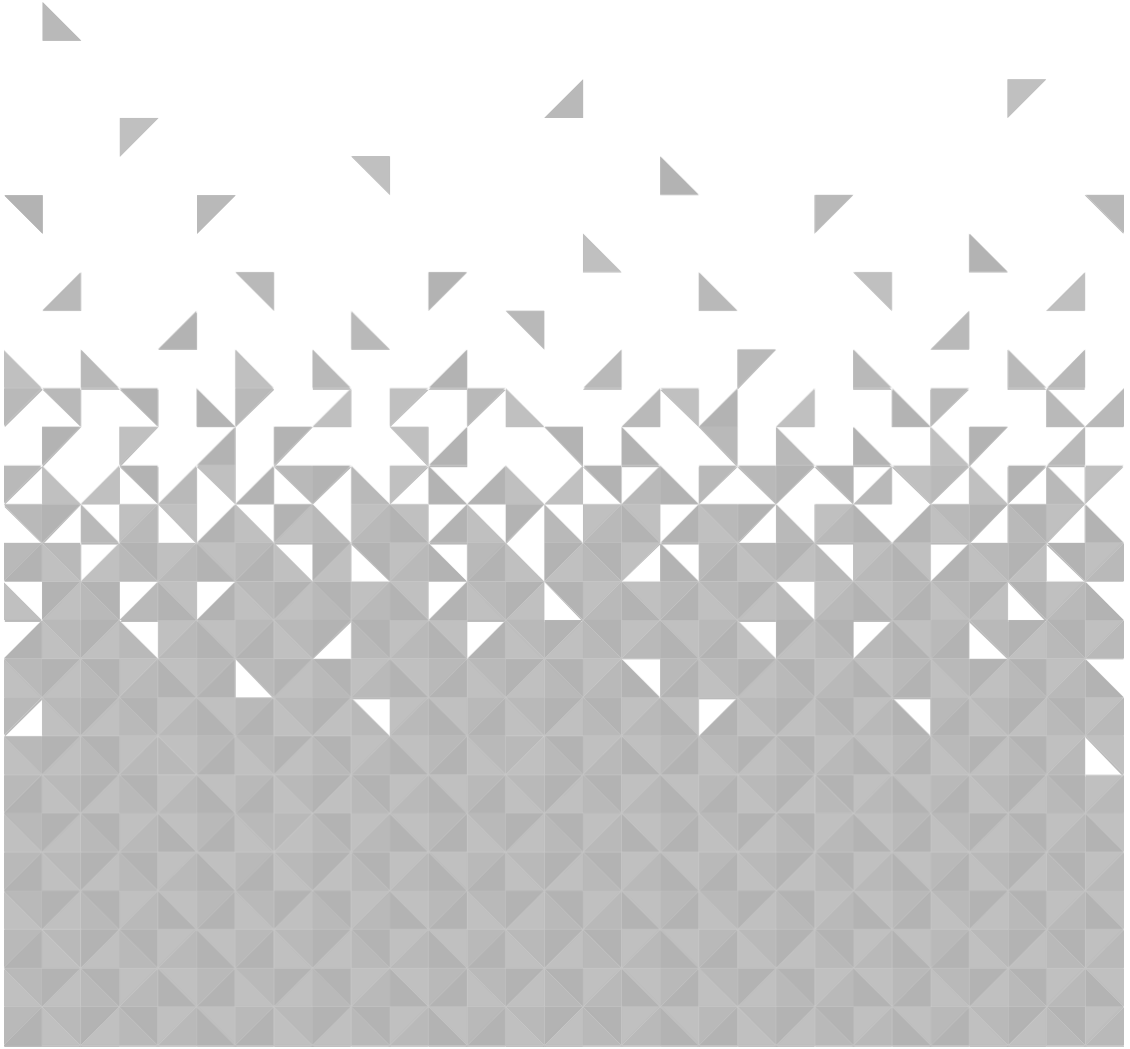

## Product support

Help is always at hand

### Troubleshooting

No sound / power:

- Adjust the volume.
- Check that the mains power wall socket is switched on and that your radio is not in Standby mode.
- If you have batteries fitted, they may be exhausted and need to be replaced. Please use only good quality AA size batteries.

Radio reception is poor:

- Make sure that you have fully extended the telescopic aerial.
- Rescan for radio stations, see pages 22 and 26.
- Try moving your radio to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your Radio, causing interference.
- Visit [www.digitalradionow.com](http://www.digitalradionow.com) for information about DAB reception in your area.

The function buttons do not respond:

- Check that the mains power lead is connected at the back of your radio and the mains power wall socket is switched on. Press and release the Power button.
- If you are using batteries, they may be exhausted and need to be replaced.
- Try a reset to factory defaults. See page 36.

---

Note: All of your settings, including the radio station list and any presets will be deleted when you reset the Radio.

---

## Product support

Help is always at hand

### Help and assistance

If you require any technical guidance or find that your Stereo DAB/FM Radio is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at [www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on 0345 600 3021\*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the base or rear of your product.

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.

## Product support

Help is always at hand

### Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

### Declaration of Conformance

Hereby, Argos Ltd, declares that this Stereo DAB/FM Radio is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

## Product support

Help is always at hand

# BUSH

### Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

#### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

#### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Ltd. 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 604 0105.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting

# BUSH

**Contact:**

[www.bush-support.com](http://www.bush-support.com)

Helpline: 0345 604 0105

Made in China

Imported for Argos Ltd, Milton Keynes, MK9 2NW

Guarantor: Argos Limited, 489-499 Avebury Blvd. Milton Keynes, MK9 2NW

All other brand names are registered trademarks of their respective owners

