



Attach the net (J) to the ring (H) by threading the net cord (R) through the LONG loops (Fig 5), starting at the rear of the ring. Space the loops evenly and tie the ends of the cord to the ring.

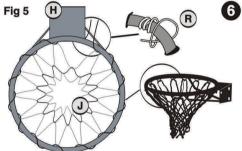


WARNING: Please use a minimum of two adults who are capable of safely handling the weight of this unit to complete this step.

Carefully lower the assembled upper unit frame (B) onto the lower assembled frame tube (D) and lock in place by securing the grub screw S as shown. (Fig 8) Be careful to avoid finger entrapment.

Attach frame B to part E to be able to connect the backboard to the rest of the frame lock in place by securing the screw V as shown (Fig 6). Attach the assembled ring (H) backboard (I) and top frame (B) together using bolt set N through all four holes as shown. (Fig 7)

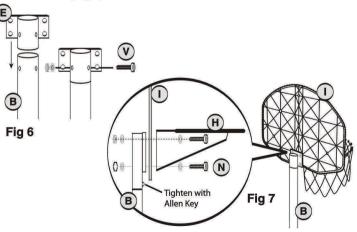

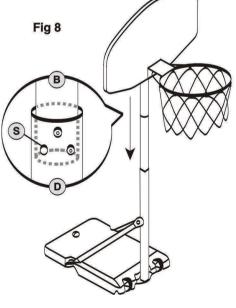



Debut Sports & Leisure Ltd Unit 1.9 Paintworks, Bath road, Bristol BS4 3EH Spare parts helpline: 0870 112 1928 Email: helpline@clickspares.co.uk

Please keep all the relevant information for future reference.

Carbrini Basketball Set Instructions

Part List

Junior Basketball Set

x 1


x 1




WARNING

A x 1 Base







· Do not hang or swing on the ring or use it

to "Slam Dunk" or anything similar where you may touch the ring.

Before assembly carefully choose the location of the finished unit. The chosen area should be flat, smooth and free from obstructions, gravel or sharp objects.

• This product should be assembled by two adults prior to use.

The base should be fully filled with either water or sand before assembly.

When moving the unit be careful not to cause damage by dragging the base.

This equipment is for home use only and it is not designed or intended for formal matches or competition.


Do not wear any type of jewellery (rings, watches, necklaces etc) while using this equipment. Such items can become caught against the rim or the net and cause serious injury.


Do not use this equipment during severe weather conditions as the unit may fall over. When severe weather is expected adjust the unit to its lowest height and store in a safe and secure

Check the equipment for loose and damaged parts prior to each use. If any problems are found discontinue use immediately.

This equipment must be assembled, disassembled and moved by a minimum of two adults capable of safely handling the weight off the unit.

WARNING: CHOKING HAZARD-This item contains small parts, Not suitable for children under 3 years old

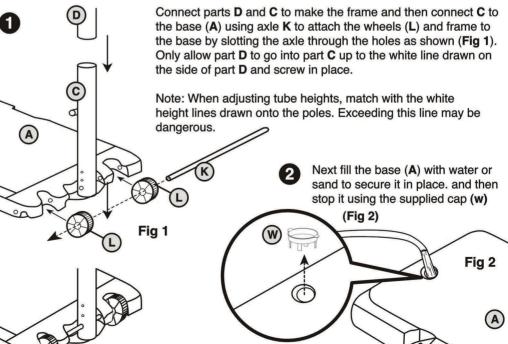

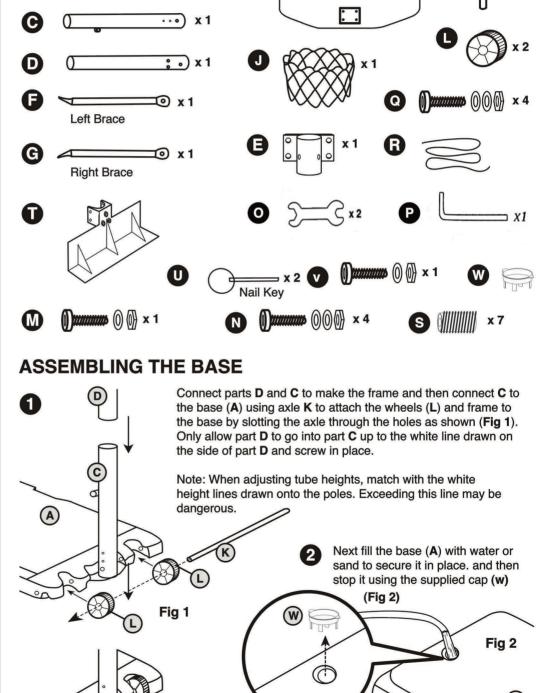

Model No. 1428

П