


Front side

17.5cm

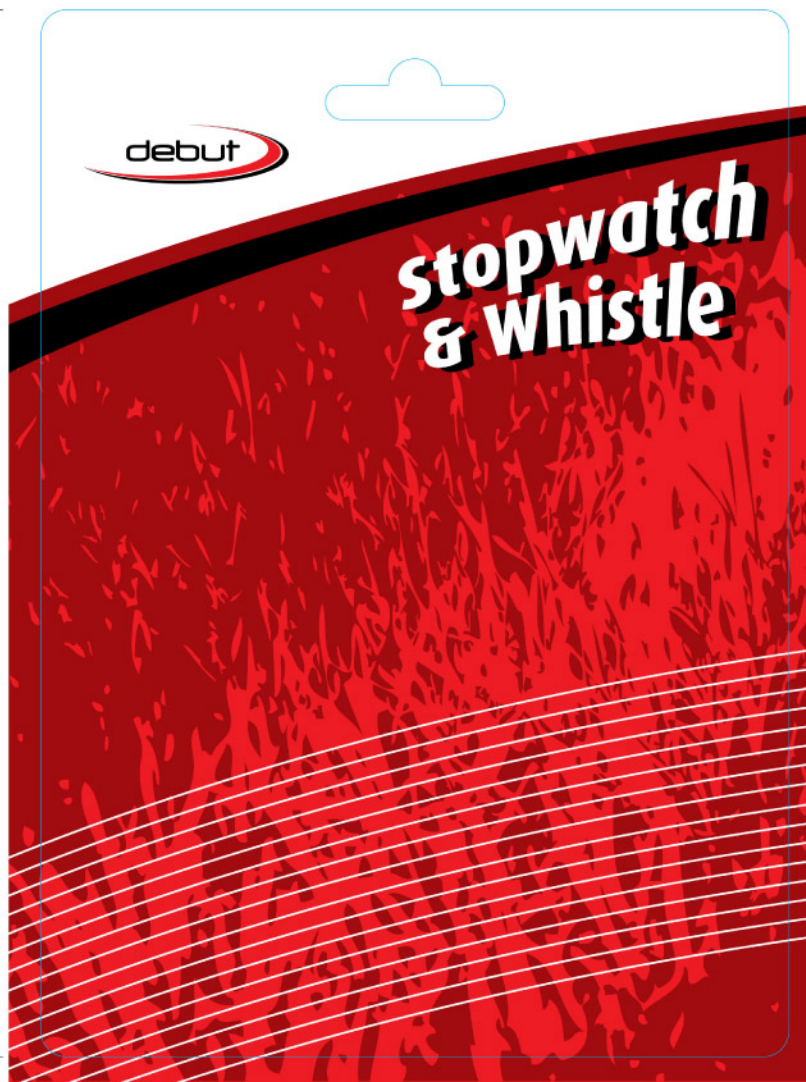

12.5cm

AE SPORTS GENERAL 3 / AE FOOTBALL
070/1282 246

BATCH CODE: 40026

INSTRUCTION MANUAL

FUNCTION READING

Normal display shows hour, minute, seconds and day of week
Push and hold A for alarm time
Push C to change mode
Push and hold B for month, date, day of week

IN STOPWATCH MODE

Push C for stop function
Push B for count & stop
Push A for lap function & reset

DAILY ALARM ON / OFF

To turn the daily alarm on and off:
In normal mode hold A then push C.
If the days appear then the chime is on, if the days disappear then the chime is off.

To turn the alarm on and off:
In normal mode hold A then push B.
If the alarm flag appears the alarm is on. If alarm flag disappears then the alarm is off.

DAILY ALARM TIME SETTING

Continually press C until the alarm time is showing and the hours and "MO" are flashing. Press B to change the selected digit and press A to select the next digit in sequence. Press C to accept and return to normal mode.

NORMAL TIME SETTING

Continually press C until the current time is showing and the seconds and "TU" are flashing. Press B to change the selected digit and press A to select the next digit in sequence. The sequence will let you select seconds, minutes, hours and date in that order. Once the time and date are set Press C to accept the changes. To switch the 12 / 24 hour clock, when setting the hour digit cycle through the maximum amount of hours and the display will change between AM/PM/24.

Model No. 1226



Product shown for illustration purposes only



Debut Sport & Leisure Unit 2 Prospect House, Sheeps Road, Bristol BS3 4EG
Spareparts helpline: 0870 112 1928 Email: helpline@clickspares.co.uk

Please keep all the relevant information for future reference.

Issue 1809/04