
12V Electric Scooter

Assembly & User Instructions - Please retain for future reference.

Contents

Page 2 -3	Safety Information
Page 3	Parts
Page 4	Assembly
Page 5	User Instructions
Page 5	Care & Maintenance
Page 6	Battery Charging
Page 7	Repair & Maintenance
Page 8	Trouble Shooting

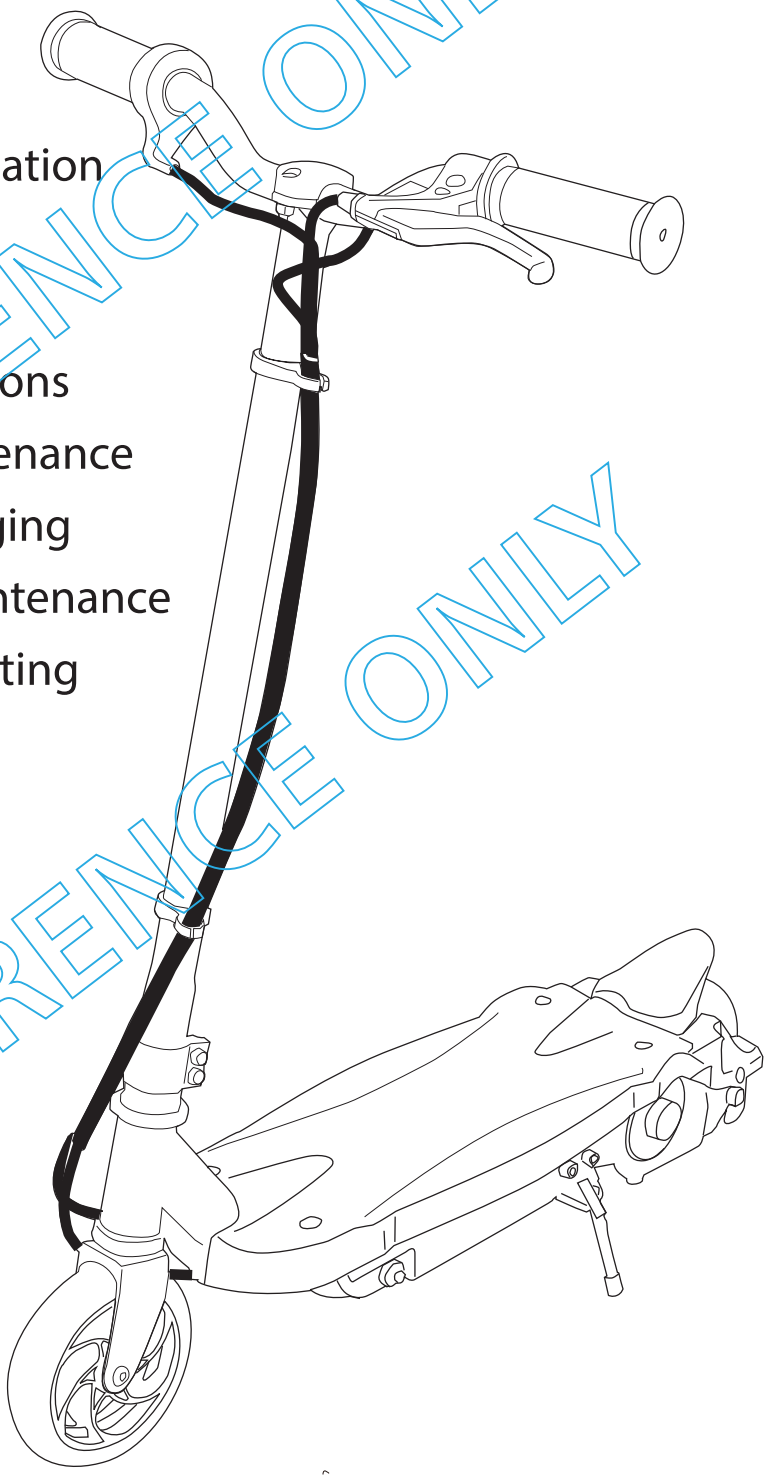

FOR REFERENCE ONLY

IMPORTANT

Minimum user age: 8 years
Maximum user weight: 50kg

IMPORTANT - Please read these instructions fully before assembly.

CUSTOMER SERVICES

Great care has been taken to ensure that this item has reached you in good condition.
Should you have a query please call 0121 748 8017.

06.2018- ISSUE 1

Safety Information

IMPORTANT - Please read these instructions fully before assembly.

General Safety

- WARNING: Riding an electric scooter can be a dangerous activity. Certain conditions may cause components to fail without fault of the manufacturer. The scooter can and is intended to move and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such a thing does occur you could become seriously injured or die, even when using safety equipment and other safety precautions. RIDE AT YOUR OWN RISK AND ALWAYS USE COMMON SENSE.
- This manual contains many warnings and cautions concerning the consequences of failing to inspect, maintain or properly use your electric scooter. Since any incident can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned in this manual.
- This manual contains extremely important safety information. It is your responsibility to completely review this information and make sure that all riders understand warnings, cautions, instructions and safety topics and assure that all riders are able to safely and responsibly use this scooter. The manufacturer advises that you periodically review and reinforce all the information in this manual with all riders and that you inspect and maintain your scooter to ensure their safety.
- This product must be assembled by an adult.
- Read all instructions before using the vehicle for the first time.
- Retain this leaflet for future reference.
- Correct assembly of this product is vital. Incorrect assembly can cause harm to the child. Please check the product before each use.
- This product should be used caution since skill is required to avoid falling or collision causing injury to user of third parties.
- Not for children with a body weight of over 50kg. Rider weight does not always mean a person's size is appropriate to fit or maintain control of the scooter.
- One child at a time.
- Keep away from small children and remember it is intended for use only by persons who are, at minimum, completely competent and comfortable. whilst operating this product.
- WARNING: Not for children under 3 years. Long cord. Strangulation hazard.
- The recommended rider age is 8 years and older. Any rider that is unable to fit comfortably on the scooter should never attempt to ride it. A parent's decision to allow their child to use the scoter should be based on the child's maturity, skill and ability to follow rules.
- Adult supervision is required for young children.
- WARNING: Protective equipment should be worn.
- Not to be used in traffic.
- It is recommended to use a protective helmet, knee and elbow pads and shoes when using this product.
- Only use the this product on smooth, dry and level surfaces; pavements, garden or playgrounds.
- Never use on busy streets, roads or highways.
- Never use near swimming pools or other bodies of water.
- Never ride in the dark or in dimly lit areas. Never ride in hilly areas or on steep slopes.
- Clean the vehicle with a damp cloth only and never submerge the vehicle in water or spray vehicle with water from a hose.
- Do not touch the motor or brakes on the scooter when in use or directly after use as these parts can become extremely hot.
- Maximum operating speed is 12 km/h.

Before use

- Before first use, the battery should be recharged for 8-12 hours
- The charger is not a toy
- The rechargeable battery is only to be charged by an adult
- Do not allow children to play with the charger or to recharge the battery
- Disconnect the battery charger and unplug from the scooter when not charging
- Never charge for more than 15 hours as this will shorten the battery lifetime
- It is normal for the charger to feel warm during charging but if the charger feels very hot, stop charging, unplug the charger and carefully check the battery and charger
- Fully charge the scooter before storing it for a long period
- Replacement batteries are available at a small fee, please contact customer services for prices and availability
- Recharge the product every 3 months when not in use to prolong the battery lifetime
- Non-rechargeable batteries are not to be recharged
- Different types of batteries or new and used batteries are not to be mixed
- Only batteries of the same or equivalent type as recommended are to be used
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- Do not store the product in freezing or below freezing temperatures – low temperatures will permanently damage the battery
- The supply terminals are not to be short-circuited
- Before each use, the operator shall perform the pre-operational checks specified by the manufacturer:
  - That any axle guards, belt guards or other covers or guards supplied are in place and in serviceable condition
  - Ensure that the brake function is functioning properly
  - Ensure that all components are properly secured and are functioning according to the manufacturer's specifications
  - Inspect wheels for excess wear and replace if necessary
- Components should be maintained and repaired in accordance with the manufacturers authorized replacement parts with installation performed by skilled individuals or dealers
- Persons with the following conditions are cautioned not to operate
  - Heart conditions
  - Pregnant women
  - Head, back or neck problems including prior surgery to these areas
  - Mental of physical conditions that might make them susceptible to injury or impair their physical dexterity or capability to understand and follow all of the safety instructions

- Charging time: 8-12 hours
- Estimated playtime: 40 minutes
- Estimated battery lifetime: 1 – 2 years dependent on conditions and use
- Number of recharges: Up to 200 times

FOR REFERENCE ONLY

During use

- Protective equipment should be worn
- Maintain a hold with both hands on the handlebars at all times
- Keep your fingers and any other body parts away from the belt, motor, steering system, wheels and any other moving component
- Never ride while using a cell phone or wearing headphones
- Never hitch on to or with another vehicle to pull along
- Never immerse the scooter in water; electrical and drive components could be damaged by water or create other possible safe conditions
- Do not activate the speed control on the hand grip unless you are on the scooter and in a safe, outdoor environment that is suitable for riding
- Only use this product on smooth, dry and level surfaces
- Never use on busy streets, roads or highways
- This product should be used caution since skill is required to avoid falling or collision causing injury to user of third parties
- Do not attempt or perform any stunts or tricks on this electric scooter. This product is not made to withstand abuse from jumping, curb grinding or any other type of misuse or stunts

FAILURE TO COMPLY WITH THE WARNINGS LISTED ABOVE INCREASES RISK OF POTENTIAL SERIOUS INJURY.
USE THE APPROPRIATE CAUTION WHEN RIDING AND ALWAYS WEAR PROTECTIVE GEAR.

Parts

Please check you have all the parts and fittings listed below

BATTERIES


1 x 12V 6.5AH rechargeable battery (included)


TOOLS REQUIRED


8mm/10mm Spanner
5mm Allen Key




1. Handlebar Steering Tube
2. Handlebar Clamp
3. Large Black Bolts x 2 (already on handlebar clamp)
4. Nuts x 2 (already on handlebar clamp)
5. Deck
6. Handlebar assembly
7. Charger




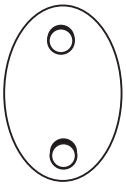

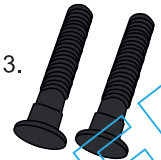



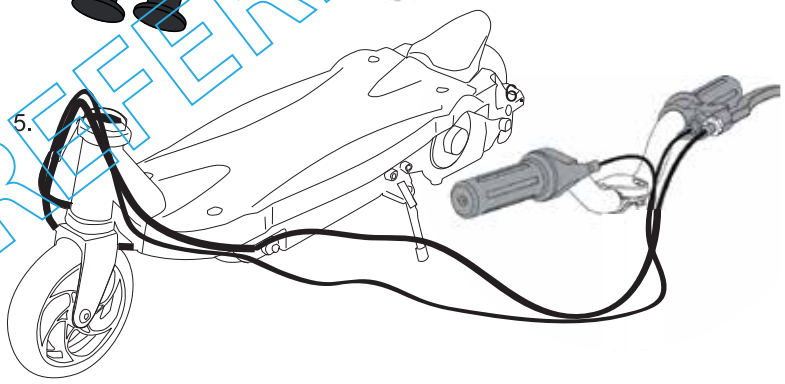

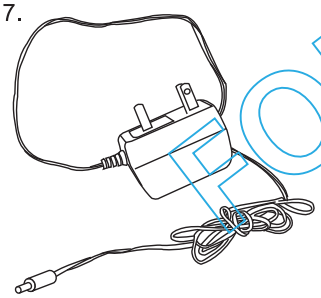

FOR REFERENCE ONLY
FOR REFERENCE ONLY
FOR REFERENCE ONLY


Assembly Instructions

Assembling the Handlebars

Tools required: 5mm Allen Key, 10mm Spanner

Step 1


Depress the push button located on the rear of the fork and insert the handlebar steer tube onto the fork. The push button should align with the locator hole in the handlebar steer tube and lock the steer tube securely in place.

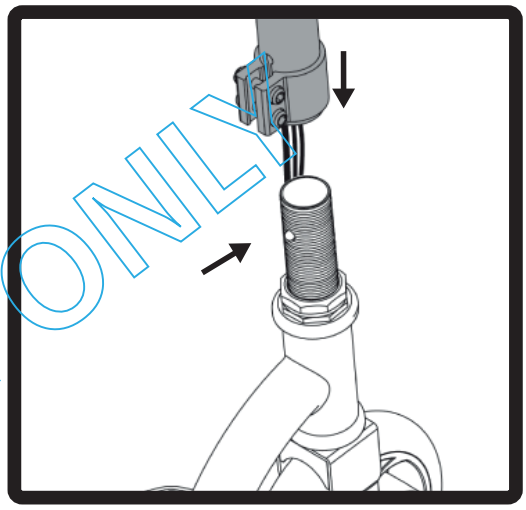

Step 2


Tighten the upper bolt one quarter of a turn and then the lower bolt one quarter of a turn using the allen key provided. Repeat until the clamp is tight and the steering tube is secure.

WARNING: Failure to tighten the clamp fully will result in the handlebars not being secure and the scooter will be unsafe to ride. Overly tightening one bolt before the other will make it impossible to tighten the clamp fully.

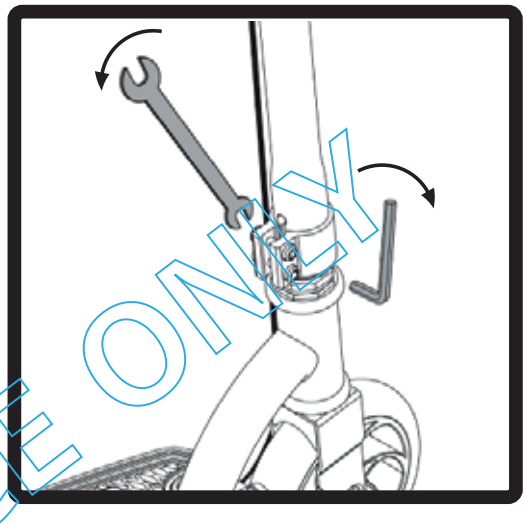

Step 3

Alight handlebars (10) both vertically and horizontally onto the handlebar steering tube clamp (1). Install handlebar clamp and hardware (4, 5, 6) and tighten evenly and securely with the 5mm allen key and 10mm spanner.

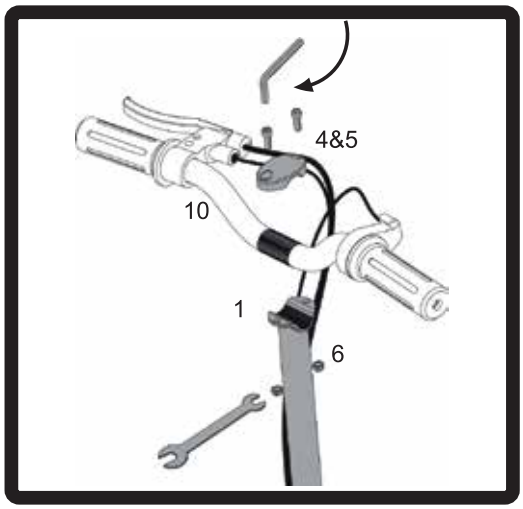


FOR REFERENCE ONLY
FOR REFERENCE ONLY

User Instructions


Rules of using the Electric Scooter

Important: Adult supervision is required.
Not to be used in traffic

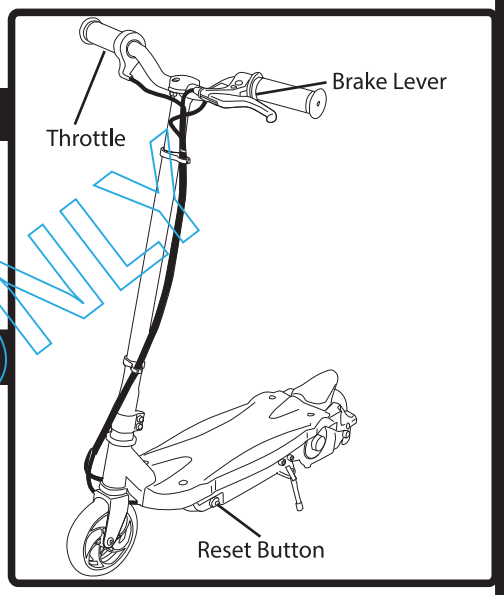

Using the Electric Scooter

- Twist the throttle and push the scooter forwards to start moving.
- Release the throttle and press the handbrake lever to stop.
- The electric scooter has a safety device. When the motor is overloaded, it will trip and turn off the power. If it happens, press the reset buton to reset the circuit.
- Maximum user weight of 50kg should not be exceeded.
- Read all instructions before using the vehicle for the first time.
- Keep instructions for future reference.
- This product must be assembled by an adult.
- Not for use on busy streets, roads or highways.
- Only use this product on smooth, dry and flat surfaces
- Do not overload the vehicle - only one child at a time.
- Correct assembly of this product is vital. Incorrect assembly can cause harm to the child. Please check the product before each use.
- This product should be used with caution since skill is required to avoid falling or collision causing injury to the user or third parties.

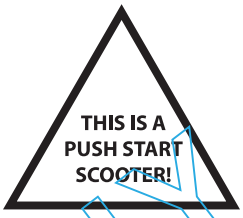

Twist the throttle and push the scooter forwards to start moving.

Care & Maintenance


General

The Electric Scooter was designed and manufactured with quality materials and craftsmanship.

Inspect regularly for:

- Examine the charger regularly for damage to the cord, plug, enclosure and other parts. If such damage is found, stop using the charger until it is repaired.
- Product condition should be checked regularly, especially parts which are exposed to wear and tear.
- That any axle guards, belt guards or other covers or guards supplied are in place and in serviceable condition
- Ensure that the brake function is functioning properly
- Ensure that all components are properly secured and are functioning according to the manufacturer's specifications
- Inspect wheels for excess wear and replace if necessary

Battery Care & Disposal Information

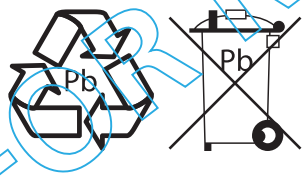

Do not store the battery in temperatures above 70°F (21°C) or below 32°F (0°C).

Waste electrical products and batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities see www.recycle-more.com.uk

FOR REFERENCE ONLY


Charging the Battery

Charging the Electric Scooter

WARNING: Batteries must be fully charged before you ride your electric scooter

Required components: Battery charger•
Initial battery charge time: Up to 14 hours•
Recharges after initial charge- Up to 8-12 hours•


When scooter is not in regular use batteries need to be charged once every three months to maximize performance.

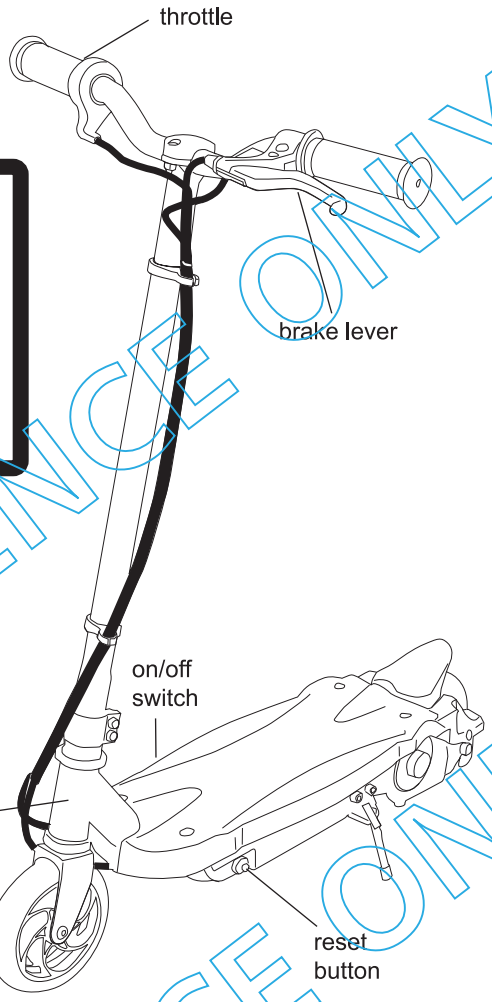

Step 1


Locate the charging port under the deck.



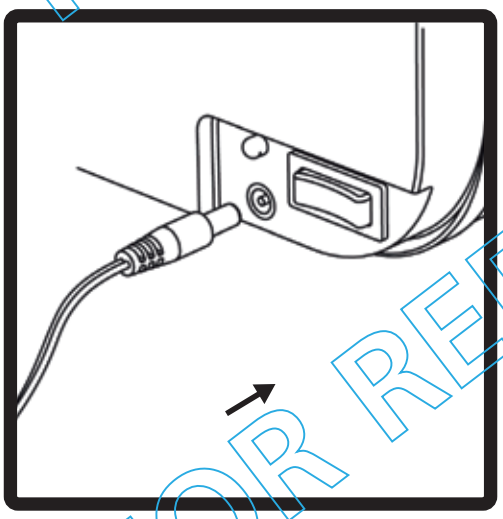

Step 2

Make sure power switch is in the OFF position before plugging in the charger. Insert charger into charging port on the right side of the battery box.

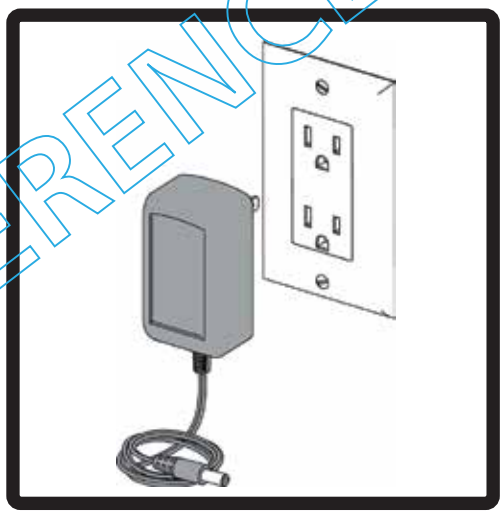

Step 3

Plug the battery charger into a wall power outlet. The light on the charger housing should illuminate. Red LED light indicates battery is charging and a green LED light indicates battery is fully charged.

WARNING: Do not use this product for the first time until you have charged the battery for at least 8-12 hours Failure to follow these instructions may damage your product.

Note: The charger has a small window with one LED light that indicates the charge status. Refer to the illustration on the charger unit for the actual “charging” and “charged” status indication. Your charger may get warm during use; this is normal and is no cause for concern.

Note: Batteries must be recharged at least every three months even when the scooter is not in use. Failure to do so may result in batteries that will no longer accept a charge.


FOR REFERENCE ONLY
FOR REFERENCE ONLY
FOR REFERENCE ONLY

Repair & Maintenance

Adjusting the Brakes


WARNING: Turn the power switch "OFF" before conducting any maintenance procedures.

Required components: 10mm Spanner

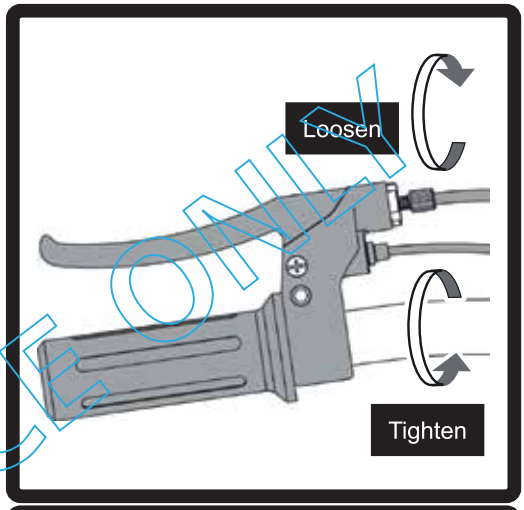

Step 1

To adjust the brake cable thread clockwise (loosen) or anti-clockwise (tighten) the adjuster barrel on the brake lever. Only turn the barrel in small increments until the desired adjustment is reached. If brake continues to need further adjustment proceed to the next step.

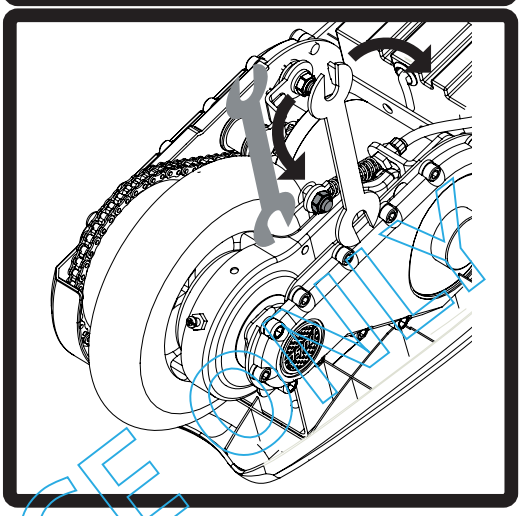

Step 2

If the brake cable is still either too tight or too loose use a 10mm spanner to loosen the brake cable pinch bolt for further adjustment on the cable. Ensure that the 10mm nut is securely tightened after the adjustment is made.

Hardware Maintenance

Brake

Check the brakes for proper function. When you squeeze the lever, the brake should provide positive braking action. When you apply the brake with the speed control on, the brake cut off switch should stop the motor. Make sure that the brakes are not rubbing.

Frame, Fork and Handlebars

Check for cracks or broken connections. Although broken frames are rare, it is possible for an aggressive rider to run into a curb or wall and bend or break a frame. Get into the habit of inspecting your scooter on a regular basis

Tyres

Periodically inspect the wheels for excess wear.

Safety Gear

Always wear proper protective gear such as an approved safety helmet. Elbow pads and knee pads are recommended. Shoes (lace up shoes with rubber soles), never ride barefooted or in sandals, and keep shoelaces tied and out of the way of the wheels, motor and drive system.

Battery

Make sure the power switch is turned off whenever the scooter is not in use. Never store the product in freezing or below freezing temperatures! Freezing will permanently damage the battery.

FOR REFERENCE ONLY
FOR REFERENCE ONLY

Trouble shooting

Problem	Possible Cause	Solution
Scooter will not run.	Battery is not charged.	Fully charge the battery. First charge should be 14 hours and up to 8-12 hours for recharges.
	Wires or connectors are loose or unplugged.	Remove the top of the deck. Check and ensure the battery wires and all connectors are tightly connected.
	The scooter is a push start design.	When the throttle is twisted, the user will also need to push the scooter forwards in order to start the motor.
	Charger is connected.	Unplug and remove the charger from the scooter.
Scooter run time is short.	Battery requires charging.	Fully charge the battery. First charge should be 14 hours and up to 8-12 hours for recharges.
		Check to ensure that battery charger is tightly plugged into both the wall and the scooter.
	Battery will not accept full charge.	Make sure power flow to the wall outlet is on.
		Battery may need to be replaced. Even with proper care, rechargeable batteries do not last forever. The average rechargeable battery life is 1 to 2 years depending on scooter conditions and use. Contact customer services for replacement batteries
	Brakes are not adjusted correctly.	Refer to the instructions on adjusting the brakes .
Scooter suddenly stops working.	Reset button has tripped.	The reset button (on the left side of the battery box) will automatically trip and turn off the power if the motor is overloaded.
		An excessive overload (steep incline or too heavy of a rider) could have caused the motor to overheat and tripped the breaker. If this occurs (scooter suddenly stops running) wait a few seconds and then push the reset button in to reset the circuit. Avoid repeatedly tripping the breaker.
		Check all wires and connectors to make sure they are connected and tight.
Scooter runs sluggishly.	Brakes are not adjusted correctly.	Refer to the instructions on adjusting the brakes.
	Scooter is overloaded.	Make sure you do not overload the scooter by exceeding the 50kg maximum weight limit, going up steep inclines or towing objects behind the scooter. Avoid overloading the scooter as this will prematurely wear out the batteries and componentry.
	Unsuitable riding conditions.	Ride only on solid, flat, clean and dry surfaces such as pavement or level ground.





Made in China to European Safety Standards.

The CE mark denotes compliance with the standards laid down by the EC (European Community).

CUSTOMER HELPLINE

MV has taken great care to ensure that this product has reached you in good condition. Should you have a query, please contact:
customer.services@mvsports.com
where your query will be dealt with promptly.
Alternatively, you can call on 0121 748 8017.

DISTRIBUTED BY

MV SPORTS & LEISURE LTD
35 Tameside Drive • Castle Bromwich
Birmingham • B35 7AG • UK
www.mvsports.com

FOR REFERENCE ONLY
FOR REFERENCE ONLY