
MEET YOUR ECHO SHOW 15

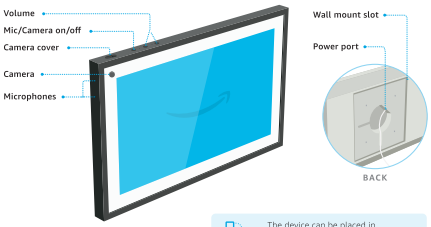

The device can be placed in landscape or portrait orientation.

BEFORE MOUNTING YOUR DEVICE

TIPS FOR MOUNTING ON THE WALL

- Consider the height of everyone using the device. We recommend placing the device at eye level.
- Make sure there's enough room to mount the device in both orientations.
- Don't drill holes over studs, electrical wiring or piping.
- Before mounting, unplug the device from electrical socket and keep it away from water.

TOOLS YOU'LL NEED

- Electric drill
  - *8 mm (or 5/16")*
  - *Phillips #2 screwdriver bit*
- Hammer
- Spirit level or level app
- Wall-safe tape

ALSO IN THE BOX



Included screws and fixings are recommended for plasterboard, brick, concrete or tile surfaces.


MOUNTING YOUR DEVICE ON THE WALL

1 LEVEL AND TAPE TEMPLATE TO THE WALL

- Use the mounting tips and the included mounting template to identify where to mount your device.
- Place the template on the wall in your chosen orientation.
- Use a spirit level or a level app on your phone to level the template.
- Tape the template in place.

2 DRILL HOLES AND INSTALL FIXINGS

- Using an electric drill with an 8 mm (5/16") drill bit, drill through the designated holes in the template. Remove template after drilling holes.
- Slowly hammer each of the 4 fixings into the holes until they are flat against the wall.

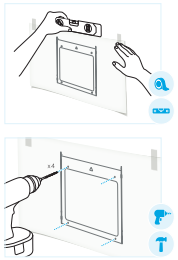

3 INSTALL WALL MOUNT


Place the wall mount against the wall, aligning the 4 holes with the installed fixings. With the Phillips driver bit, drive the screws through the wall mount holes until they are flat against the wall mount.

4 PLUG SUPPLIED POWER CORD INTO DEVICE

Once the device is mounted on the wall, you won't be able to access its power port. **DO NOT** plug it into an electrical socket yet.

5 SLIDE DEVICE ONTO MOUNT

Place the device flat over the top of the wall mount and slide it down, ensuring that all 4 hooks in the wall mount are engaged with the device. Make sure the device is placed with the camera at the top.

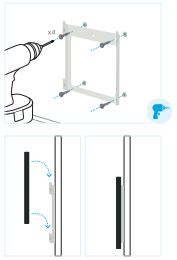

To change the device's orientation, unhook it from the wall mount and remount it the other way.

SET UP YOUR ECHO SHOW 15

1. HAVE YOUR WI-FI AND AMAZON PASSWORDS READY
During setup, you will connect to the internet and sign into your Amazon account.

2. PLUG ECHO SHOW 15 INTO AN ELECTRICAL SOCKET
Use the included power adaptor. In about a minute, the display will turn on and Alexa will greet you.

3. FOLLOW THE ON-SCREEN SETUP
Log in with an existing Amazon account username and password, or create a new account.

4. DOWNLOAD THE LATEST VERSION OF THE AMAZON ALEXA APP
The app helps you get more out of your Echo Show 15. It's where you set up calling and messaging and manage music, lists, settings and news.

EXPLORE YOUR ECHO SHOW 15

TO ACCESS SETTINGS AND SHORTCUTS
Swipe down from the top edge of the screen.


TO ACCESS YOUR WIDGETS
In landscape orientation, swipe left from right of the screen.

In portrait orientation, swipe up from the bottom edge of the screen.



THINGS TO TRY WITH ALEXA

Try asking, ***"Alexa, what can you do?"***

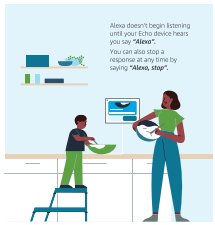

STAY ORGANISED
"Alexa, what's on the calendar today?"
"Alexa, remind me to call the dentist at 8 a.m. tomorrow."
"Alexa, add laundry to my to-do list."

GET COOKING
"Alexa, what should I eat?"
"Alexa, add milk to my shopping list."
"Alexa, show me dinner recipes."

WATCH & UNWIND
"Alexa, show me new TV programmes."
"Alexa, play the news."
"Alexa, show my photos."

CONTROL YOUR SMART HOME
"Alexa, dim the Living Room lights."
"Alexa, show me the front door."

DISCOVER MORE
"Alexa, call Mum."
"Alexa, open Prime Video."

Some features may require customisation in the Alexa app, a separate subscription, or an additional compatible smart home device. You can find more examples and tips in the Alexa app.

PRIVACY AND TROUBLESHOOTING

PRIVACY CONTROLS

- Turn the camera and mics off by pressing the Microphone/Camera on/off button.
- Close the camera easily with the built-in cover.
- See when Alexa is recording and sending your request to Amazon's secure cloud with the blue indicator light.

MANAGE YOUR VOICE HISTORY
You can view, hear and delete the recordings associated with your account in the Alexa app at any time. To delete your voice recordings, try saying:
"Alexa, delete what I just said."
"Alexa, delete everything I've ever said."

GIVE US YOUR FEEDBACK
Alexa is always getting smarter and adding new skills. To send us feedback about your experiences with Alexa, use the Alexa app, visit amazon.com/devicesupport, or say:
"Alexa, I have feedback."

TROUBLESHOOTING
For help and troubleshooting, go to Help & Feedback in the Alexa app or visit amazon.com/devicesupport.

You have control over your Alexa experience. Explore more at amazon.co.uk/alexaprivacy.