Tommee Tippee
BORN 1965

Baby Food Blender

EN | IMPORTANT WARNINGS!
These instructions can also be found at www.tommeetippee.com
Keep this instruction sheet for future reference as it includes important information. This appliance is intended for household use only. Do not use outdoors. Before plugging in the blender for the first time ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit. Do not immerse in water. To protect against fire, electric shock and injury to persons do not immerse cord, plugs or other parts of the unit in water or other liquid. Misuse of the product may result in the risk of fire, electric shock, and/or personal injury. Cleaning and user maintenance shall not be made by children. Keep the appliance and its cord out of reach of children. Do not let the cord hang over edge of the kitchen work surface or touch hot surfaces. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance. User maintenance other than cleaning is not required for this product. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If the supply cord is damaged it must be changed by a qualified person in order to avoid hazard. If within a retail warranty period this product should be exchanged at place of purchase, the manufacturer will then be made aware. For questions or support visit our website www.tommeetippee.com. Always use on a flat heat resistant kitchen surface. Do not move appliance when in use. Do not use any accessories other than those supplied with this appliance. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use. Allow to cool before putting on or taking off parts and use and after every use wash the bowl, silicone seal and bowl lid in warm soapy water or use a dishwasher (top shelf only) and dry thoroughly. Wash the knife blade in warm soapy water and dry thoroughly. The knife blade is not dishwasher safe. Handle the knife blade carefully as it is extremely sharp. Care shall be taken when handling the sharp knife blades, emptying the bowl and during cleaning. Never leave the appliance running whilst empty. Do not attempt to repair the appliance yourself. Do not put any utensils into the blender when the blender is turned on. Make sure that the blade has stopped turning completely before removing the bowl lid. Do not fill the unit past the MAX line. Do not put in the microwave. Do not sterilise. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to sudden steaming. Regularly check the cord and plug for signs of damage, if visible remove from use immediately.
Before first use and after every use, wash the bowl, lid and knife blade in warm soapy water and dry thoroughly.

WARNING! Do not place the blade into the motor unit.
DO NOT ASSEMBLE / DISASSEMBLE BLADES WHEN PLUGGED IN.
BE CAREFUL NOT TO TOUCH THE BLADE AS IT IS EXTREMELY SHARP.
The bowl and lid are dishwasher safe (top shelf only).
The knife blade is not dishwasher safe.
Wipe the motor unit with a damp cloth but DO NOT IMMERSE IN WATER. The department of health recommends that solid food should not be introduced before 6 months. Although you can start earlier (but not before 4 months) if advised by your health visitor or GP.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT (WEEE)
This symbol means that your product shall be disposed of separately from household waste in accordance with local laws and regulations. When this product is ready for disposal, take it to a collection point designated by local authorities. Separating and recycling of your product at the time of disposal will help conserve natural resources and ensure that the product is recycled in a manner that protects human health and the environment. Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

WARNING! After operating 4 cycles (each cycle is 30 seconds), let it cool down to room temperature before operating it again.
Keep hands and utensils away from the cutting blade while chopping food.

INGREDIENTS	RECCOMMENDED QTY	PREP	BLENDING TIMES
Carrot	200g (20x20mm)	Add 20ml of water to blend smoothly	30 seconds
Tomatoes	150g	1 or 2 cut into 4 pieces	15 seconds
Broccoli	200g (15x15mm)	Cut into small pieces	15 seconds
Courgette	200g (15x15mm)		
Pumpkin	200g (15x15mm)		
Beef	200g	Cut into small pieces and make sure bones have been removed	30 seconds
Chicken	200g		

All IP rights held by Mayborn (UK) Limited and/or its affiliates. TOMMEE TIPPEE®. Copyright © 2026.


Model: WX-302E-D 220-240V~ 50-60Hz 200W
Complies with EN 14350 and European Safety Standard EN 14350.
Made in China.

Mayborn (UK) Limited, Mayborn House, Balliol Business Park, Newcastle Upon Tyne, NE12 8EW, UNITED KINGDOM.
EU Representative, Mayborn France Sarl, 56 Rue de Paris, Boulogne Billancourt, 92100, FRANCE.


Any questions?
Visit our website:
tommeetippee.com

447851 W1

A. Top Push Button
B. Motor unit
C. Bowl lid
D. Silicone sealing ring
E. Blender blade
F. Glass Bowl
G. Non-slip silicone base

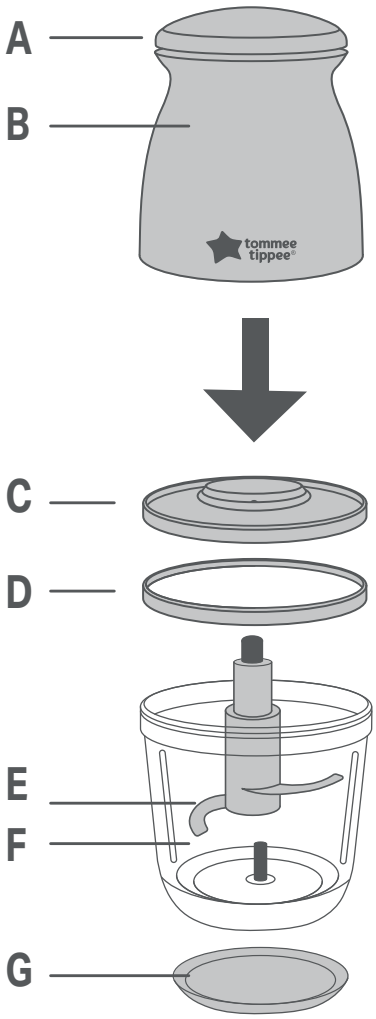


WARNING! BLADE AND LID MUST BE ASSEMBLED BEFORE STARTING THE MOTOR

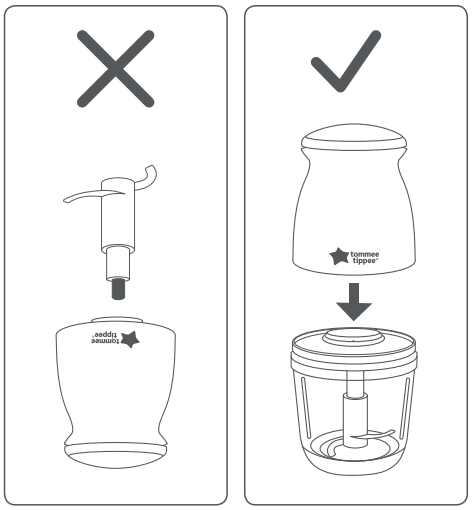


WARNING!

- **DO NOT PLACE THE BLADE INTO THE MOTOR UNIT.**
- **DO NOT ASSEMBLE / DISASSEMBLE BLADES WHEN PLUGGED IN.**
- Parts **C, D, E, F** and **G** must be assembled before attaching the motor **B.**
- Be careful not to touch the blade as it is extremely sharp.


HOW TO ASSEMBLE

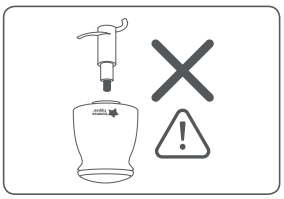


DO NOT ASSEMBLE/ DISASSEMBLE BLADES WHEN PLUGGED IN.

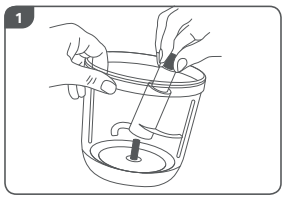


1. Slide the knife blade down over the shaft. WARNING! Handle the knife blade carefully as it is extremely sharp.

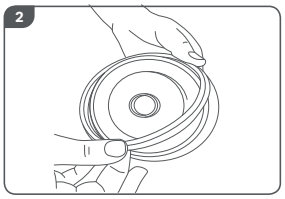

2. Stretch and attach the silicone sealing ring around the outside of the bowl lid. Make sure the flat side sits against the lid.

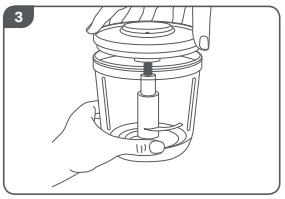

3. Insert the lid **with the sealing ring** into the bowl. Make sure to press firmly to make sure the lid is sealed correctly.

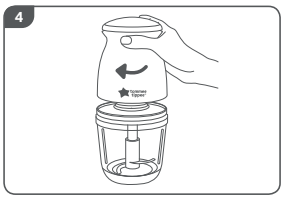


4. Lift the motor unit and place on top of the bowl with the lid. Turn until it drops into place.

HOW TO USE




WARNING! The motor unit does not attach to the glass bowl, please ensure you hold and lift the blender with both hands when handling or moving the blender.

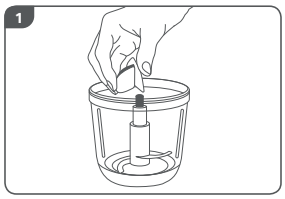


1. Remove the lid and place the food in the bowl. Do not fill the unit past the '200 ml'. To prevent the content overflowing, make sure to fill the bowl up to '200ml'. This appliance is intended for processing small quantities of food. Replace the lid.



2. Lift the motor unit and place on top of the bowl with the lid. Turn until it drops into place. **Now you can plug in the motor.**

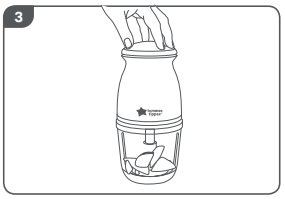

3. Simply push the top button to activate the blades. Keep it pressed to blend the food. **Do not keep the top button pressed for more than 30 seconds. If it is operated for more than 30 seconds let the unit cool down for at least 2 minutes before operating it again.**

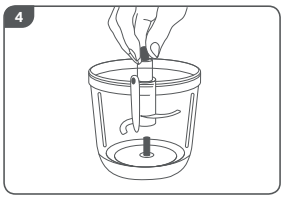

4. Make sure that the blade has stopped turning completely before removing the lid. Unplug the unit, remove the lid and remove the blender blade. Carefully pull the knife blade straight up. Empty the food from the bowl. Do not use the food blender bowl for storing food.

WARNING! After operating 4 cycles, let it cool down to room temperature before operating it again.
Keep hands and utensils away from the cutting blade while chopping food.

Please refer to the official website for recipes.

Tommee Tippee
BORN 1965

خلاط أطعمة الأطفال

!تحذيرات مهمة

يمكن العثور على هذه التعليمات أيضًا على www.tommeetippee.com

احتفظ بهذه الورقة الخاصة بالتعليمات للرجوع إليها مستقبلا نظرًا لاحتوائها على معلومات مهمة
صُمم هذا الجهاز لغرض الاستخدام المنزلي فحسب
لا يُستخدم خارج المنزل
قبل توصيل الخلاط بالكهرباء للمرة الأولى، تأكد من توافق الجهد الكهربائي مع مصدر الإمداد الكهربائي الخاص بك عن طريق التحقق من الملصق الموجود على قاعدة الوحدة
تجنب الغمر في المياه
للوقاية من الحريق والصدمات الكهربائية وإصابة الأشخاص، احرص على عدم غمر السلك أو القوابس أو أي أجزاء أخرى من الوحدة في الماء أو السوائل الأخرى
من الممكن أن يؤدي الاستخدام الخاطئ للمنتج إلى خطر الحريق أو الصدمات الكهربائية أو إلحاق إصابات بالأشخاص أو جميعها
وينبغي عدم السماح للأطفال بتنظيف الجهاز أو صيانته
احفظ الجهاز وأسلاكه بعيدًا عن متناول الأطفال
لا تدع السلك يتدلى على حافة سطح المطبخ أو يلمس الأسطح الساخنة
لا يمكن استخدام هذا الجهاز من قِبَل الأشخاص (بمن فيهم الأطفال) ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة، أو مَن يفتقرون إلى الخبرة والمعرفة، إلا في حال تم منحهم الإشراف أو التعليمات المتعلقة باستخدام الجهاز من جانب شخص مسؤول عن سلامتهم
لا يدرك الأطفال مخاطر تشغيل الأجهزة الكهربائية. لذا لا تسمح لهم باستخدام هذا الجهاز
لا يحتاج هذا المنتج إلى أي صيانة من قِبَل المستخدم سوى التنظيف
لا تقم بتشغيل أي جهاز به سلك أو قابس تالف، أو في حالة تعطله أو تعرضه للتلف بأي شكل من الأشكال
وإذا تعرض سلك الإمداد الكهربائي للتلف، فيتعين تغييره من قِبَل شخص مؤهل تجنبًا للأخطار
إذا حدث هذا التلف خلال فترة ضمان البيع بالتجزئة، فلا بد من استبدال المنتج من مكان شرائه وعندها سيتم إخطار الجهة المصنعة بالأمر
انعقوم ةرايزب مق ،معدلا يقلت وأ ةلئسألا حرطل
احرص دائمًا على وضع الجهاز على سطح مستوٍ مقاوم للحرارة أثناء استخدامه
احرص على عدم تحريك الجهاز أثناء استخدامه www.tommeetippee.com
لا تستخدم أي إكسسوارات بخلاف الإكسسوارات التي تأتي مع هذا الجهاز
احرص دائمًا على فصل الجهاز من الإمداد الكهربائي إذا تركته دون مراقبة وقبل التركيب أو الفك أو التنظيف
أغلق الجهاز وقم بفصله من الإمداد الكهربائي قبل تغيير الإكسسوارات أو الاقتراب من الأجزاء التي تتحرك أثناء الاستخدام
قم بتبريد الجهاز قبل تشغيله أو نزع أجزائه وقبل الاستخدام. وبعد كل استخدام، اغسل الوعاء وحلقة الإغلاق المصنوعة من السيليكون وغطاء الوعاء بماء دافئ مع الصابون أو استخدم غسالة الأطباق (الرف العلوي فقط) وجففه تمامًا
اغسل شفرة السكين بماء دافئ مع الصابون وجففها تمامًا
لا يمكن غسل شفرة السكين في غسالة الأطباق
قم بالتعامل مع شفرة السكين بحذر فهي حادة للغاية
عليك توخي الحذر عند التعامل مع شفرات السكين الحادة، وعند إفراغ الوعاء، وأثناء التنظيف. لا تترك الجهاز يعمل وهو فارغ أبدًا
لا تحاول إصلاح الجهاز بنفسك
لا تضع أي أدوات في الخلاط أثناء تشغيله
تأكد من توقف دوران الشفرة تمامًا قبل فتح غطاء الوعاء
لا تتعدى خط الحد الأقصى عند ملء الوحدة
لا تضعه في الميكروويف
لا تقم بتعقيم الجهاز
كن حذرًا إذا تم صب سائل ساخن في الخلاط، حيث يمكن دفعه خارج الجهاز بسبب البخار المفاجئ
تحقق من السلك والقابس بانتظام لاكتشاف علامات التلف، وإذا كانت مرئية، فتوقف عن استخدام الجهاز فورًا

قبل الاستخدام للمرة الأولى وبعد كل استخدام، اغسل الوعاء والغطاء وشفرة السكين بالماء الدافئ والصابون، ثم جففها تمامًا **لا تضع النصل في وحدة المحرك**

تحذير! لا تضع النصل في وحدة المحرك

احذر من لمس النصل لأنه حاد للغاية

يمكن غسل كل من الوعاء والغطاء في غسالة الأطباق (الرف العلوي فقط)
لا يمكن غسل شفرة السكين في غسالة الأطباق
امسح وحدة المحرك بقطعة قماش مبللة ولكن لا تغمرها بالماء. توصي وزارة الصحة بعدم إدخال الأغذية الصلبة في النظام الغذائي قبل 6 أشهر إلا أنه بوسعك البدء قبل ذلك (ولكن ليس قبل 4 أشهر) إذا نصحتك به الزائرة الصحية أو الممارس العام




ةينورتكلإلا ةيئابرهكلا تادعملا تايافنلا نم صلختلا نأشب تامولعم (WEEE)


لذه نم صلختلا تقو نيحي امدنع .ةيلحملا حئاولل نيناوقلل لقفو ةيلزنملا تايافنلا نع لصفنم لكشب كجتنم نم صلختلا متيس هنأ زمرلا لذه يني عد عاسيس .ةيلحملا تاطلسلل لبق نم ةددحملا عيمجتلا طاقن دحإ ىلإ هذخ جتنملا يف هنم صلختلا نأو .نيحي امدنع هريودت ةداعإو لكجتنم لصف ةقيرطب جتنملا ريودت ةداعإ نامضو ةيعيبطلا دراوملا ىلع ظافحلا نم صلختلا ىلع تابوقع قبطت متي دق .ةئيبلا ىلعو نانسنلإا ةحص ىلع ظفاحُت ةينطولا تاعيرشتلا لقفو ةبسانم ريغ ةروصب جتنملا لذه

المكونات	الكمية الموصى بها	التحضير	وقت الخلط
جزر	جم (20×20 مم) 200	وحدأضف 20 مل ماء لخلط سلس	ثانية 30
طماطم	جم 150	أو 2 ثم تُقطع إلى 4 قطع 1	ثانية 15
بروكلي	جم (15×15 مم) 200	قطع إلى قطع صغيرةٌ	ثانية 15
كوسة	جم (15×15 مم) 200		
قرع / يقطين	جم (15×15 مم) 200		
لحم بقري	جم 200	قطع إلى قطع صغيرة مع التأكد من إزالة العظامُ	ثانية 30
دجاج	جم 200		

أ. زر الضغط العلوي
ب. وحدة المحرك
ج. غطاء الوعاء
د. حلقة إغلاق من السيليكون
هـ شفرة الخلاط
و. الوعاء الزجاجي
ز. قاعدة مضادة للانزلاق من السيليكون

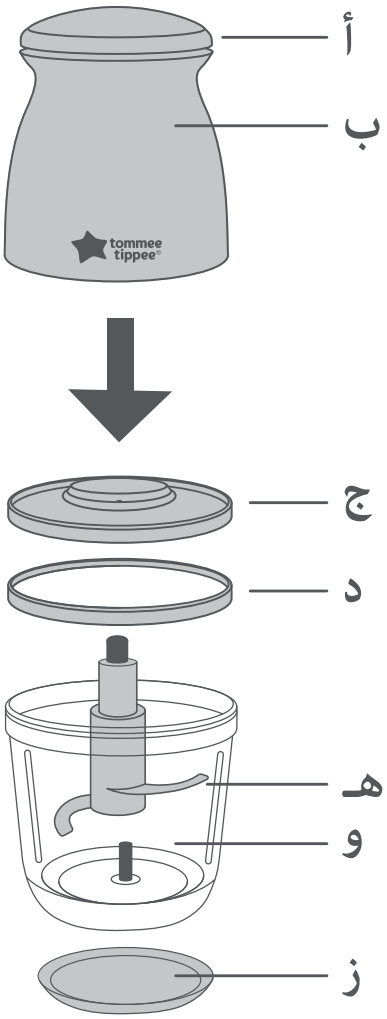


تحذير! لا بد من تجميع النصل والغطاء قبل بدء تشغيل المحرك

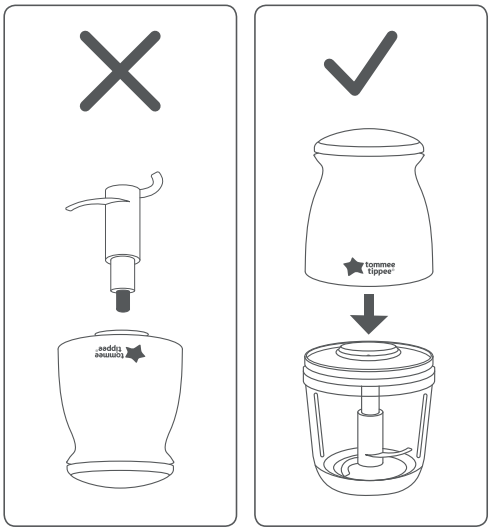


⚠ تحذير!

- **لا بد من تجميع الأجزاء C و D و E و F و G قبل تركيب المحرك B**
- **لا تضع النصل في وحدة المحرك**
- **لا تقم بتجميع الشفرات أو تفكيكها عند توصيلها بالكهرباء**
- احرص على عدم لمس الشفرة فهي حادة للغاية


كيفية التركيب

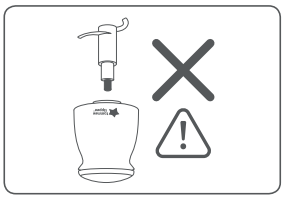


يجب عدم تجميع/فك النصال في حال توصيل القابس

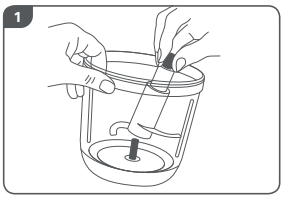


1. قم بالتعامل مع شفرة السكين بحذر فهي حادة للغاية

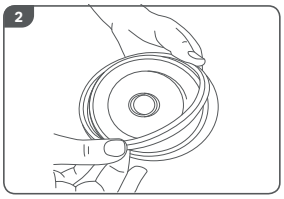

2. م بتمديد حلقة الإغلاق المصنوعة من السيليكون وضعها حول غطاء الوعاء من الخارج

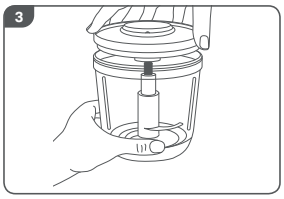


3. تأكد من لمس الجزء المسطح للغطاء. أدخل الغطاء مع حلقة الإغلاق في الوعاء. تأكد من الضغط بقوة لضمان غلق الغطاء بشكلٍ صحيح

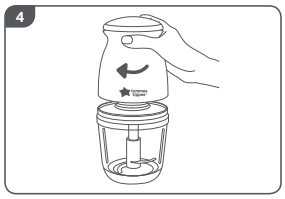


4. ارفع قاعدة المحرك وضعها أعلى الوعاء مع الغطاء

كيفية الاستخدام

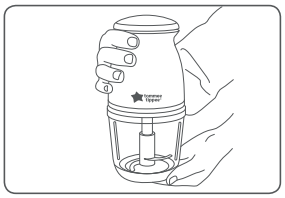


!قم بالتدوير حتى تستقر في مكانها. تحذير لا يلتصق جزء المحرك بالوعاء الزجاجي، فيرجى التأكد من إمساك الخلاط ورفعه بكلتا اليدين عند التعامل معه أو تحريكه

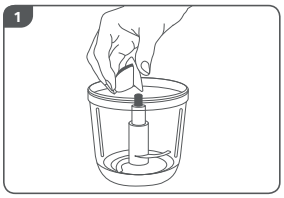


1. قم بإزالة العطاء ووضع الطعام بالوعاء. لمنع المحتوى من التدفق الزائد، تأكد من ملء الوعاء حتى مل 200. فهذا الجهاز مخصص لخلط كميات قليلة قليلة من الطعام .أعد وضع الغطاء في مكانه



2. ارفع قاعدة المحرك وضعها أعلى الوعاء مع الغطاء. قم بالتدوير حتى تستقر في مكانها
يمكن الآن توصيل قابس المحرك

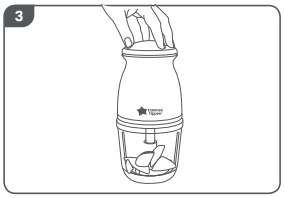

3. ما عليك سوى الضغط على الزر العلوي لتشغيل الشفرات. استمر في الضغط لخلط الطعام. لا تستمر في الضغط على الزر العلوي لأكثر من 30 ثانية. وإذا تم تشغيله لأكثر من 30 ثانيةً، فاترك الوحدة تبرد لمدة دقيقتين على الأقل قبل تشغيله مرةً أخرى

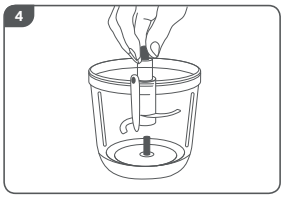

4. تأكد من توقف دوران الشفرة تمامًا قبل فتح الغطاء. افصل القابس عن الوحدة، وافتح الغطاء وأزل شفرة الخلاط. اسحب السكين بحرصٍ في خط مستقيم. قم بتفريغ الطعام من الوعاء. لا تستخدم وعاء الخلاط لتخزين الطعام

تحذير! بعد التشغيل 4 دورات، اترك الجهاز يبرد حتى يصل لدرجة حرارة الغرفة قبل تشغيله مرةً أخرى أبعد يدي

ةفصولا ىلء عالأطلا يءمسرلا عقوملا عوجرلا ىجرب