Roam SL



Guides Reset SL

Overview



The ultra portable speaker for listening at home and on the go—

- Enjoy up to 12 hours of continuous playback on a single charge. When it's time to recharge:
  - Connect the included cable to a USB power source (7.5W minimum, 10W recommended).
  - Place on a compatible Qi wireless charger.
  - Place Sonos Roam SL on its custom **wireless charger** (sold separately).
- Lightweight, durable, water-proof design is ideal for the beach, pool parties, and more.
- Shower-contact rated IP67 or Bluetooth®
- Control your Sonos system with the **Sonos S2** app (for Android and iOS).
- Use **Sonos** when you're ready to add Sonos Roam SL to your system.

Controls and lights



Volume control

- Volume up (+)
- Volume down (–)

Press and hold to quickly change the volume. **Note:** You can also use the Sonos app to adjust volume.

Playback control

- Press once to play or pause audio.
- Double press for next track.
- Triple press for previous track.

Note: You can't skip forward or go back when listening to a radio station.



Status light

Displays the product's connection to WiFi or Bluetooth, indicates when the volume is muted, and more. Solid colors are:

- **Solid white** = Ready
- **Blinking blue** = Bluetooth pairing mode
- **Solid blue** = connected with device via Bluetooth
- **Flashing orange** = the product got too hot and is cooling down. Move it to a cooler area. The product shuts it down. Once the product is a cooler location, away from direct sunlight. **Learn more**




Battery light

Indicates the battery status:

- Blinking orange indicates too battery.
- Solid orange when it starts charging. The light may stay on for several minutes before it starts to blink. Blinking = the battery just continues to charge when the light turns off. **Learn more**

Note: To check the battery level, you can ask Sonos Roam SL to power off automatically instead of going to sleep. Go to **Settings** and select Sonos Roam SL. It won't appear if the Sonos app isn't it's powered down or connected to WiFi. Then, you can see Sonos Roam SL's power off automatically instead of going to sleep. Go to **System**, battery level. Sonos Roam SL's estimated battery life is always visible in the Sonos app.

Connector panel

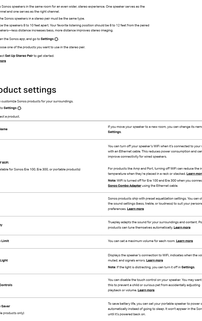

1	**Power/Bluetooth button**	**Power on/sleep mode:** Short press less than 1 second When you put them to sleep, you'll hear a quick tone and the status light will turn off. Press again to wake. If you put Roam to sleep, it will stay awake for 10 minutes before powering off. **Power off:** Press and hold for 5 seconds until you hear the second tone and the status light blinks blue, then select Roam from your device's Bluetooth pairing list. To start with a different device, end with Roam connected to the current device. Then press and hold again to select the pairing mode. **Power off:** Long press about 5 seconds Press and hold until you hear the third tone. The status light blinks blue, then turns off.
2	**USB-C port**	Use the included cable to connect a compatible 7.5W minimum (10W recommended) USB-A power source. **Sonos 10W USB Power Adapter** sold separately.

Select a location

You can use your speaker just about anywhere. Here are a few things to keep in mind:

- You can place the speaker next to a wall or on a shelf—for best performance, leave at least 1" (2.5cm) space around the back of the speaker.
- The speaker's durable design is water-resistant and ready to protect from drops or bumps.
- Avoid placing the speaker in direct sunlight.
- You can place Sonos Roam SL horizontally or vertically. When vertical, the speaker takes up barely any room. Position it horizontally for added stability on uneven surfaces.

Bluetooth pairing

Make sure Bluetooth is on in your device's settings.

Press and hold until you hear the second tone and the status light blinks blue, then select Roam from your device's Bluetooth pairing list. Your mobile device will automatically connect next time.

To connect with a different device, end with Roam connected to the current device, then press and hold again to restart the pairing process.

Charging

USB-C to USB-A

Use the included cable to connect a compatible 7.5W minimum (10W recommended) USB-A power source. **Sonos 10 W USB Power Adapter** sold separately).

Note: Battery life is visible in the Sonos app.

Sonos Wireless Charger (sold separately)

Place the speaker on the smooth, magnetized side of the charger. Sonos Roam SL recharges no extra wires or cables needed.

Qi charger

Place the speaker on a compatible Qi certified wireless charger.

Trueplay™

Trueplay tuning measures how sound reflects off walls, furnishings, and other surfaces in a room, then fine tunes your Sonos speaker to make sure it sounds great no matter where you place it.

During setup, choose the Trueplay option that works best for you and your space.

If you would like to tune via iOS, follow these steps:

1. Go to **Settings**.
2. Choose the product you would like to tune.
3. Select **Trueplay**.

Set up stereo pair

Pair two Sonos speakers in the same room for an even richer, stereo experience. One speaker serves as the left channel and one serves as the right channel.

Note: The Sonos speakers in a stereo pair must be the same type.

1. Place the speakers 6 to 12 feet apart. Your favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, more distance improves stereo imaging.
2. Open the Sonos app and go to **Settings** ⚙.
3. Choose one of the products you want to use in the stereo pair.
4. Select **Set Up Stereo Pair** to get started.

Learn more

Product settings

You can customize Sonos products for your surroundings.

1. Go to **Settings** ⚙.
2. Select a product.

Room Name	If you move your speaker to a new room, you can change its name in **Settings**.
Turn off WiFi (not available for Sonos Era 100, Era 300, or portable products)	You can turn off your speaker's WiFi when it's connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for wired speakers. For products like Ace and Port, turning off WiFi can reduce the internet functionality when they're placed in a rest or cleaner. **Learn more** **Note:** WiFi is turned off for Ace 30 and Ace 300 when you connect a **Sonos Cordless Adapter** using the Ethernet cable.
EQ	Sonos products with with preset equalization settings. You can change the sound settings for bass, treble, or loudness to suit your personal preferences. **Learn more**
Trueplay	Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically. **Learn more**
Volume Limit	You can set a maximum volume for each room. **Learn more**
Status Light	Displays the speaker's connection to WiFi, indicates when the volume is muted, and signals when a software update is available. **Note:** If the light is distracting, you can turn it off in **Settings**.
Touch Controls	You can disable the touch control on your speaker. You may want to do this if you're using the speaker in a location with less accessibility, playback, or volume. **Learn more**
Battery Saver (portable products only)	To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it's powered down or...
Line-In (Sonos products with line-in capability)	When a projector, turntable, stereo, or other audio device is connected to a Sonos product, you can adjust these line-in settings: • **Source name**: Choose a name for the line-in device. • **Source level**: Adjust the line-in source level if you find the default volume setting is too quiet or too loud. • **Audio Delay**: Add a delay between the line-in source and Sonos to help synchronize the audio when you're watching video and listening to the audio on grouped speakers. • **Autoplay**: Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port.

Drying the speaker

Both Roam and Roam SL speakers have an IP67 rating—they're dustproof and water resistant and can be submerged in water up to 3 ft (1 meter) for several minutes.

1. If your speaker is submerged in any liquid other than tap or rain water (e.g. pool, ocean, beer) flush the speaker with tap water, then give it a quick shake.
2. Position the speaker vertically until it drains, then place it face down (logo side down) on a dry towel for a few minutes.
3. Then it's ready to fully drain moisture out of the acoustic drivers.
4. Let the speaker air-dry to remove any excess water. Make sure Roam is fully dried off in between uses. Don't use a hair dryer or other forced heat air to dry your Roam.

Important: Don't play audio when the speaker is immersed in water.

Specifications

Feature	Description
AUDIO	
Amplifier	Two Class-D digital amplifiers.
Tweeter	One tweeter offers crisp high frequencies.
Mid-woofer	One mid-woofer ensures faithful playback of mid-range vocal frequencies.
Adjustable EQ	Use the Sonos app to adjust bass, treble, and loudness.
SOFTWARE	
Sonos S2	Set up and control Sonos Roam SL with the Sonos app.
Apple AirPlay 2	Works with AirPlay 2 on Apple devices iOS 11.4 and higher.
DETAILS	
IP rating	IP67 speaker can be submerged in 1m of water for up to 30 minutes.
Dimensions (H x W x D)	6.81 x 3.46 x 2.28in (169 x 82 x 60mm)
Weight	395g (.43kg)
CPU	Quad Core 1.3GHz A-53
Operating temperature	41°F to 95°F (5°to 35°C)
Storage temperature	-4°to 140°F (-20°to 60°C)
Package contents	Sonos Roam SL, USB cable (5 ft / 1.5m), and Quickstart Guide
POWER & CONNECTIVITY	
WiFi	**Using Sonos S2**: Connects to WiFi with dry 802.11a/b/g/n/ac/ 2.4/5 GHz WiFi network connection **Wi-Fi Automatic/Ethernet:** Wi-Fi can be disabled by using the Sonos app. 1. Go to **Settings** ⚙. 2. Select **Roam SL** from your System list. 3. In the Product section select **Roam SL**. 4. Then in the Connection section Enable/Disable WiFi. Wi-Fi disable only available when **Roam SL** has an Ethernet connection
Bluetooth	Bluetooth 5.0 supports audio streaming from any Bluetooth® enabled device. Press the Bluetooth button to pair with a Bluetooth device. **Bluetooth Activation/Deactivation:** Bluetooth can be Activated/Deactivated by pressing the Bluetooth button located on back of **Roam SL**.
Inputs	USB-C for charging
Battery	10HR battery provides up to 10 hours of continuous playback on a single charge.
Recharging	Recharge with the included USB-C cable connected to a USB power adapter (7.5W (5V/1.5A) minimum, 10W recommended), a wireless Qi charger, or the **Sonos Roam Wireless Charger** (sold separately).
Charging time	0% to 90% in 1 hour on USB. 3 hours wirelessly.

Note: Specifications subject to change without notice.

Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
   Sonos products with rubber rings on the bottom, such as Move, One and One SL, may leave a faint ring on some surfaces treated with polyurethane. This ring can be easily removed by wiping with a damp cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
8. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. The battery may should be easily available to disconnect the equipment.
13. Sonos Roam and Sonos Roam SL meet IP67 water resistance tests.