XHL:1954746 TX-LF01_145x210mm_2022.11.27

210.000 mm

145.000 mm

**IMPORTANT**

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

Caution
To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
  If a 13 Amp (BS 1363) fused plug is used it must be fitted with a 3A fuse conforming to BS 1362 and be ASTA approved.
  If in doubt contact a qualified electrician.

This symbol means the device is double insulated and earth connection is not required

Produced in China. Made in China for Habitat. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland

If you encounter any problems with this product please call our customer care team on 0345 640 30 30

habitat

# 12INCH BLADELESS DESK FAN

Model No. TX-LF01
CAT NO.: 1954746



## Care & Instruction Manual

For household and indoor use only



Please read these instructions before use and
Retain for future reference

## ELECTRICAL SAFETY


**BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE APPLIANCE**

1. **Read all instruction carefully and keep this manual for future reference.**
2. **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
3. **To avoid electric shock, do not place the cord, the plug or the appliance in water or other liquids.**
4. **Do not use the fan near an open window as rain may cause an electric shock hazard**
5. **Unplug the plug outlet when not in use and before cleaning.**
6. **Check the mains cord for damage from time to time. If damaged discontinue use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.**
7. **Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.**
8. **Do not let the cord touch hot surfaces.**
9. **Do not place the appliance on an unsteady surface.**
10. **Do not use the fan in areas of high humility, very dusty, or in temperatures higher than 40°C.**
11. **Do not insert fingers or other objects into the fan during operation.**



12. **Especially take care with children.**
12. **Please do not allow fan to be directed onto children, the elderly or infirm for a long period of time.**
13. **Do not place naked flame sources near unit, such as lit candles.**
14. **Do not use detergent or aerosol sprays on the fan**
15. **The appliance is for household use only. Do not use at outdoors or for any commercial or industrial purpose.**
16. **Always disconnect the mains power, before any user maintenance.**
17. **Do not disassemble, the fan guard cannot be removed, see cleaning and maintenance.**
18. **Only use on the mains supply indicated on the ratings label**
19. **Do not operate the fan in the presence of explosive and/or flammable fumes.**
20. **Do not place the fan or any parts near an open flame, cooking or other heating appliance.**
21. **Do not hang or mount fan on a wall or ceiling.**
22. **Do not operate if the fan housing is damaged.**

## PARTS & CONTROLS

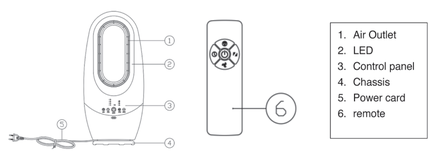

1. Air Outlet
2. LED
3. Control panel
4. Chassis
5. Power card
6. remote

**Note:** 2 x AAA batteries for the Remote Control are not included.

## FAN OPEARATION

### 1. Voltage

Plug into any AC 220-240V~50-60Hz source, ensure that the plug and socket fit well.

### 2. Remote


Note: 2 x AAA batteries are not included.
The Fan comes with a remote control for your convenience.
The functions on the remote control are the same as the buttons on the Bladeless Desk Fan.

- To install the batteries, first remove the back of the remote control by pressing down

on the Thumb Grip, then sliding the battery cover down and lift off as shown.

- Insert the batteries inside the battery compartment matching polarity icons with those

in the battery compartment and then refit the cover securely by sliding back on.
Battery Type: "1.5V 2xAAA"



Point the Remote Control at the control panel as this is the location of the receiver, then press your desired button.



**Important:** Always operate the product on a flat, level, steady, and stable surface to avoid it overturning.



### 3. Battery warnings

- CAUTION – Danger of explosion if batteries are incorrectly fitted/replaced.
- Batteries should be installed by an adult. Keep new and used batteries away from children.
- Only use 'AAA' 1.5V batteries in this remote control.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from the remote control before recharging.
- Never mix old and new batteries (replace all batteries at the same time).
- Never try to dismantle batteries.
- Do not short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.
- Dispose of used batteries responsibly at local authority household waste recycling facility.
- **DO NOT dispose of batteries in a fire as the batteries may explode.**

### 4. Fan Only

- Insert the plug into a standard electrical power point and switch on at the power point.
- Note: The first time you connect to the power, a single Beep sound will be heard, and the small indicator light next to the "On/Off" symbol will illuminate Red colour indicating the unit is powered.
- Press the On/Off button on the control panel, or the button on the remote control to turn the fan on.
- The Fan will briefly start with "Medium" fan level and will then switch to "Low" Fan speed and "Normal" fan mode. This is the default setting.
- To increase the fan speed, press the "Speed" button on the control panel, or the button on the remote control and the fan will increase speed to the "Medium" setting.
- Press the speed button on the control panel, or the button on the remote control again, and the fan will increase to "High" fan setting.
- Press the speed button on the control panel, or the button on the
- remote control again, and the speed will cycle back around to "Low" fan speed.
- To Turn Off, press the On/Off button on the control panel, or the button on the remote control.

### 5. Fan + Swing (Oscillating)

- With the Fan already in use, press the "Swing" button on the control panel, or the button on the remote control to start the Fan swinging (Oscillating) side to side.
- To turn Off the Swing, or to stop the fan swinging in a set position, press the "Swing" button on the control panel, or the button on the remote control.



### 6. Auto Off Timer

Use this power-saving feature if you want the appliance to turn off automatically.

To select the Off time, press the "TIMER" button on the control panel, or the button on the remote control once.
It will advance to 1h as indicated by the indicator lights on the control panel. The Fan will turn off after approximately 1 hour.

- Each consecutive press of the "TIMER" button on the control panel, or the button on the remote control will advance the timer at 1 hour increments until it reaches a maximum time of 10h.
- The time set will be indicated by the sum of the lights which are illuminated, i.e., if the 4h + 3h + 1h lights are illuminated, this adds up to be 8 hours. The Fan will turn off after approximately 8 hours.
- To turn the timer off, or to reset to a new time, continue to press the FMER" button on the control panel, or the button on the remote control until is cycles back around where no time lights are illuminated.
- Press the "ON/OFF" button on the control panel, or the button on the remote control to turn the appliance off.

### 7. Light

Around the edge of the Air Outlet, there is a built in LED light for illuminating the area in front of the fan.

- To switch this on, press the "Light" button on the control panel, or the button on the remote control.
- Press again to turn the light off.

Note: The light brightness and colour is not adjustable.

## CLEANING

- Always unplug the fan from the mains supply before cleaning!
- Use only a piece of soft, damp cloth to gently wipe the outer surfaces of the fan to clean.
- Do not try to remove the fan grill. To clean between the bars, we recommend using a vacuum cleaner or compressed air to gently remove the dust.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, cover or store in original box to protect it from dust. Store the fan in a cool, dry place
  .



## TECHNICAL SPECIFICATIONS

| Description | Symbol | Value | Unit |
|---|---|---|---|
| Maximum fan flow rate | F | 22,59 | $m^3$/min |
| Fan power input | P | 37,10 | W |
| Service value | $S_V$ | 0,61 | ($m^3$/min)/W |
| Standby power consumption | $P_{SB}$ | 0,26 | W |
| Off power consumption | $P_{OFF}$ | --- | W |
| Fan sound power level | $L_{WA}$ | 60,58 | dB(A) |
| Maximum air velocity | C | 2,11 | meters/sec |
| Seasonal electricity consumption | Q | 12,16 | kWh/a |
| Measurement standard for service value | EN IEC 60879:2019 | | |

**RECYCLING ELECTRICAL PRODUCTS**
You should now recycle your waste electrical goods and in doing so help the environment.
This symbol means an electrical product should not be disposed of with normal household waste.
Please ensure it is taken to a suitable facility for disposal when finished with.
Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

## PLUG/WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:
BLUE = NEUTRAL
BROWN = LIVE

Non-rewireable plug
This appliance may be fitted with a "non-rewireable" plug. If you need to change the fuse in a "non-rewireable" plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.
Rewireable plug
The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**




The BLUE wire must be connected to the terminal marked with the letter N
The BROWN wire must be connected to the terminal marked with the letter L