


MACH
by eufy Clean

V1 Ultra
Quick Start Guide

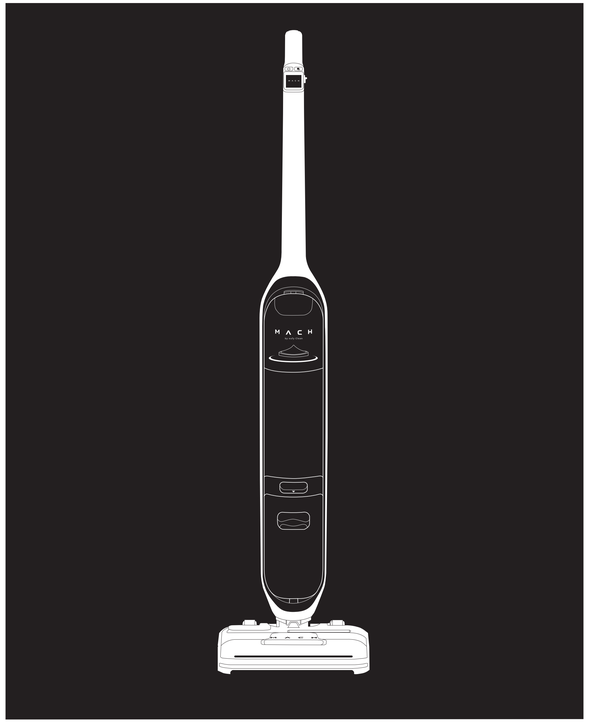

Overview

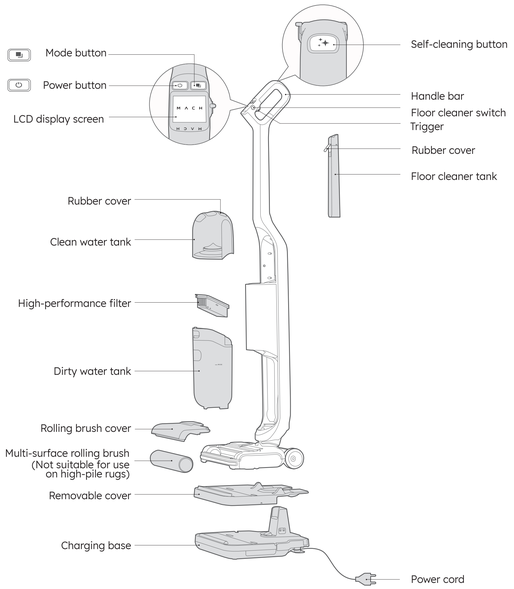

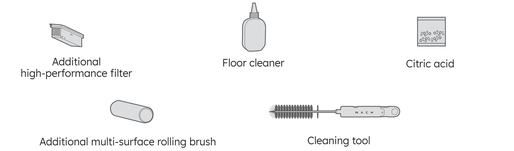


Button Control

Action		Function	Action		Function
⊙ 1s	Press and hold the power button for 1 second	• Turn on or off		Press the self-cleaning button	• Start self-cleaning and self-drying
	Press the power button	• During cleaning, pause or resume current task • During menu setting, skip to the previous menu option	⊙ 2s	Press and hold the self-cleaning button for 2 seconds	• Turn voice prompts on or off
			×3	Press the self-cleaning button three times consecutively (during cleaning)	• Activate or deactivate Jetblade™ floor quick-drying function
⊙ 1s	Press and hold the mode button for 1 second	• Enter menu setting mode		Hold the trigger	• In smart mode, activate more powerful cleaning • In steam mode, release steam • In suction mode, activate more powerful suction
				Hold the trigger for 2 seconds (when placed on the charging base)	• Dry the rolling brush
				Press the trigger	• During menu setting, confirm a selection
	Press the mode button	• Select a mode • Smart mode (default): For daily mopping and hard floor washing • Steam mode: Ideal for removing stubborn stains and bacteria (It is recommended to use the steam mode on your sealed hardwood, marble, tile, and stone floors to avoid any damage) • Suction mode: Ideal for carpet cleaning or soaking up dry / liquid waste on the floor • During menu setting, skip to the next menu option		Turn anticlockwise	• Turn the floor cleaner switch on
				Turn clockwise	• Turn the floor cleaner switch off

Charging

Before first use, fully charge the MACH Vacuum Cleaner for 4 hours.

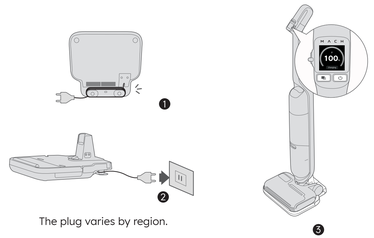

The plug varies by region.

Customer Service

For tutorial videos, FAQs, manuals, and more information, please visit:
https://support.eufylife.com

Warranty: 24-month limited warranty

Contact Us

support@eufylife.com
www.eufylife.com
(US/CA) +1 (800) 994 3056
(UK) +44 (0) 1604 936200
(DE) +49 (0) 69 9579 7960
(日本) 03 4455 7823

For more support phone numbers, please visit:
https://support.eufylife.com/s/phonecontactus
Or scan the QR code below:

The quick start guide is for routine cleaning. You can find detailed instructions in the online user manuals. Scan this QR code to get the online user manuals.

MACH strives to improve product performance and ensure the accuracy of the Quick Start Guide. If there is any inconsistency between the illustrations and the actual operation due to software updates, actual product performance shall prevail. MACH reserves the right to modify this Quick Start Guide without prior notice.


@EufyOfficial @EufyOfficial @EufyOfficial @EufyOfficial

PAP 22
Raccolta Carta

T2770 51005003650 V02


Initial Setup

- Make sure your smartphone or tablet is running iOS 10.0+ or Android 5.0+.
- To better understand the operation and maintenance of this device, and obtain the latest product services and information, please scan the QR code to download the eufy Clean app.

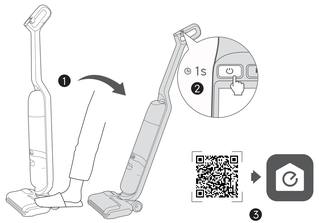


1. Gently step on the foot pedal and push the handle bar backward until you hear a click.
2. Press and hold the power button for 1 second to turn on the MACH Vacuum Cleaner.
   - The LCD display lights up.
3. For first-time use, the boot animation will guide you to learn the basic operations of this device, select a voice prompt language, scan the QR code to download the eufy Clean app, and complete the Wi-Fi connection.

Using the MACH Vacuum Cleaner

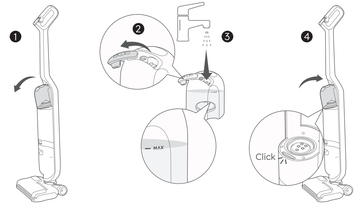


Add Clean Water

1. Remove the clean water tank.
2. Open the rubber cover.
3. Add tap water until it reaches the MAX water line.
   * Do not use mineral or purified water. Do not add hot water above 50 degrees into the water tank.
4. Replace the clean water tank. You will hear a click when the clean water tank is locked in place.

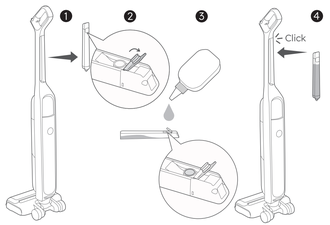

Add Floor Cleaner

1. Remove the floor cleaner tank.
2. Open the rubber cover.
3. Add floor cleaner into the floor cleaner tank.
   * To use the floor cleaner during cleaning, make sure the floor cleaner switch is turned on.
4. Replace the floor cleaner tank. You will hear a click when it is locked in place.

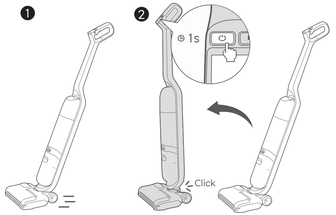


Start / Stop cleaning

1. After initial setup, start cleaning in smart mode by default.
   - To change the cleaning mode, press the mode button.
   - To pause or resume current task, press the power button.
2. To stop cleaning, press and hold the power button for 1 second or push the handle bar forward until you hear a click.

- You can customize your settings and obtain more information from the menu. For how to use the menu, refer to the online user manual.
- It is recommended to clean your carpets in suction mode.

LCD Screen Guide

The LCD screen will show you the working status of the MACH Vacuum Cleaner.

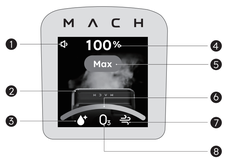


1. Shows current volume level of voice prompts (High / Low / Mute)
2. Shows the animation of current work mode
3. Lights up when floor cleaner switch is turned on
4. Shows current charging status / battery level
   Shows current mode name when switching work modes
5. Lights up when operating the device under maximum power condition
6. Intelligently shows current cleanliness status of your floor
7. Lights up when Jetblade™ floor quick-drying function is activated
8. Lights up when ozone disinfection is enabled



Red Light Bar	Red and Blue Light Bar	Blue Light Bar
Dirty	Half-dirty	Clean


Self-Cleaning and Self-Drying

Make sure the clean water tank is over half full before self-cleaning.

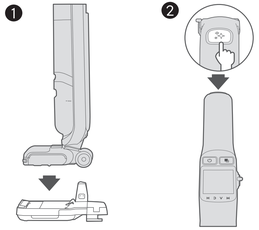

1. Place the MACH Vacuum Cleaner onto the charging base.
2. Press the self-cleaning button.
   - The MACH Vacuum Cleaner will clean and self-dry the rolling brush automatically.
   - For a better cleaning effect, turn on the floor cleaner switch before self-cleaning.
3. When the rolling brush starts self-drying, the system will prompt you to clean the dirty water tank.

Cleaning the Dirty Water Tank

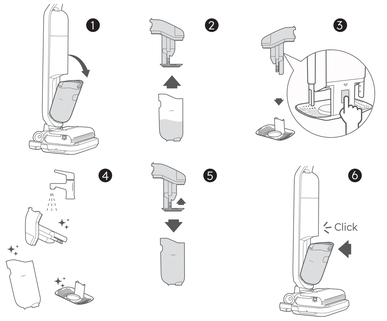

1. Remove the dirty water tank.
2. Separate the top container from the dirty water tank.
3. Remove the dry waste separator.
4. Rinse the dirty water tank and all components thoroughly with water.
5. Reassemble the dirty water tank.
6. Push the dirty water tank back into the MACH Vacuum Cleaner.

Status Light Indication

Status lights	Indication		Status
Steam status light		Scrolling red light	Preparing steam
		Pulsing red light	Ready for steam release
		Steady red	Release steam (when holding the trigger)
	Off		Exit steam mode
Ozone status light		Steady white	Enable ozone disinfection
	Off		Disable ozone disinfection
Steam status light + Ozone status light		**Flashing red (Both lights)**	**Indicate that you need to start self-cleaning or clean the dirty water tank**

- When the MACH vacuum cleaner is upright and idle for 5 minutes, and you have not started self-cleaning or cleaned the dirty water tank, the red status lights will flash and continue for up to 5 minutes.
- To turn off the red warning lights, follow the on-screen instructions to start self-cleaning or clean the dirty water tank.
- You can also turn off the red lights via the eufy Clean app.