challenge®

4 Inch Hand Held Desk Fan

INSTRUCTION MANUAL

Model No. FP-09



Version 1 05/12/2022

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.


- Read and familiarise yourself with all operating instructions before using this Rechargeable Table Fan.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not immerse the appliance or its cord in water or any other liquids.
- Always use this appliance on solid, level, surface.
- Repairs to electrical appliances should be performed by a qualified electrician. Improper repairs may place user at serious risk.

- This product should not be used in the immediate vicinity of water, such as baths, basins, swimming pools, etc., where a likehood of immersion or splashing could occur.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified-after-sales service in order to avoid a hazard.
- Do not use any accessories or attachments with this appliances other than those supplied or recommended by the supplier.
- Do not use this appliance for anything other than intended use.
- Do not push objects (including fingers) into the fan grill or any openings as this could risk injury or damage to the appliance.
- Never carry this fan by the cord or pull the cord from USB socket, grasp the plug to unplug it not the cord.


BATTERY WARNING

- Do not expose a battery to fire or excessive temperature. Exposure to fire or temperature above 130˚C may cause explosion. NOTE The temperature -130˚C- can be replaced by the temperature -265 ˚F¯.
- Follow all charging instruction and do not charge the battery outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.
- Charge time should not exceed 12 hours.
- After extended periods of storage, it may be necessary to charge and discharge the battery several times to obtain maximum performance.
- Battery gives its best performance when it is operated at normal room temperature (20˚C±5˚C).

Description of parts

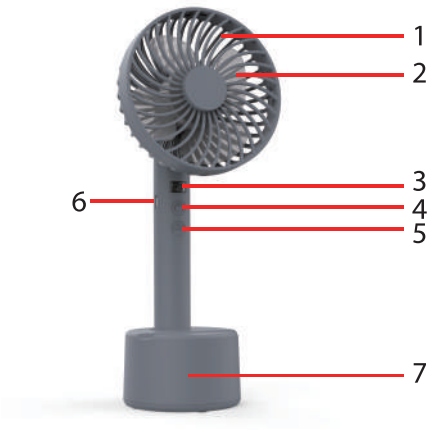

1. Protective Blade Guard
2. Fan Blade
3. Display
4. On/off Switch
5. Speed Switch
6. USB charge socket
7. Base
8. USB Cable

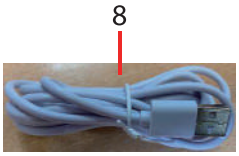

First Use Of 4inch Hand Held Desk Fan

- Place the fan into the desired position ensure that it is level.
- Ensure the fan is in the off mode.
- Press the on/off switch to turn on/off the fan.
- Press the speed switch until the desired fan speed is indicated.
- The fan can operate by USB power or by the internal battery power

Charging

When the battery charge level is low, the fan will off. To charge the battery connect a USB Cable(8) plug into the USB charge socket(6) at the left of the base and charge using a suitable power supply, such as laptop or PC USB port, USB power supply or USB socket outlet. As the charging progresses the Display(3) will light up "--" and flash. When stop flashing, it means the battery is fully charged.

Charging time: approx. 2.5 hours with 1A charging current.
Operating time on high setting: approx. 50mins.
Operating time on low setting: approx. 4 hours.
Can also be used in corded mode connected to USB power source.

RECYCLING ELECTRICAL PRODUCTS



Recycling electrical products: You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk click on "bank locator" and enter your postcode to find your nearest recycling site.





Li-ion battery. This product has been marked with a symbol relating to “separate collection” for all battery. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery can be hazardous for the environment and for human health since they contain hazardous substances.

CE UK CA

Produced in China. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Produced in China. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland