
BUSH - Stereo Speaker For Lightning Dock

Installation & User Instructions – Please keep for future reference | **262/9362 227/2991 (D)**

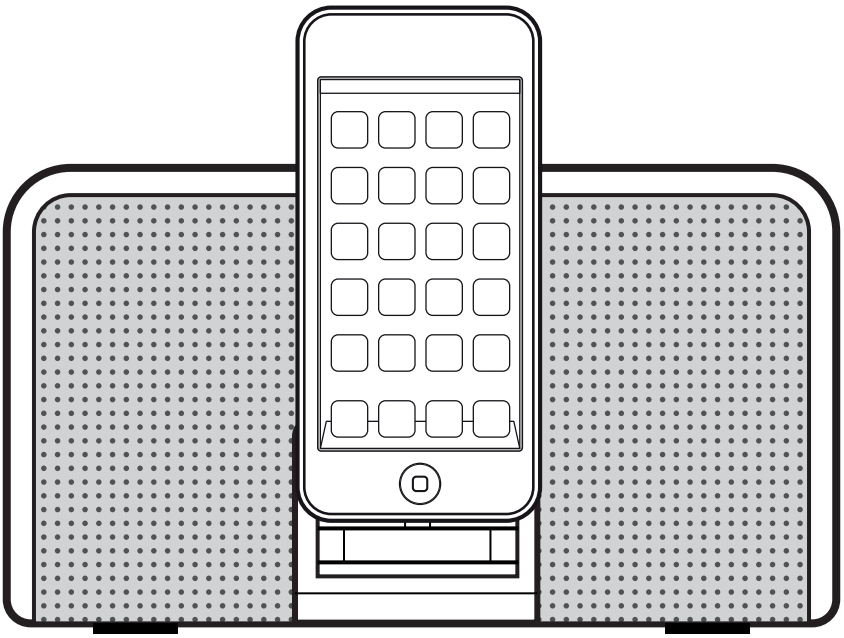


Important – Please read these instructions fully before installing or using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct installation, use and maintenance. If you need help or have damaged or missing parts, call the Customer **Helpline: 0870 600 3030**

Table of contents

Disposal information 1
Safety information 2
Mains adapter information 2
Care & maintenance 2
Accessories included 3
Overview of controls 3
Power options 3
Mains adapter 3
Battery operation 3
Opening / closing the stand & dock 4
Connecting an iPod/iPhone 4
Connecting an AUX source device 5
Powering on/off the speaker 5
Adjusting the volume 5
Troubleshooting 5
Technical specifications 5

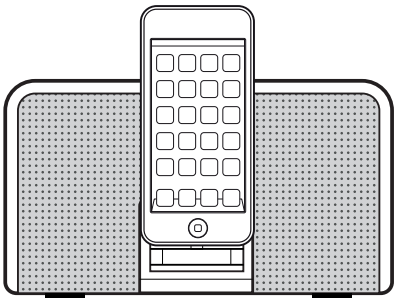

Product Codes
CSPK258WWi

Disposal information

WEEE marking "Information for the consumer" Disposal of your old product.
Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please make yourself aware of the local collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This product complies with European low voltage (2006/95/EC) and electromagnetic compatibility (2004/108/EC) directives.

Safety information

Important – Please read these instructions fully before installation

Safety information

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER.
NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.
Please read this owner's guide

- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features.
- Please save this owner's guide for future reference.
- The product label is located on the back of the product.
- This product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- Heed all warnings on the product & in the owner's guide.
- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.
- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped -
- Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltages or other hazards.
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use proper power sources - Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily accessible
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Where the MAINS plug of AC/DC adapter is used as the disconnect device it shall remain readily operable.

Mains adapter information

- Ensure the mains adaptor supplied is not submerged in liquid
- Ensure the mains adaptor is not forced into incorrect mains outlet sockets
- Do not allow the power cable to become snagged or damaged
- Disconnect the mains power supply if bare wires are visible and replace the mains adaptor accordingly
- Do not overload mains outlet sockets with multiple plugs or power adaptors
- Do not insert foreign objects (especially metal) into the DC plug at the end of the power cable

Battery information

- Do not insert battery into the remote control in the wrong direction.
- Do not charge, heat, open or short-circuit the battery.
- Do not throw battery into a fire.
- If the remote control does not function correctly or if the operating range becomes reduced, replace the battery with a new one.
- Improper replacement of batteries may result in explosive hazard. It must be replaced only by batteries with the same or equivalent type.

Care & maintenance

Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Wipe the case with a slightly moist lint free cloth
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives
- Do not spray an aerosol at or near the object
- If the unit is used in a dusty environment, it may be necessary to have the unit serviced at your local dealer periodically. It is not advisable to allow large deposits of dust to accumulate within the unit as it may prevent adequate cooling. Similarly dust deposits which become damp can sometimes lead to electrical problems which may cause severe damage to the delicate electronics within this unit.
- Maximum working temperate: 35°C


Functions & controls


Please familiarize yourself with the parts and accessories listed below

Accessories included

- 1 x CSPK258WWi
- 1 x Instruction Manual
- 1 x Mains adapter
- 1 x 3.5mm Audio cable

Overview of controls

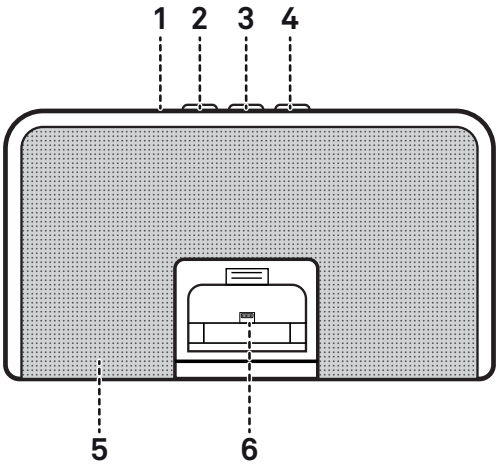

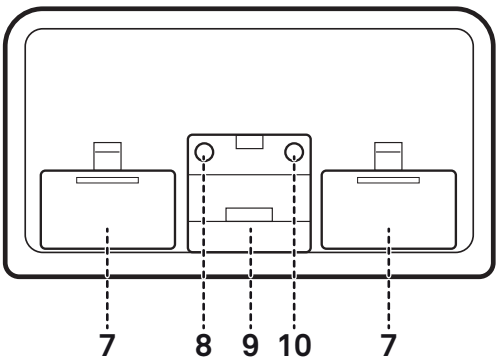

1: Power LED
2: STANDBY button
3: VOL- button
4: VOL+ button
5: Speaker grille
6: iPod dock
7: Battery compartments
8: DC input 5V
9: Fold-down stand
10: AUDIO input

Power options


Mains adapter

When using the mains cable insert the adaptor plug into the rear of the CSPK258WWi (8), the other end into a UK mains socket.

Battery operation

The CSPK258WWi requires **4 x AA** batteries (not supplied).

1: Open the battery compartments on the rear of the unit **(7)**.
2: Insert **2** x **AA** batteries into each compartment taking care to match the + & - polarity symbols correctly.
3: Replace the battery compartment covers.

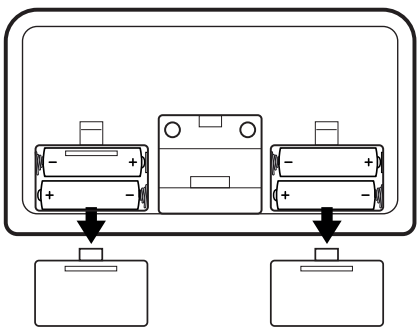


NOTE: Please dispose of old batteries according to your local rules and do not dispose of your old products with your normal household waste.


User instructions

Opening / closing the stand & dock


Press the plastic button (shown below) on the front of the unit to extend both the dock & rear stand automatically.

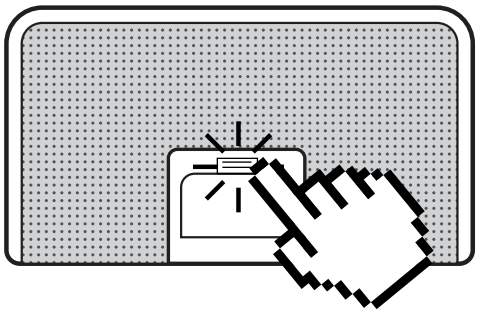

The diagram below shows how to fold away the rear stand after use.

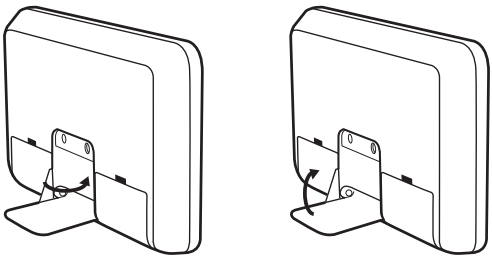

The front is simply folded upwards.

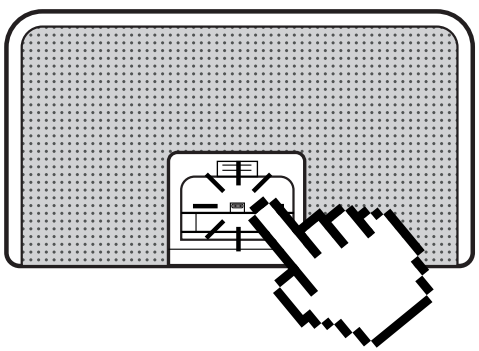

The iPod dock once extended reveals the 8 pin (lightning) connector. Connect a supported iPod/iPhone to this socket.

Connecting an iPod/iPhone


Supported devices include:

iPhone 5
iPhone 5s
iPhone 5c
iPod touch (5th generation)
iPod nano (7th generation)

NOTE: Charging while using the iPod/iPhone will increase charging duration.

Charging is only supported using mains power.

Place a compatible iPod / iPhone onto the 8 pin (lightning) connector (carefully), taking care not to bend the connector.

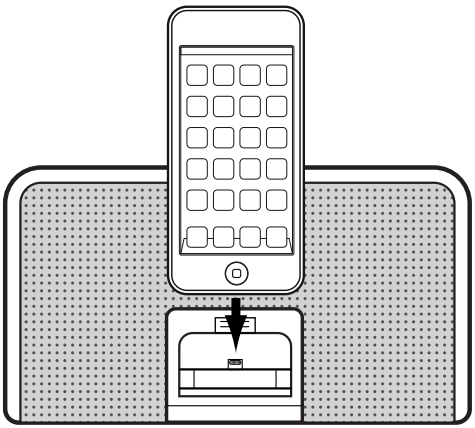


NOTE: When an iPod/iPhone is docked and a device is connected to the AUX input (using a 3.5mm audio cable supplied), you will hear only the iPod/iPhone output until the iPod/iPhone is removed.

User instructions

Connecting an AUX source device

Using the supplied 3.5mm audio cable, it is possible to connect an external audio device eg: mp3 player to the CSPK258WWi.

1: Connect the **3.5**mm cable into the **AUDIO** input socket **(10)** on the rear of the unit.

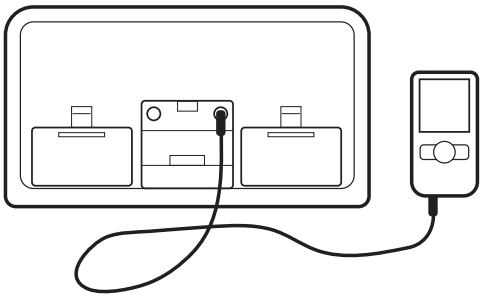

2: Connect the other end to your audio devices headphone output or Line-out.

NOTE: The volume output is effected by the volume level on the source EG: MP3 player, so make sure that is set to about 70-80% (not too loud to avoid distortion).

NOTE: You will need to remove any docked iPod/ iPhone device to allow playback of the AUX input.

Powering on/off the speaker

1: Press & hold the **ON/STANDBY** button **(2)** to turn the **CSPK258WWi ON** or press once to enter **STANDBY.**

NOTE: an indicator will light up to indicate the unit is ON.

Adjusting the volume

1: Press the **VOL- (3)** or **VOL+ (4)** buttons to decrease or increase the sound levels accordingly.

Troubleshooting

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below.
If the problem persists, contact the retailer if the machine is still under guarantee.

Customer helpline: 0870 600 3030

problem	Solution
Your iPod does not dock properly	• Make sure the dock insert is the correct one for your iPod.
No Sound	• Make sure the system is plugged in, your iPod/iPhone is turned on & is playing a track. • Remove your iPod/iPhone from the dock, wait briefly, then reset it. You may need to do this a few times. • Make sure you have the latest software on your iPod/ iPhone.
No sound after quickly dock/ undocking your iPod/iPhone	• Remove your iPod/iPhone from the dock, wait 5s and return to the dock. • Unplug the power cable for 1 minute then plug back in again.

Technical specifications

Power supply	• Mains adaptor : AC 100-240V~50Hz • Mains adaptor output : DC 5V 1.5A • Battery : 4 x AA
Output power	• 2 x 2W

Guarantee

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalided if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW