BUSH

Instruction manual

Model: KBB-813A



You'll soon be enjoying your new Kids Boombox with Microphone.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Kids Boombox with Microphone. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021.**

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH

Contents

1 Safety information

Power source 6
Moisture and water 6
Heat source and flames 6
CD compartment 7
General safety information 7

2 Getting to know your Kids Boombox with Microphone

Your Kids Boombox with Microphone 11
Battery information 13
Power connection / Inserting batteries (optional) 14
Power on 14
Adjusting the volume 15
Using headphones 15
Using the microphone 15

3 Using your Kids Boombox with Microphone

Using the CD player 18
Using the FM Radio 22

4 Other information

Technical specification. 26


5 Product support

Troubleshooting 30
Help and assistance 31
Disposal 32
Your Bush Guarantee 33

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

This page is left intentionally blank

Safety information 1

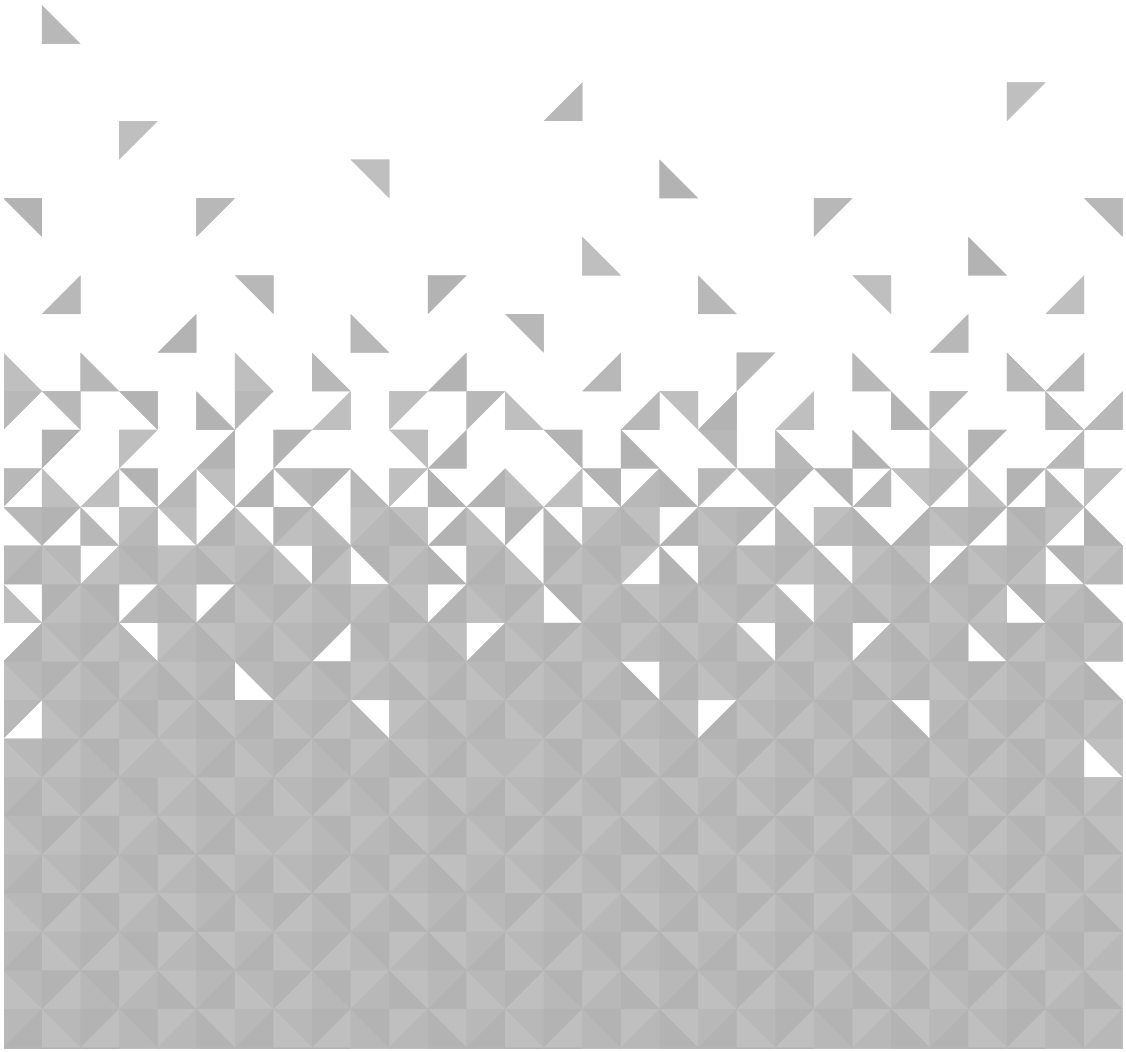

Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Disconnect your Kids Boombox from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Kids Boombox, before you change or disconnect the power supply.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- **Do NOT** attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- **Do NOT** use your Kids Boombox near emergency/intensive care medical equipment or during an electrical storm.

Moisture and water

- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do NOT** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

Heat source and flames

- **Do NOT** leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- **Do NOT** block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Never place any type of candle or naked flame on top of, or near the product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Safety information

Important - Please read these instructions fully before installing or operating

CD compartment

Caution

This is a CLASS-1 laser product. Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure. Do NOT open the cover and do NOT repair yourself. Refer servicing to qualified personnel.

Caution

Never touch or look into the optical lens within the CD compartment.

- **Do NOT** place foreign objects into the CD compartment.
- The underneath and sides of this product may become warm after a long period of use. This is normal.
- If the Kids Boombox will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged.

General safety information

This product is not suitable for children under 36 months. Small parts. Choking hazard.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- **Do NOT** store in dusty or dirty areas.
- **Do NOT** use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.

Caution:

To prevent possible hearing damage, do not listen to this boombox at high volume levels for long periods of time.

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

This page is left intentionally blank

Getting to know your Kids Boombox with Microphone

2

Getting to know your Kids Boombox with Microphone

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Kids Boombox with Microphone

You'll be up and running in no time

Your Kids Boombox with Microphone

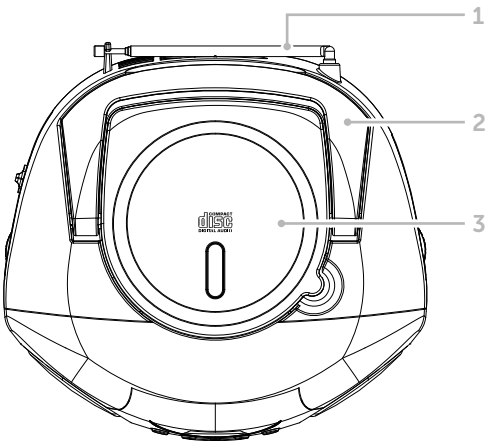


Fig 1.

1. Telescopic antenna
2. Carry handle
3. CD compartment

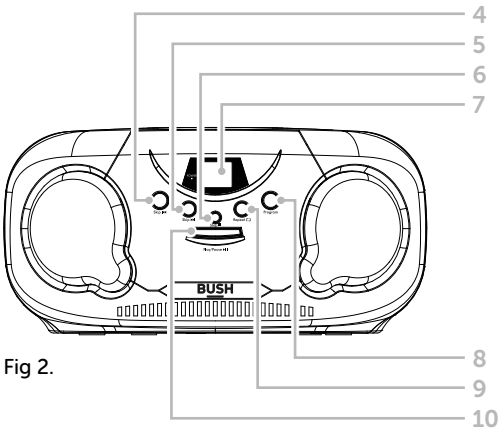


Fig 2.

4. Skip back
5. Skip forward
6. Stop
7. Display
8. Program
9. Repeat
10. Play/Pause

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

Getting to know your Kids Boombox with Microphone

You'll be up and running in no time

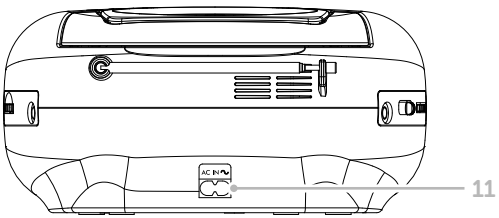


Fig 3.

11. Mains power socket

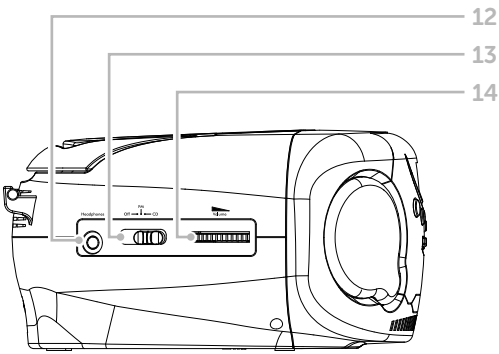


Fig 4.

12. Headphone socket

13. Off/FM/CD mode switch

14. Volume control

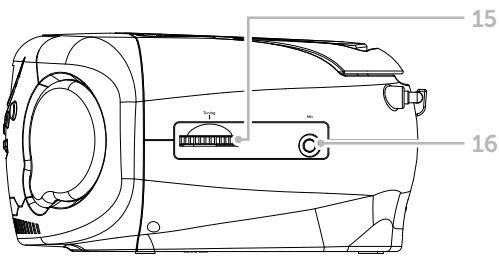


Fig 5.


15. FM tuning

16. Microphone socket

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Kids Boombox with Microphone

You'll be up and running in no time

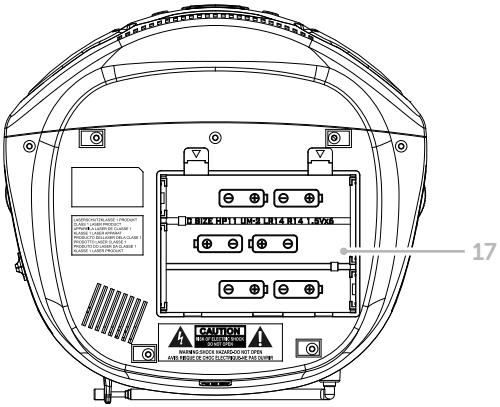

17. Battery compartment

Fig 6.

Battery information

- 6 x 1.5V C-size (also known as LR-14 and UM-2) batteries should be used
- Non-rechargeable batteries are NOT to be recharged.
- Rechargeable batteries are to be removed from this product before being charged.
- Rechargeable batteries should only be charged under adult supervision.
- Do NOT mix different types of batteries or new and used batteries.
- Batteries are to be inserted with the correct polarity.
- Exausted batteries must be removed from the product.
- Supply terminals should not be short circuted.

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

Getting to know your Kids Boombox with Microphone

You'll be up and running in no time

Power connection

1. Open the CD compartment (on the front edge, where there is a scooped recess), and remove the cardboard shipping protector. Close the CD lid.
2. Plug the power cable into the socket on the back of the boombox and plug the mains power plug into the mains power wall socket and switch on
3. Fully extend the telescopic radio aerial on the back of the boombox to receive the best possible radio reception and sound quality.

Power connection / Inserting batteries (optional)

Before inserting the batteries (not included), please ensure that the boombox is switched off (slide the switch on the left hand side of the Boombox to 'Off') and is unplugged from the mains power supply.

1. Underneath the boombox, press in the two battery compartment tabs and pull up to remove the battery compartment cover.
2. Insert 6 x 1.5V C-size (also known as LR-14 and UM-2) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around.
3. Replace the battery compartment cover, making sure that it 'clicks' home.

Note: When the battery power is low, you will notice that the audio quality will be a little distorted and the volume will be quieter. Please switch off the boombox and replace the batteries.

Power on

1. Slide the side switch on the left hand side of the boombox to FM or CD. The red power LED to the left of the display will turn on.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Kids Boombox with Microphone

You'll be up and running in no time

Adjusting the volume

Turn the rotary volume control on the left hand side of the boombox away from you to increase the volume and towards you to decrease the volume.

Note: Always keep the volume within reasonable limits.

Using headphones

You can connect headphones with a 3.5mm plug (not included) to the socket on the left hand side of the boombox. When you have headphones connected the boombox speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits

Using the microphone

You can connect the Microphone supplied to the 3.5mm Mic socket on the right hand side of the boombox.

The microphone can be used in both FM radio and CD mode, just slide the mode switch on the left hand side of the boombox to either FM or CD and use the tuning wheel to tune to an FM radio station or play an audio CD.

Switch the microphone on using the ON/OFF switch. The microphone is now ready for use.

Note: The microphone volume is fixed and cannot be adjusted using the volume control on the kids boombox.

Note: Do not hold the microphone too close to your mouth. Pointing the microphone towards the kids boombox may lead to some sound distortion.

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

This page is left intentionally blank

Using your Kids Boombox with Microphone

3

Using your Kids Boombox with Microphone

Let's get started

Using the CD player

Note: Please make sure that you remove the cardboard shipping protector from within the CD compartment before you try to use CD player.

CD mode

Check that your kids boombox is in CD mode. If you are not already in CD mode, slide the side switch on the left hand side of the boombox to CD. The display will show a flashing '- -' while it scans for CD tracks. If there is a CD in the compartment, after a short delay the first track will begin to play, or **'no'** will be displayed if the CD compartment is empty.

Play a CD

Your boombox will play Audio CDs as well as the following CD types:

CD-Recordable (CD-R)

CD-Rewritable (CD-RW)

It is not possible to play DVD or computer CDs.

1. Open the lid of the CD player on the front right edge, where there is a scooped recess. **'00**' will be displayed.
2. Place an audio CD, label side up, into the CD compartment. Please ensure that you line up the hole in the centre of the CD, with the central spindle and press down into place.
3. Close the lid of the CD player, '- -' will be displayed and after a short delay the first track will begin to play.

Note: If there is no CD in the compartment, **'no'** will be displayed.

Using your Kids Boombox with Microphone

Let's get started

CD controls

You can use the following controls on your boombox in CD mode.

- Play

  Press and release the Play/Pause ▶❙❙ button on the boombox. The track will begin to play and the track number will be displayed.

- Pause

  Press and release the Play/Pause ▶❙❙ button. A red dot will flash in the bottom of the display.at the same time as the current track number is displayed. Press and release the Play/Pause ▶❙❙ button again to continue to play the track/CD.

- Skip ▶▶❙

  Press and release the Skip ▶▶❙ button.

- Previous track:❙◀◀

  Press and release the Skip ❙◀◀ button.

- Fast forward within a track:

  Press and hold the Skip ▶▶❙ button.

- Fast backward within a track:

  Press and hold the Skip ❙◀◀ button.

- Stop ■

  Press and release the Stop ■ button. The CD will stop and the total number of tracks on the CD will be displayed.

Programmed play mode

In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 20 tracks in total.

Note: To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

Using your Kids Boombox with Microphone

Let's get started

In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. If the CD is playing press Stop ■ to stop.
2. Press and release the Program button, '01' flashes in the display.
3. Use the Skip ▶▶| or Skip |◀◀ buttons to go to the track number that you would like to program to play first. Press and release the Program button to confirm.
4. '02' will now be flash in the display and you can select the second track that you would like to programme. Continue to select each track as in Steps 2 and 3 above, up to a total of 20 tracks.
5. Press and release the Program button twice after your final selection, to confirm the last track in the programmed play list. Your boombox will display the numbers of the tracks in the order that they have been saved into the programmed play list.
6. Press and release the Play/Pause ▶❙❙ button on the boombox to play the programmed tracks.
7. To exit programmed play mode, press and release the Stop ■ button twice.

Repeat mode

You can select to repeat a single track or all of the tracks on the CD or in the saved programmed play list.

Repeat current track only.

- Press and release the Repeat button once whilst a track is playing, a red dot will appear after the track number and will flash in the display.

Repeat all tracks.

- Press and release the Repeat button a second time, the red dot after the track number will remain steady on.

Cancel repeat.

- Press and release the Repeat button a third time to switch off repeat mode.

Using your Kids Boombox with Microphone

Let's get started

Remove the CD

1. Open the lid of the CD player on the front right edge, where there is a scooped recess. **'00'** will be displayed.
2. Put your thumb on the central spindle and put your fingers under the outside edge of the CD and lift off and remove the CD from the compartment.
3. Close the lid of the CD player '**- -**' followed by **'no'** will be displayed.

Note: If you stop or pause playing a CD for 10 minutes, your boombox will go to Standby mode automatically.

Caring for compact discs

- **Do NOT** touch the playback side of the CD.
- **Do NOT** attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- **Do NOT** use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- **Do NOT** store discs in a place subject to direct sunlight or near a heat source.
- **Do NOT** store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

Using your Kids Boombox with Microphone

Let's get started

Using the FM Radio

Telescopic antenna

Please make sure that the telescopic antenna on the back of the boombox is fully extended and adjusted before you attempt to tune to an FM radio station (a vertical position is recommended)

FM Radio mode

Check that your boombox is in FM radio mode. If you are not already in FM mode, slide the side switch on the left hand side of the boombox to FM. The display will be blank but the red power LED will indicate that the product is on.

Tuning to an FM station

In FM mode:

Use the FM tuning wheel on the right hand side of your boombox to tune to an FM station, using the marked frequencies as a guide. Please adjust the volume so that you can hear when you have tuned to a radio station.

Note: If reception is poor check that the telescopic antenna is fully extended or try moving the boombox to another location.

This page is left intentionally blank

This page is left intentionally blank

4 Other information

Other information

Helpful technical information

Technical specification.


Power supply :	AC 230-240V/50Hz
Batteries:	6 x 1.5V C-size (also known as LR-14 and UM-2) (not supplied)
Power consumption:	13W
Audio output:	2 x 1W RMS
Radio frequency:	FM 88 - 108 MHz
Headphone socket:	3.5mm
Microphone socket:	3.5mm

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

This page is left intentionally blank

5 Product support

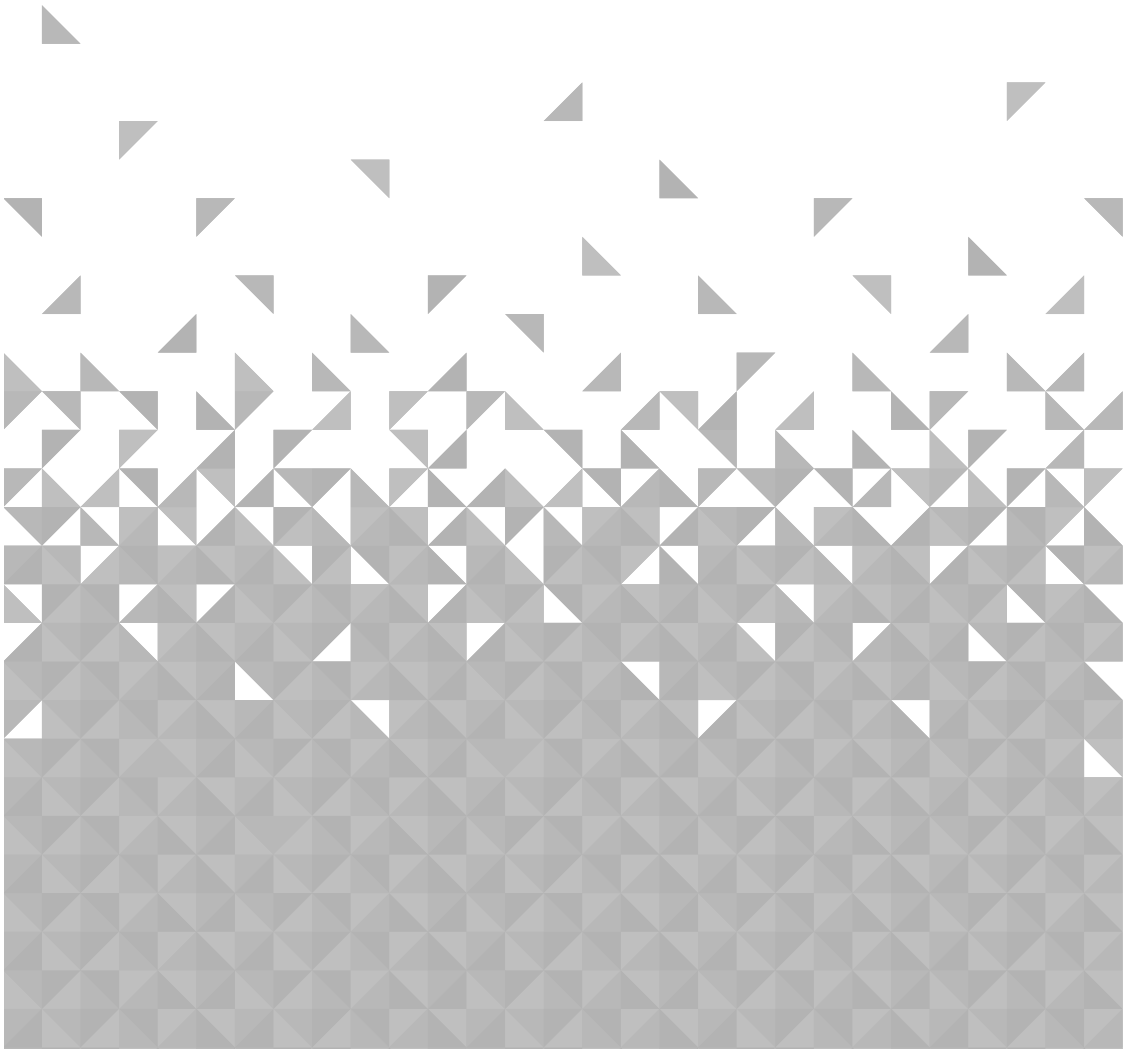

Product support

Help is always at hand

Troubleshooting

No sound / power:

- Adjust the volume using the rotary control.
- Check that the mains power wall socket is switched on and that the boombox is not in Standby mode.
- Check that you are trying to use the function buttons for the mode that you are in.
- If you are using battery power, the batteries may be exhausted. Change the batteries.

Radio reception is poor:

- Fully extend the telescopic antennal to get the best reception and sound quality.
- Retune the radio station/s.
- Try moving your boombox to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your boombox, causing interference.

The function buttons do not respond:

- Check that mains power wall socket is switched on and that the boombox is not in Standby mode.
- Check that you are trying to use the function buttons for the mode that you are in.

CD does not play:

- Check that you are in CD mode. Slide the side switch on the left hand side of the boombox to CD.
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the boombox or may skip or not rotate correctly.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Kids Boombox with Microphone is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.bush-support.com**

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.		You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.

CE

This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Kids Boombox with Microphone KBB-813A is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting http://www.bush-support.com/

Product support

Help is always at hand

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

This page is left intentionally blank

This page is left intentionally blank

BUSH

Contact:

www.bush-support.com

Helpline: 0345 600 3021