
MEET YOUR FIRE HD 10

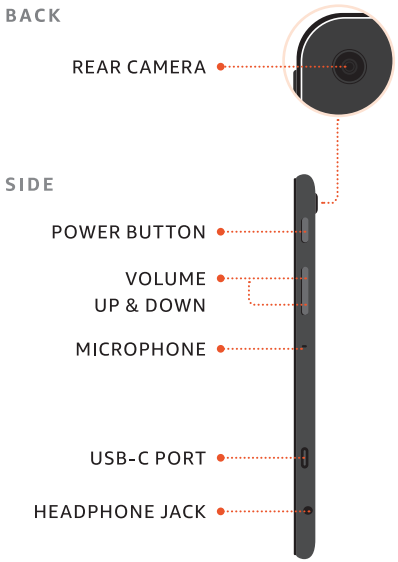


Also included: USB-C cable, power adapter.



ACTIVATE YOUR FIRE HD 10

1 POWER
Power on your tablet.

2 SETUP
Follow the on-screen instructions to complete setup.

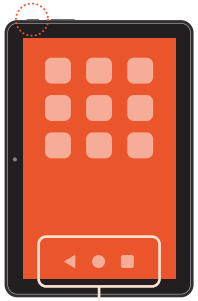



Tip:
swipe up to unlock the device.

NAVIGATE FROM HOME SCREEN

- Go back
- Return home
- Switch between apps

EXPLORE YOUR FIRE HD 10

TO ACCESS SETTINGS AND SHORTCUTS



Swipe down for settings and quick controls.

Swipe left for libraries.

Swipe right for books, TV shows, movies, games, and other content.

CHARGE YOUR FIRE HD 10



For troubleshooting tips and Amazon Customer Service, visit www.amazon.com/devicesupport.