cookworks

Fixed Stand Mixer

Model No. KM6003B-GS



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference

YOUR HELPING HAND IN THE KITCHEN
cookworks
1 YEAR COOKWORKS GUARANTEE


ELECTRICAL SAFETY

- You should only plug the appliance into a 220V–240V AC, 50–60Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug if unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep motor housing, cable and plug dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not cover or block the ventilation holes.
- Do not pull on the cable to disconnect from mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard, it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Only use with the parts provided.
- Never place hands or utensils inside the mixing bowl or near the mixing heads whilst the mixer is in use. Only use a scraper when the mixer is not in operation.
- Do not cover the mixer and allow the motor housing to cool fully before storing.
- Do not leave unattended during use.
- This appliance can cause personal injury if misused.

PARTS

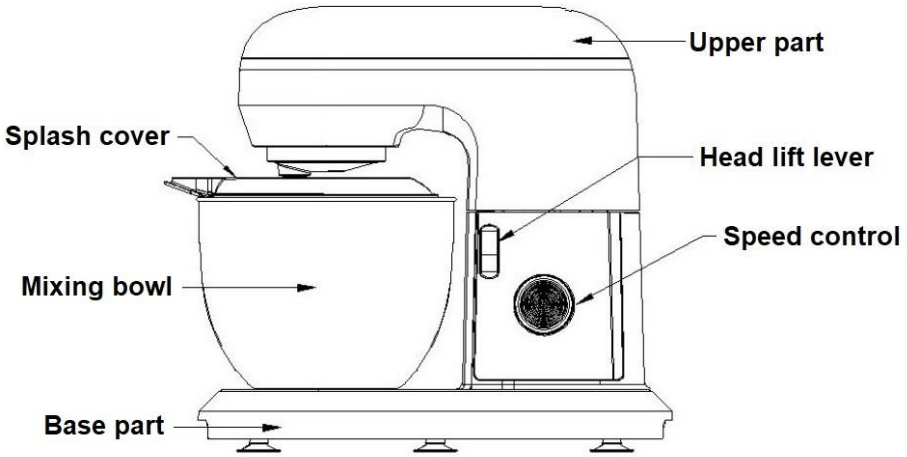



Dough hook Flat beater Whisk

ASSEMBLING THE STAND MIXER

1. Position the stand mixer on a flat and stable surface. Make sure the mixer is unplugged from the mains power supply.
2. To installing the mixing tools, turning the head lift lever clockwise and carefully raise the upper part until it locks into the open position.
3. Select the required mixing tool for use: Flat beater for general purpose mixtures; Dough hook for mixing and kneading yeast dough; Whisk to mixing egg white or cream.
4. Push the selected mixing tool onto the attachment shaft and turn it in a clockwise direction to lock it into position. (Fig. 1). To release the mixing tool, push it in an upward direction, turn it in an anti-clockwise direction and then pull it out.
5. Fit the stainless-steel mixing bowl onto the base part of the mixer, turning it in a clockwise direction to lock it into position. (Fig. 2) **Note: the mixing bowl can only be inserted or removed when the mixer is in the opened position.**
6. Turning the head lift lever again to lower the upper part of the mixer back to the horizontal position.
7. Simply attaching the splash cover onto the mixing bowl in place. (Fig. 3)

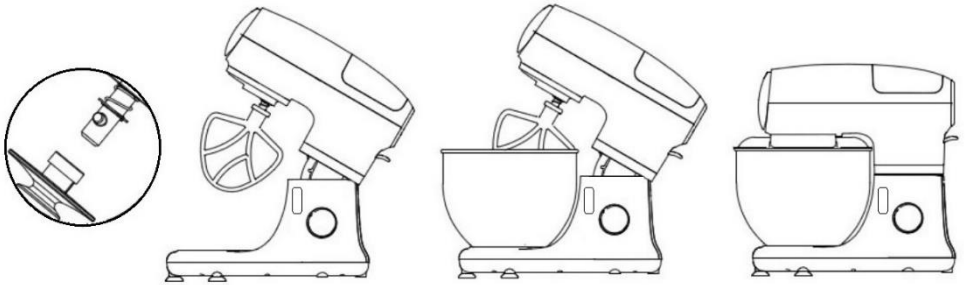


Fig. 1 **Fig. 2** **Fig. 3**

TO USE

1. Clean thoroughly before first use.
2. Assemble the stand mixer with the mixing bowl and required mixing tool in open position as last section described.
3. Place the ingredients to be mixed into the mixing bowl. Note: Do not fill over the 3L maximum marking in the mixing bowl.
4. Turning the head lift lever and carefully lower the upper part into the closed position and insert the splash cover accordingly.
5. Fully unwind the mixer cable and check that the speed control is in the off (0) position and then plug in.
6. Switch on the mixer using the speed control. Speed 1 is the slowest setting and speed 10 the fastest. The mixing tool will start to turn.

   Note: It is recommended to always begin mixing on a low-speed setting before gradually increasing to a high-speed setting to prevent the ingredients from splattering.
7. To use the mixer on pulse function, turn and hold the speed control to the Pulse (P) position for short intervals. The mixer will operate at full speed, when the desired mix is achieved, release the speed control dial.
8. To switch off, turn the speed control to the off (0) position and allow the mixing heads to come to a complete stop before checking the consistency of the mix.
9. The maximum mixing time shall be less than 10 mins.
10. If further mixing is required, wait at least 20 minutes before restarting the mixer.

Notes:

- Do not run the mixer dry (without the ingredients in the mixing bowl).
- Use refrigerated ingredients (e.g. butter and margarine) at room temperature.
- To minimise splashing during mixing, using a splash cover to adding powders / ingredients from the cover opening and start the mixer on the slowest speed setting working up to the higher setting.

CLEANING

1. Switch off and unplug.
2. Remove the bowl and mixing tools and wash these in hot water with a little washing up liquid. Rinse and wipe dry. The bowl and mixing tools are suitable for dishwashers.
3. Wipe the outside of the upper part and base part and cable with a damp cloth and then wipe dry. Do not use detergent or abrasives as these may scratch the surface.
4. Never immerse the upper part, cable or plug in water and not suitable for dishwashers.

TECHNICAL SPECIFICATION

Cookworks Fixed Stand Mixer		
Model		KM6003B–GS
Rated Voltage & Frequency		220 – 240V AC, 50 – 60Hz
Rated Power Input		1000W
Maximum work time	Speeds 1 – 10	10 minutes
Class rating		II (double insulated)
BS 1362 fuse		13A
Product dimensions (external)		410 x 226 x 378 mm
Product weight (net)		5.7 kg approx.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

PLUG / WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:


BLUE = NEUTRAL
BROWN = LIVE

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

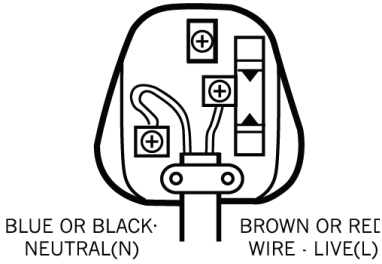

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

Produced in China. Argos Limited, London, EC1N 2HT, UK.
Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.
www.argos.co.uk/cookworks
Tel: 0345 640 3030

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
London
EC1N 2HT
www.argos-support.co.uk