
Panasonic

Basic Operating Instructions

CD Stereo System

Model No. **SC-PM702**

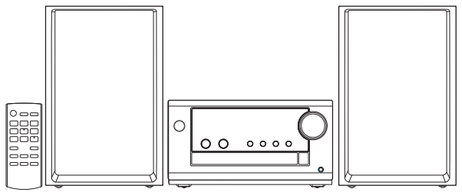

Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.
Please keep this manual for future reference.

This manual contains basic information. Visit website below for detailed instructions.
https://panasonic.jp/support/global/cs/audio/oi/sc_pm700/

Manufactured by: Panasonic Entertainment & Communication Co., Ltd.
1-10-12 Yagumo-higashi-machi, Moriguchi City,
Osaka 570-0021, Japan

Importer for UK: Panasonic UK, a branch of
Panasonic Marketing Europe GmbH
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

Authorized Representative in EU: Panasonic Marketing Europe GmbH
Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany

EU

Panasonic Entertainment & Communication Co., Ltd.
Web Site: https://www.panasonic.com

EB En

© Panasonic Entertainment & Communication Co., Ltd. 2023

TQBM0876
L0323CH0

Your system and the illustrations can look differently.
These operating instructions are applicable to the following system.

System	SC-PM702
Main unit	SA-PM702
Speakers	SB-PM700



Back of product

The symbols on this product (including the accessories) represent the following:

~	AC
⎓	DC
⧈	Class II equipment (The construction of the product is double-insulated.)
|	ON
⏻	Standby

Declaration of Conformity (DoC)

Hereby, "*Panasonic Entertainment & Communication Co., Ltd.*" declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Customers can download a copy of the original DoC to our RE products from our DoC Server:
https://www.ptc.panasonic.eu/compliance-documents

Contact to Authorised Representative:
Panasonic Marketing Europe GmbH, Panasonic Testing Centre, Winsbergring 15, 22525 Hamburg, Germany

UK Declaration of Conformity (DoC)

Hereby, "*Panasonic Entertainment & Communication Co., Ltd.*" declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017 No.1206.

Customers can download a copy of the original DoC to our RE products from our DoC Server:
https://www.ptc.panasonic.eu/compliance-documents

Contact in the UK: Panasonic Testing Centre on behalf of Panasonic UK, a branch of Panasonic Marketing Europe GmbH (Importer)
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

Type of wireless	Frequency band	Maximum power (dBm E.I.R.P.)
Bluetooth®	2402 – 2480 MHz	4 dBm

Safety precautions

WARNING!

Unit

- To reduce the risk of fire, electric shock or product damage,
  - Do not expose this unit to rain, moisture, dripping or splashing.
  - Do not place objects filled with liquids, such as vases, on this unit.
  - Use the recommended accessories.
  - Do not remove covers.
  - Do not repair this unit by yourself. Refer servicing to qualified service personnel.

CAUTION!

Unit

- To reduce the risk of fire, electric shock or product damage,
  - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
  - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
  - Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit is intended for use in moderate climates.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

AC mains lead

- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

Battery

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- Avoid the use in the following conditions
  - High or low extreme temperatures during use, storage or transportation.
  - Replacement of a battery with an incorrect type.
  - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
  - Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

Caution for AC mains lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark ⓐ or the BSI mark ♆ on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

Before use

Remove the connector cover.

How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.
Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A


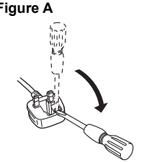


Figure B



2. Replace the fuse and close or attach the fuse cover.

Figure A





Figure B



Supplied accessories

Check and identify the supplied accessories.
Use numbers indicated in parentheses when asking for replacement parts. (Product numbers correct as of March 2023. These may be subject to change.)


☐ 1 AC mains leads (K2CT2YY00146)

☐ 1 Remote control (N2QAYB000984)

☐ 1 DAB/FM antenna (N1CYYY00022)



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Holdings Corporation is under license. Other trademarks and trade names are those of their respective owners.



These symbols indicate separate collection of waste electrical and electronic equipment or waste batteries. More detailed information is contained in "Operating Instructions (PDF format)".

Sales and Support Information

Customer Communications Centre


- For customers within the UK: 0344 844 3899
- For customers within Ireland: 01 289 8333
- Monday – Friday 9:00am – 5:00pm (Excluding public holidays).
- For further support on your product, please visit our website: www.panasonic.co.uk

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre
  Monday – Friday 9:00am – 5:00pm
  (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.pas-europe.com.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.


Making the connections

Connect the AC mains lead only after all the other connections have been made.

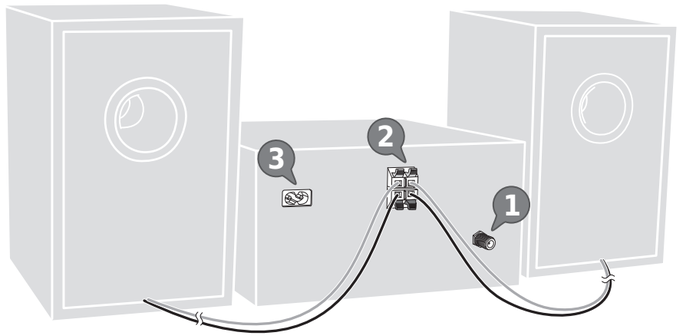


1 Connect the DAB/FM antenna.

Be sure to tighten fully the nut.
Rotate the antenna at Ⓐ to improve reception.

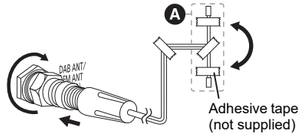


2 Connect the speakers.

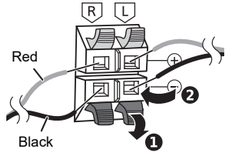


Be careful not to cross (short-circuit) or reverse the polarity of the speaker wires as doing so may damage the speakers.



3 Connect the AC mains lead.



Preparing the remote control

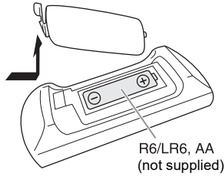


Use alkaline or manganese battery.

Install the battery so that the poles (+ and –) align with those in the remote control.

Overview of controls

Do the procedures with the remote control. You can also use the buttons on the main unit if they are the same.

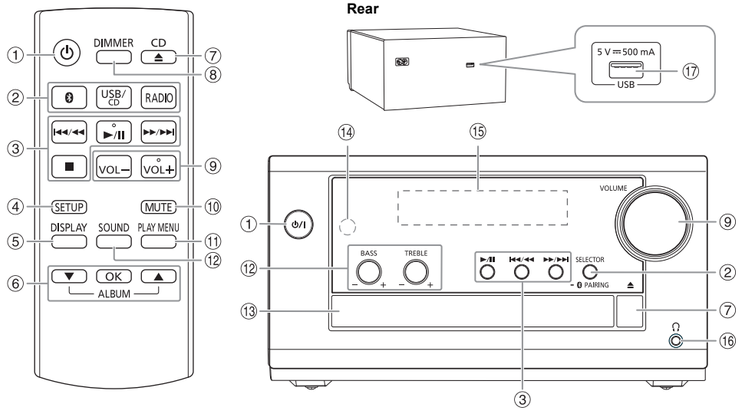

① **Standby/on switch** [⏻], [⏻/I]
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

② **Select the audio source**
On the main unit:
Press [SELECTOR] repeatedly to select the source:
CD → BLUETOOTH → DAB+ → FM → USB
To start Bluetooth® pairing, press and hold [– PAIRING].

③ **Basic playback control**

Play	Press [▶/❚❚].
Stop	Press [■].
Pause	Press [▶/❚❚]. Press again to continue playback.
Skip	Press [⏮/◀◀] or [▶▶/▶▶⏭].
Search	Press and hold [⏮/◀◀] or [▶▶/▶▶⏭].

④ View the setup menu

⑤ View the content information

⑥ Select and confirm an option
Skip MP3 albums

⑦ Open or close the disc tray

⑧ Decrease the brightness of the display panel
To cancel, press the button again.

⑨ Adjust the volume level

⑩ Mute the sound
To cancel, press the button again.
"MUTE" is also cancelled when you adjust the volume or when you switch off the system.

⑪ View the play menu

⑫ Select the sound effects

⑬ Disc tray
Put in a disc with the label facing up.

⑭ Remote control sensor
Distance: Within approximately 7 m
Angle: Approximately 10° up and 30°down, 30° left and right

⑮ Display panel

⑯ **Headphones jack** (🎧)
Plug type: Ø 3.5 mm stereo (not supplied)
– Excessive sound pressure from earphones and headphones can cause hearing loss.
– Listening at full volume for long periods may damage the user's ears.

⑰ USB port (DC 5V ⎓ 500 mA)

Basic operations

Bluetooth®

Preparation
Switch on the Bluetooth® feature of the device and put the device near the system.

Pairing a device

1 Press and hold [– PAIRING] on the main unit until "PAIRING" is shown.

2 Select "SC-PM702/PM704" from the Bluetooth® menu of the device.

Connecting a device

1 Press [ ].

2 Select "SC-PM702/PM704" from the Bluetooth® menu of the device.

3 Start playback on the device.

FM Radio

1 Press [RADIO] repeatedly to select "FM".

2 Press [PLAY MENU] repeatedly to select "TUNE MODE".

3 Press [▲, ▼] to select "MANUAL" and then press [OK].

4 Press [⏮/◀◀] or [▶▶/▶▶⏭] to tune in to the station.
To tune automatically, press and hold the button until the frequency starts changing quickly.

DAB+

1 Press [RADIO] repeatedly to select "DAB+".
If you select "DAB+" for the first time, the system will tune automatically.

2 Press [PLAY MENU] repeatedly to select "MANUAL SCAN".

3 Press [▲, ▼] to select the frequency block and then press [OK].
If no station is detected, "SCAN FAILED" is shown.
Adjust the antenna and try again.