INSTRUCTION MANUAL

MODEL:TX-1608B

1. GENERAL SAFETY INSTRUCTIONS

Read this instruction manual thoroughly before using the appliance and save it for future reference and if necessary pass the instruction manual to a third party.

WARNING: When using electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

1) General

Check if the electrical specifications of this appliance are compatible with your installation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

To protect against electrical hazard, do not immerse in water or other liquids. Do not use near water.

This appliance is for indoor use only.

Do not place objects on top of the unit.

Do not unplug the unit if your hands are wet, electrical shock could occur.

Do not carry the appliance while it is operating.

Place it on a secure and level area. Keep out of reach of children to prevent any accident.

Unauthorized use and technical modifications to the appliance can lead to

danger to life and health.


Do not push any object into the appliance. Do not disassemble the appliance.

2) Electrical safety

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

2. DRAWING AND ASSEMBLING.

1. Front grill
2. Blade cap
3. Blade
4. Nut
5. Rear grill
6. Motor
7. Oscillation knob
8. Control box Screw
9. Tube
10. Small plastic base
11. Screws (4 pcs)
12. Cross base (2 pcs)
13. Cross base feet (4 pcs)
14. Grill clip

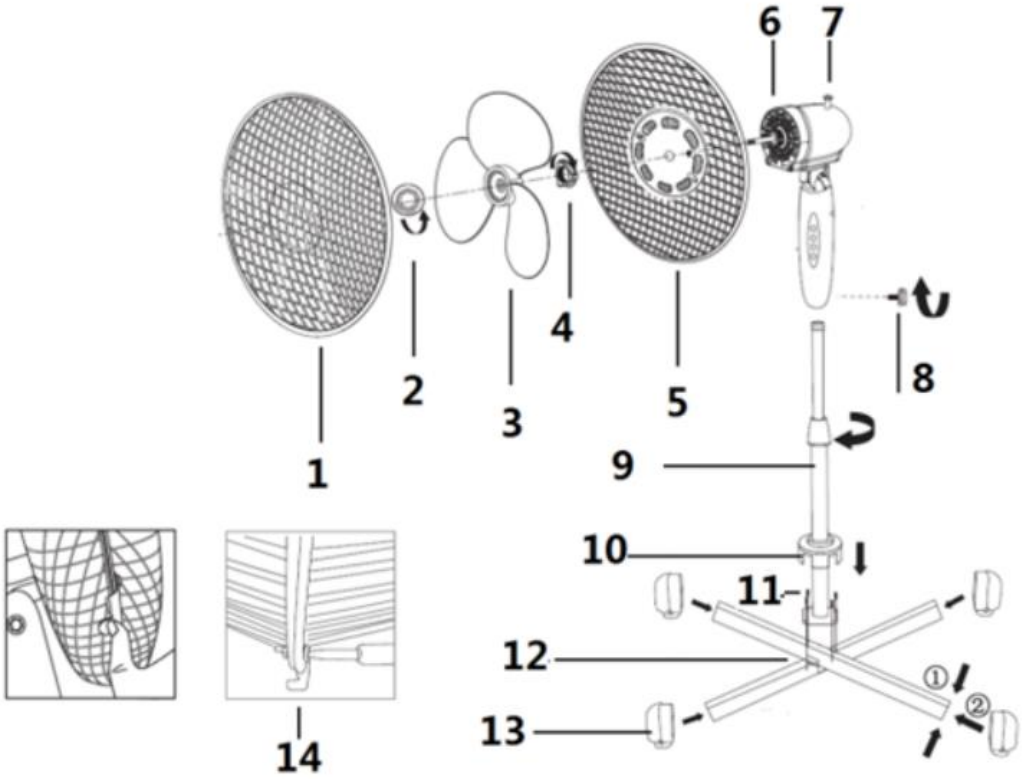

3. OPERATION.

1. When you push and pull the Oscillation Knob you can switch the oscillating function ON or OFF.
2. By pushing the fan control switch, and choose the speed levels:

   0=OFF,

   1=Low speed,

2=Medium speed,

3=High speed

4. MAINTENNANCE/CLEANING

Disconnect from mains before maintenance or cleaning.

Use only a damp cloth to clean the enclosure.

Plastic parts should be cleaned with mild soap and a damp cloth. The fan must be cleaned thoroughly before storage and covered with plastic bags and stored in a dry place.