
Livingston Double Unit

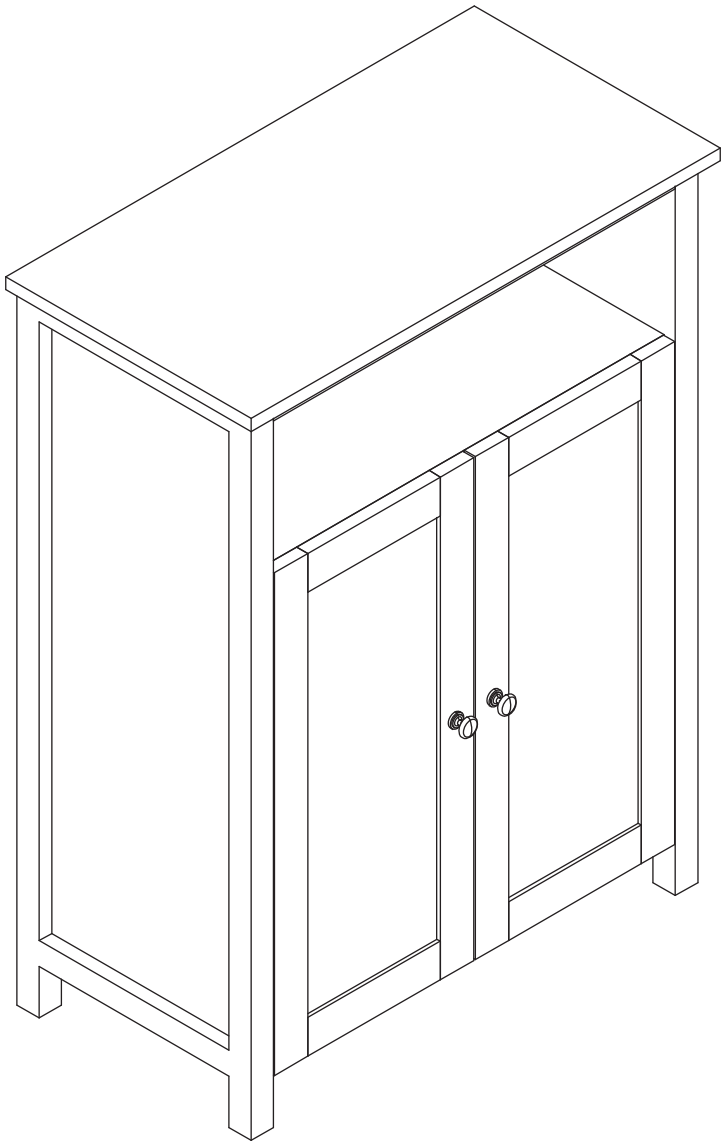

Spare Parts

www.argos-support.co.uk

Help@ClickSpares.co.uk

0370 112 1928

Customer Support

0345 640 2020

Issue 3 - 02/08/2024

⚠Safety and Care Advice

Product Details

Blue 2206053
Cream 4583736
Sage Green 4199450

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• This product has been constructed to be used in the domestic environment only and not for commercial purposes.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.



• We do not recommend the use of power drill/ drivers for inserting screws as this could damage the unit.

Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.

• From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Additional Guidance

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

• Regularly check and ensure that all bolts and fittings are tightened properly.

• The assembled product must be fixed/secured to a wall which is in good condition.

WARNING!

IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED.

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent topple over:

- **Use the wall attachment device provided.**
- **Never allow children to climb or hang on drawers, doors or shelves.**
- **Place heaviest items in the lower drawers or shelves.**
- **Unless specifically designed to accomodate, do not set TV's or other heavy objects on top of this product.**
- **Never open more than one drawer at a time.**


An attachment device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified trades person.

Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.


Home, Argos limited and Sainsbury's Supermarkets Ltd, London EC1N 2HT, UK. Sainsbury's (NI) Ltd.
Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK

Fittings (Screws and Bolts shown to scale)


Bag 1

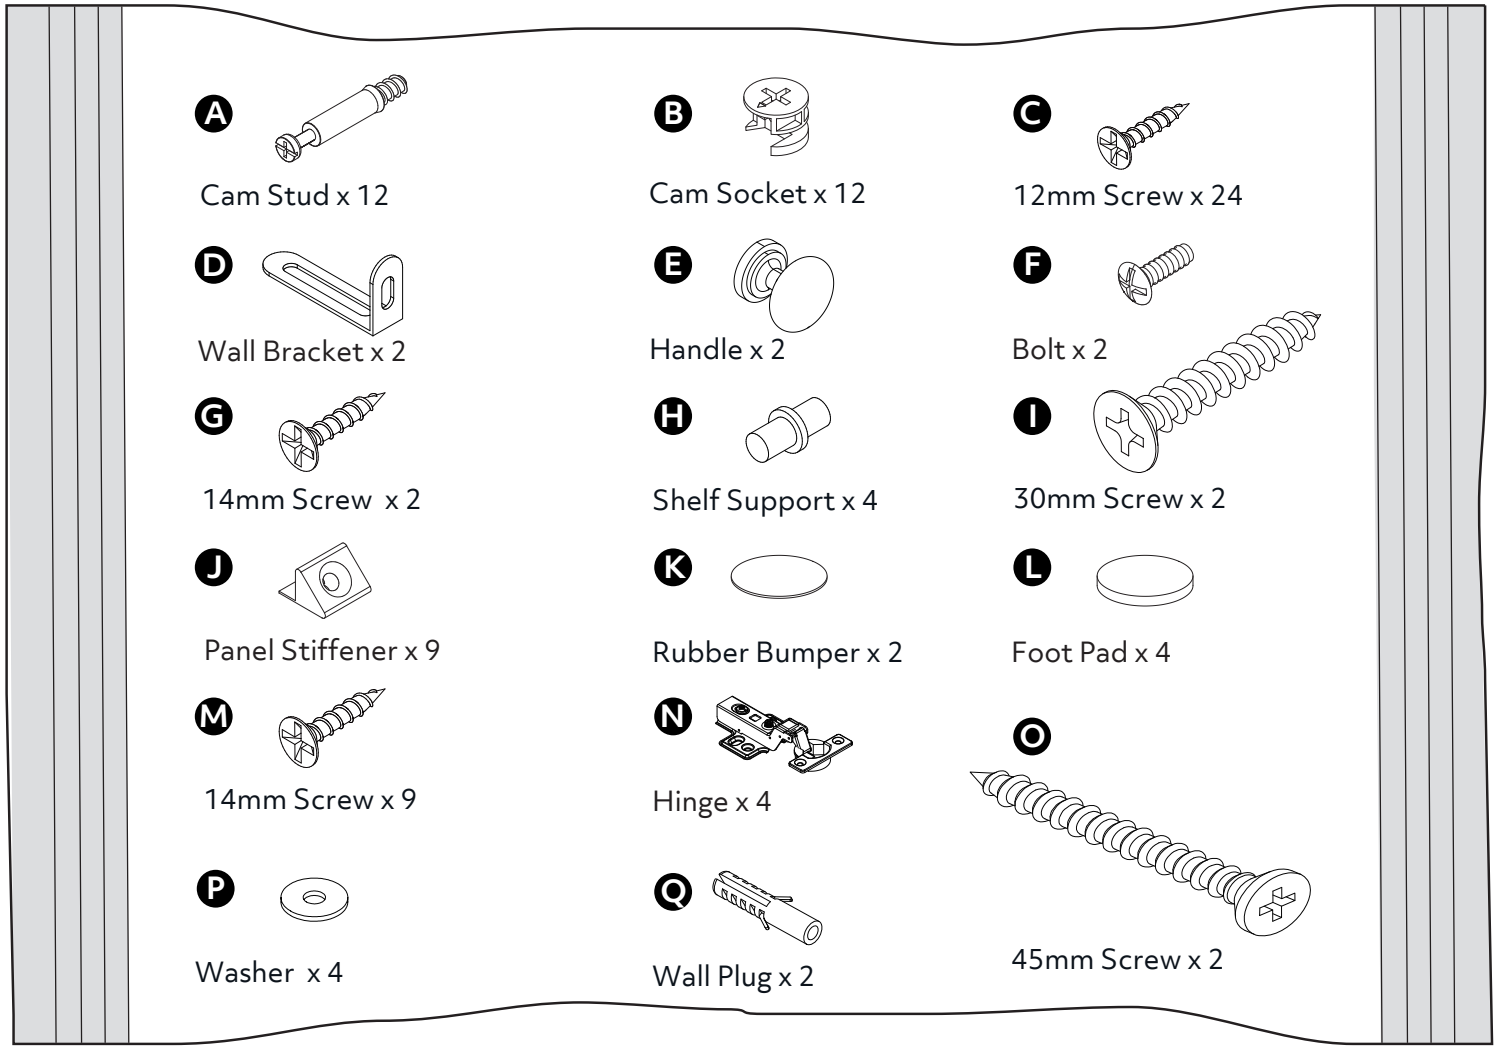


Tools required



Crosshead screwdriver (small & medium)




Flathead screwdriver (small & medium)




Mallet


Pencil



Ruler/tape measure

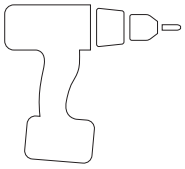


Power Drill




Eye protection (When using a mallet or drill)

Drill Heads


Panels

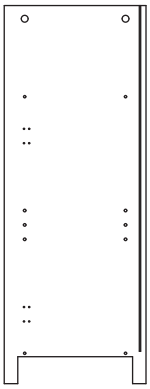


1 Left side panel x 1
(840 x 315mm)

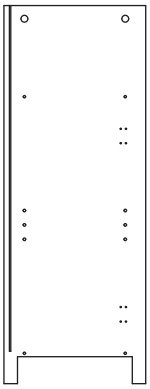


2 Right side panel x 1
(840 x 315mm)

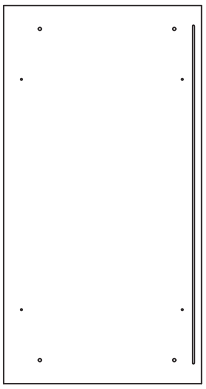


3 Top panel x 1
(630 x 330mm)

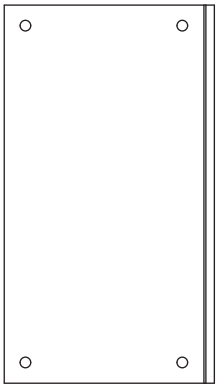


4 Shelf x 1
(541 x 300mm)

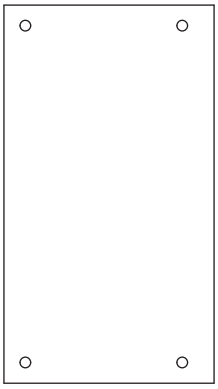


5 Bottom panel x 1
(541 x 300mm)




6 Adjustable shelf x 1
(539 x 283mm)

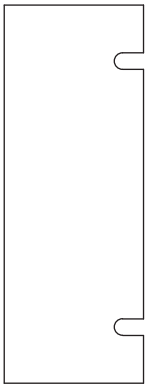

7 Upper door panel x 1
(550 x 207mm)




8 Under back panel x 1
(550 x 566mm)

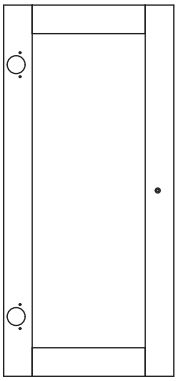


9 Door x 2
(583 x 267mm)

10 Rail x 1
(540 x 30mm)


1

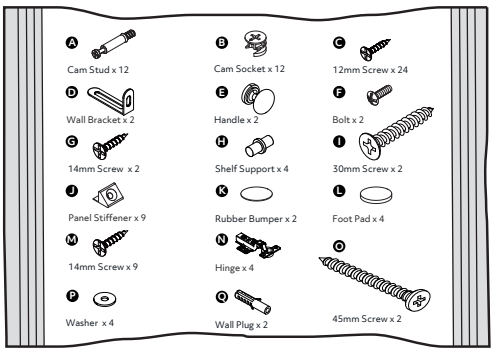


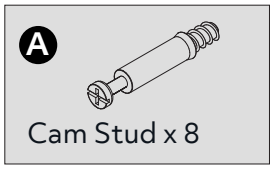


For how to use camlocks watch our video:


www.youtube.com/watch?v=tBMdYxtpu88

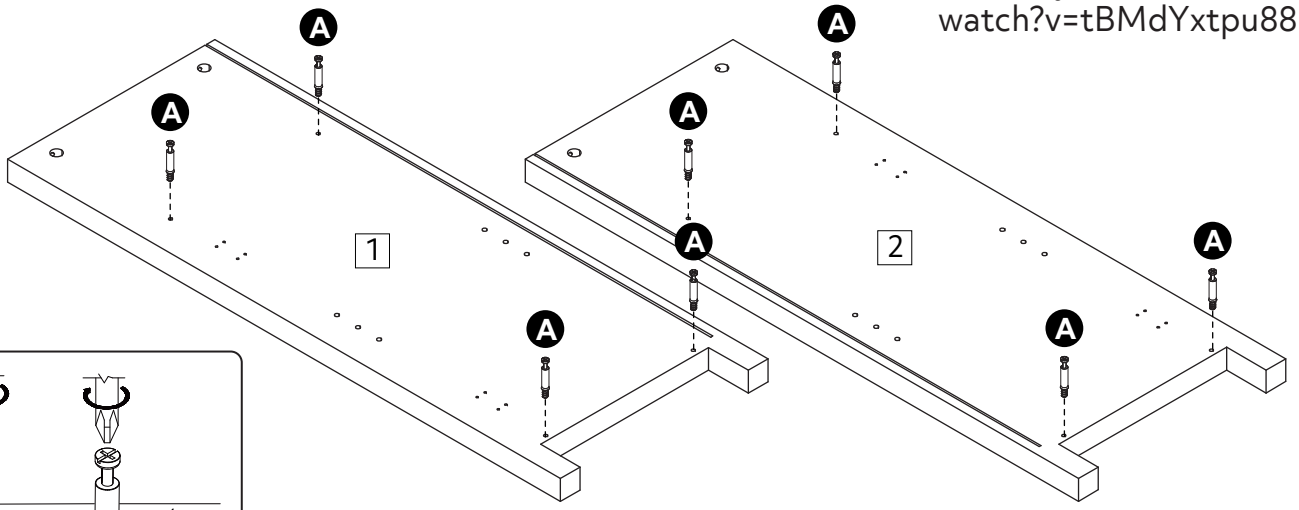


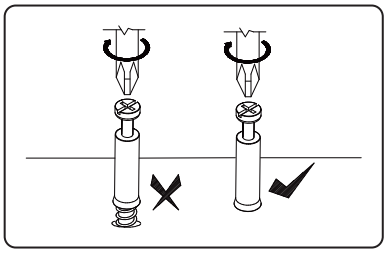

2

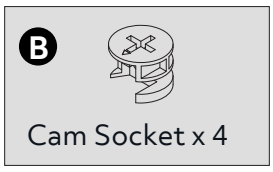

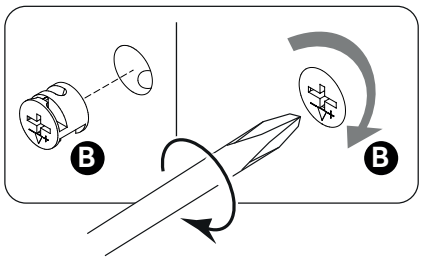


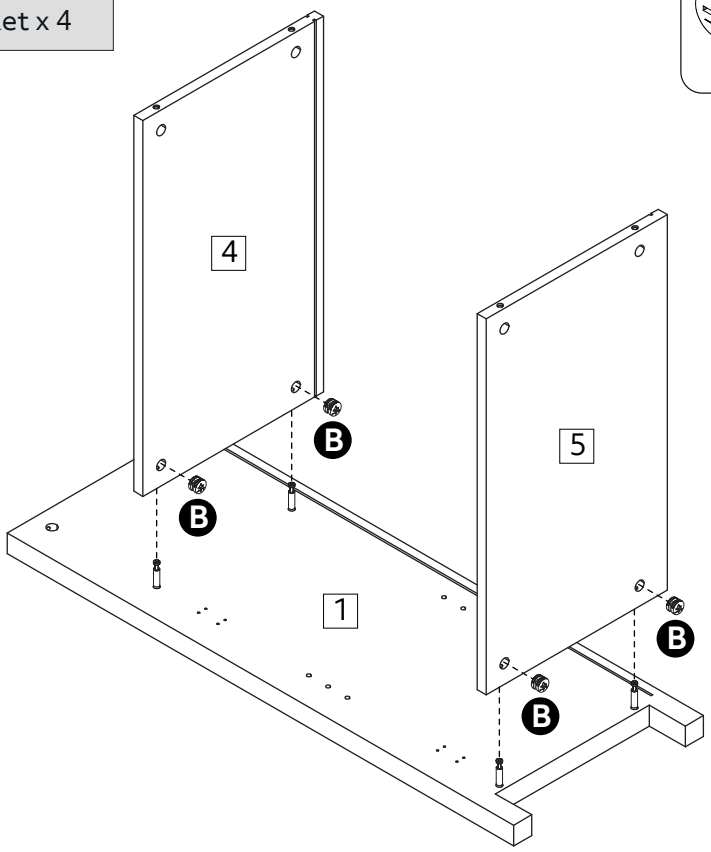


3


B  Cam Socket x 4


L  Foot Pad x 4

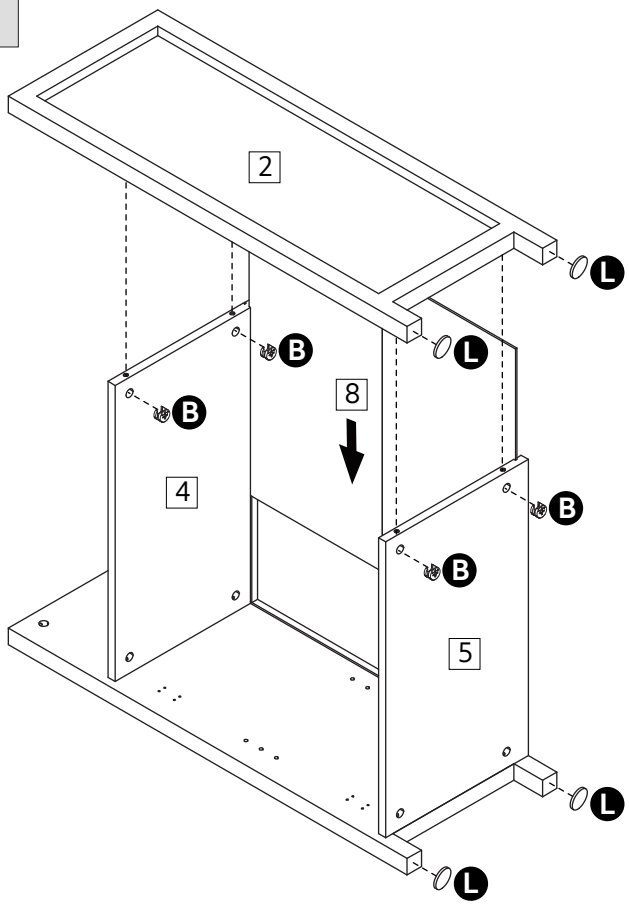


4


A  Cam Stud x 4

D  Wall Bracket x 2

G  14mm Screw x 2

I  30mm Screw x 2

P  Washer x 2

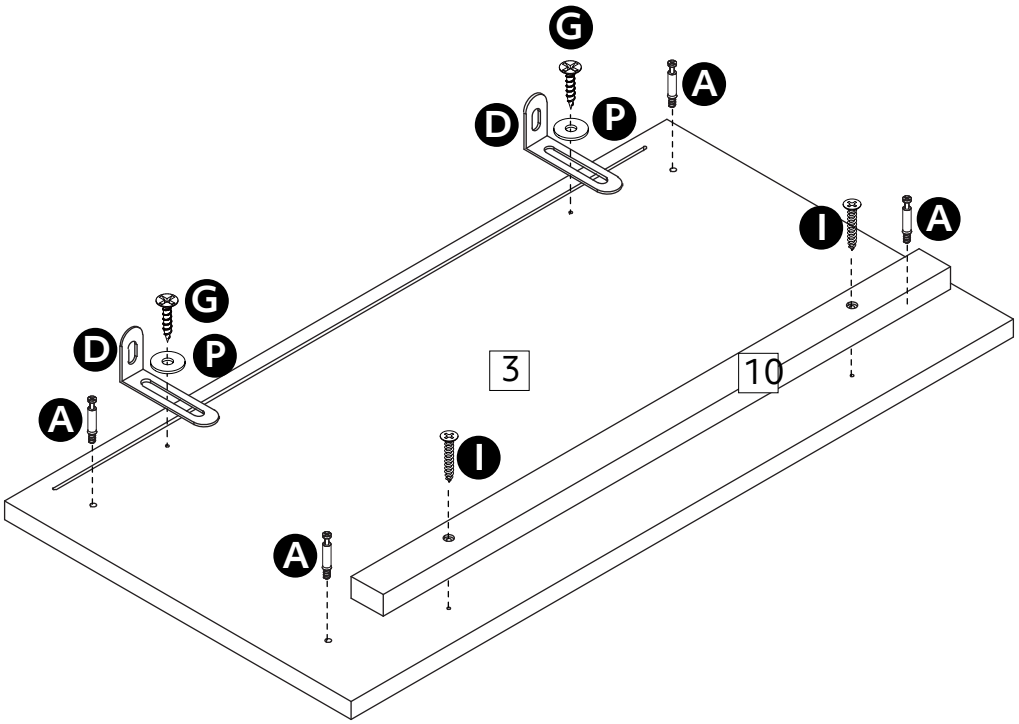


5

B



Cam Socket x 4

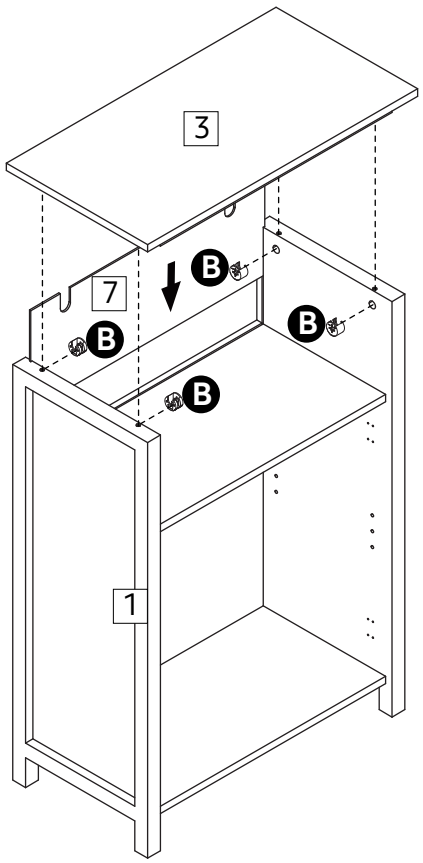



6

C  12mm Screw x 8

E  Handle x 2

F  Bolt x 2

N  Hinge x 4

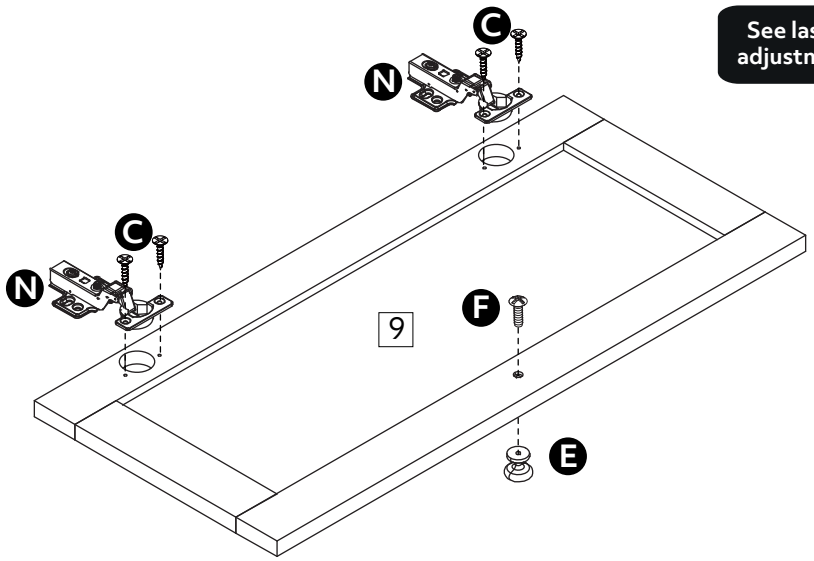

See last page for hinge adjustment instructions


Repeat x2


7

C



12mm Screw x 16

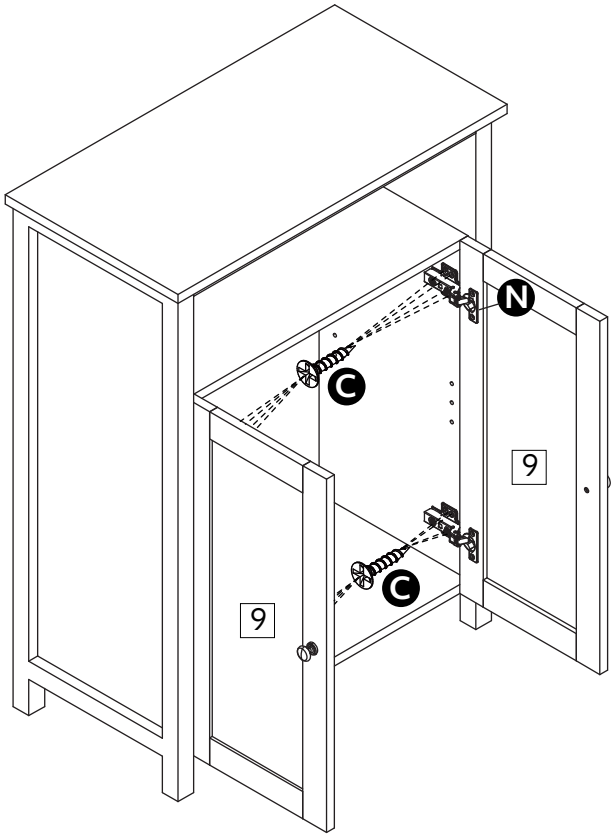

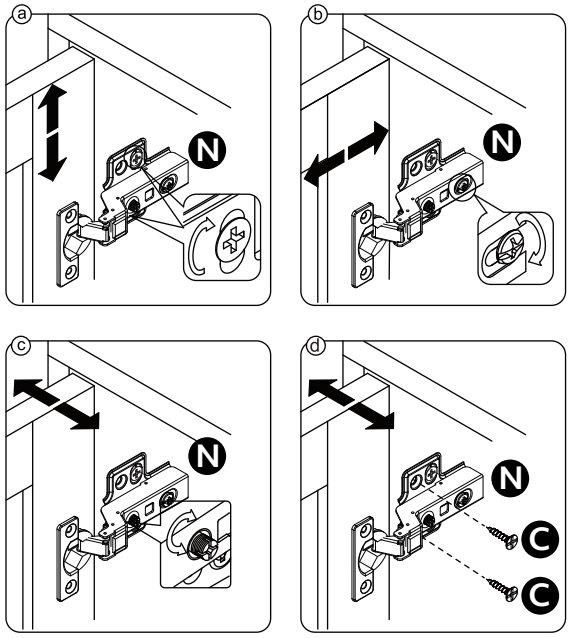

See last page for hinge adjustment instructions

8

H




Shelf Support x 4

K



Rubber Bumper x 2

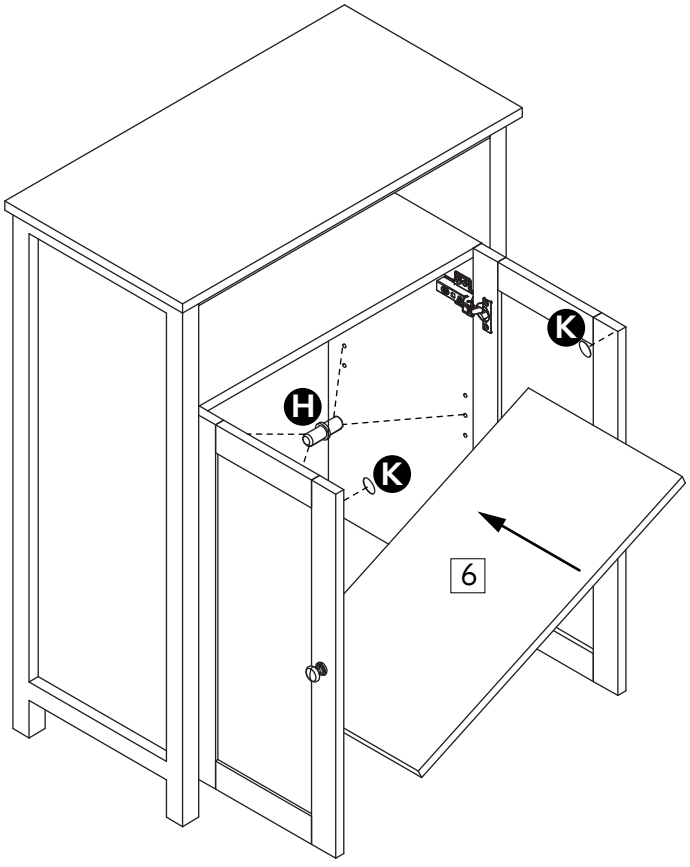


Turn Product

9

M 14mm Screw x 9

J Panel Stiffener x 9

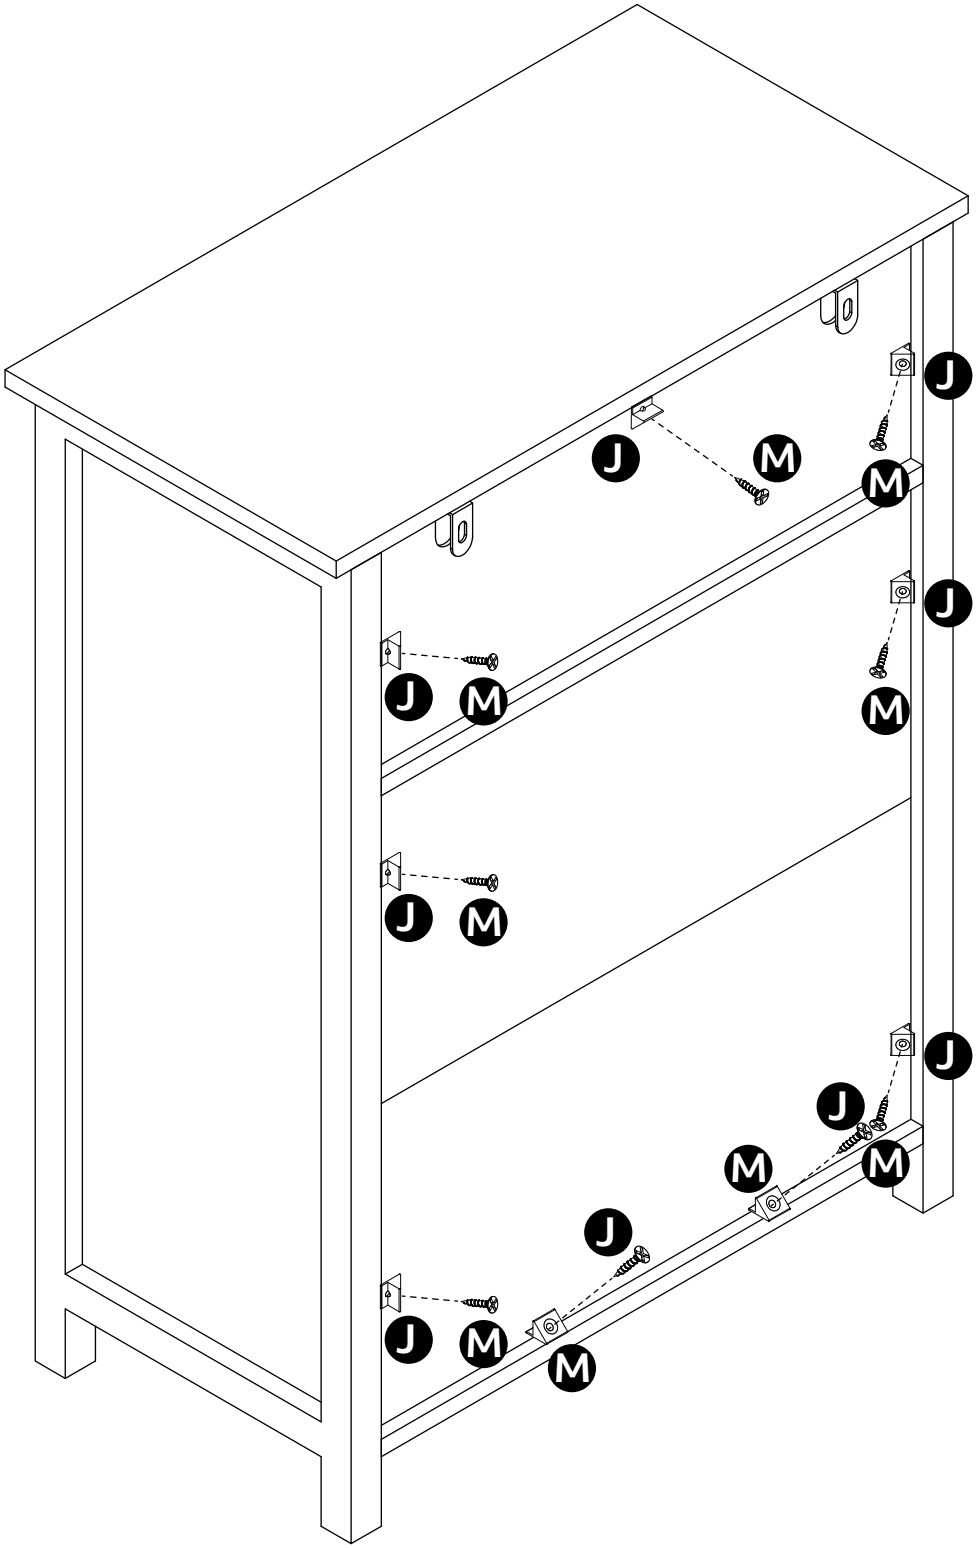

Turn Product

10


O 45mm Screw x 2


P Washer x 2

Q Wall Plug x 2

WARNING!


IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED

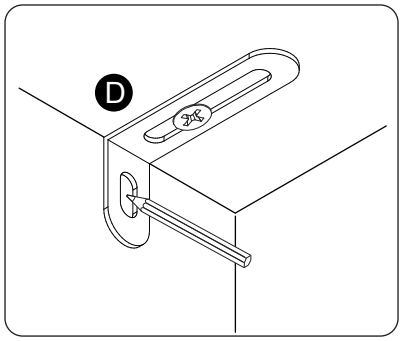

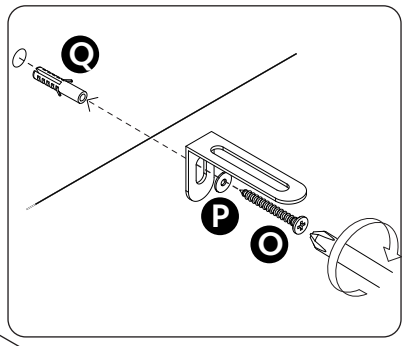

WARNING!

BEFORE DRILLING, CHECK WALL FOR HIDDEN PIPES AND CABLES.

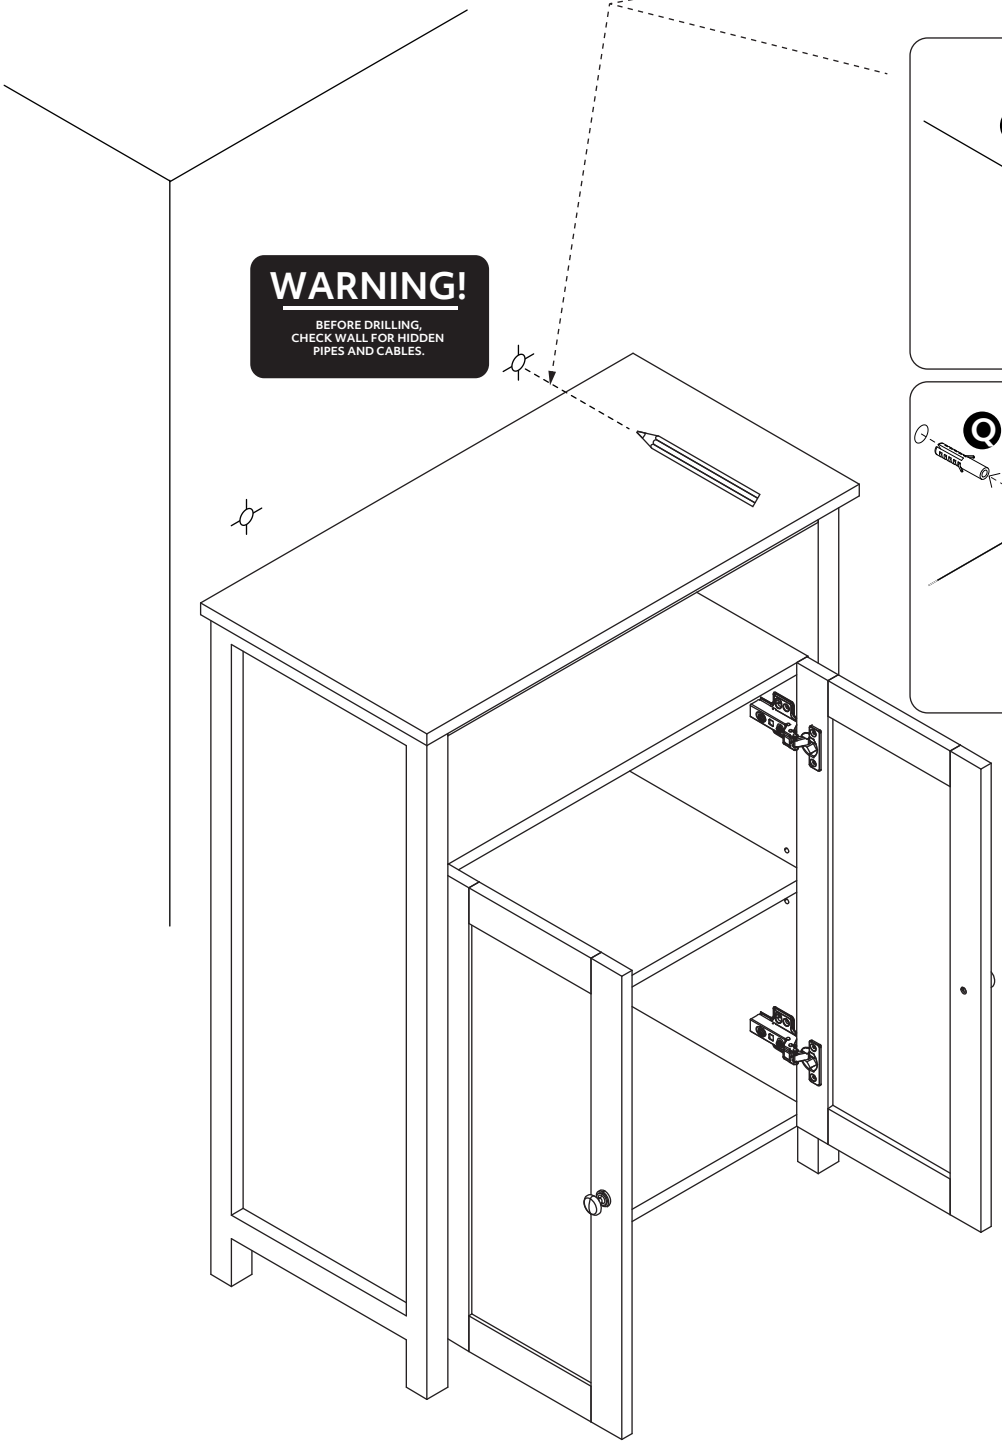

ASSEMBLY COMPLETE

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, eg:



- these are suitable for use in masonry walls

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

1. General rule: always use a larger screw and wall plug if you are not sure.
2. Ensure you use the recommended drill bit to match the wall plug and hole size.
3. Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No. 1 “General Purpose” wall plug

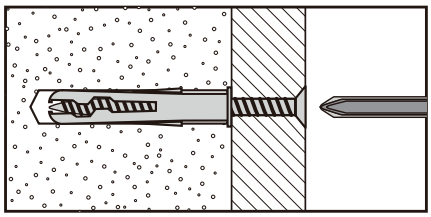


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No. 2 “Plasterboard” wall plug

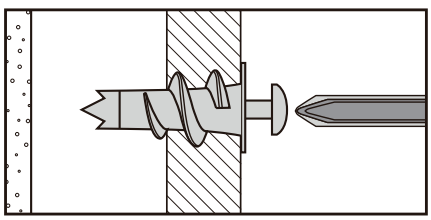


For use when attaching light loads onto plasterboard partitions.

No. 3 “Cavity Fixing” wall plug

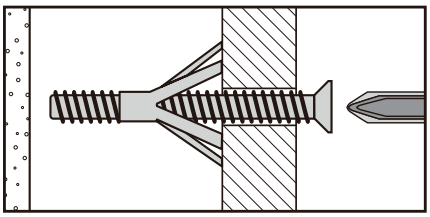


For use with plasterboard partitions or hollow wooden doors.

No. 4 “Cavity Fixing - Heavy Duty” wall plug

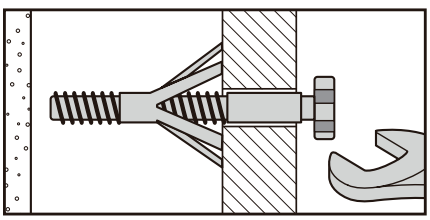


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No. 5 “Hammer Fixing” wall plug

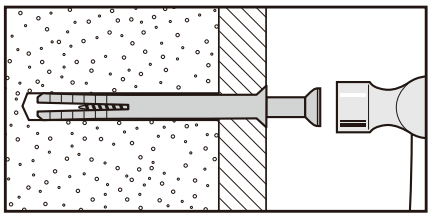

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No. 6 “Shield Anchor” wall plug - heavy loads

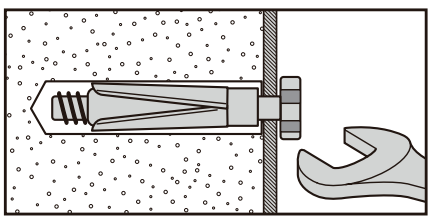

For use with heavier loads such as TV and HiFi speakers and satelite dishes etc.

Care & Maintenance


Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Using camlocks

Step 1:


Connect the cam stud as directed in the assembly instructions using a screwdriver.

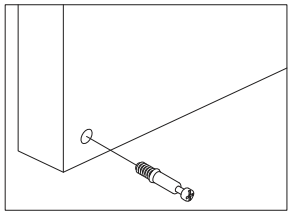

Step 2:


Insert the cam socket as shown in the instructions.

Note: Ensure that the aarow on the top of the camlock points towards the entry hole for the cam socket.

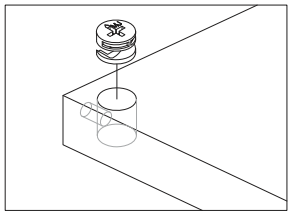

Step 3:

Push the cam stud into every hole.

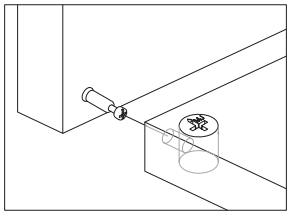


Step 4:

Turn the cam socket with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

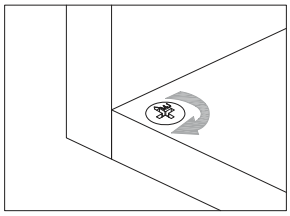

For how to use camlocks watch our video:

www.youtube.com/watch?v=tBMdYxtpu88

Adjusting hinges

Hinge adjustment

Step 1:

To move the door up or down, loosen screws shown and move the door to suit.

Step 2:


To move the door in or out, loosen screws shown and door panel to suit.

Retighten screws


Step 3:

To move the door left or right, adjust screws shown.

1.

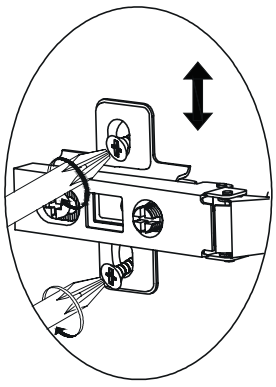

2.

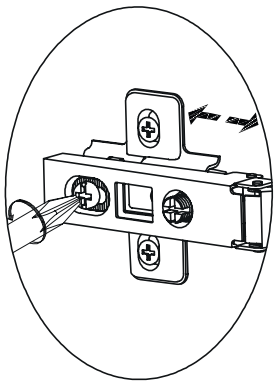

3.

