

# TCL

---

 Google TV

## OPERATION MANUAL



TCL Home App

Your TCL Smart Hub.

Download Now !



V6C/P6K SERIES

To enjoy all smart features and services on your TCL Google TV, a free Google account, a free TCL account, and a reliable broadband internet connection, are required.  
Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.




## Safety

Ensure that your domestic mains supply voltage matches the voltage indicated on the identification sticker located at the back of your set. Where the mains plug, AC inlet or an appliance coupler is used as disconnect device, it shall remain readily operable.

On certain models, the light indicator is located at the side of the TV set. The absence of a light indication at the front does not mean that the TV set is fully disconnected from the mains. To disconnect the TV set completely, the mains plug must be pulled out.

The TV set's components are sensitive to heat. The **maximum ambient temperature** should not exceed **35°** Celsius. Do not cover the vents at the back or sides of the TV set. Leave sufficient space around it to allow adequate ventilation. Install the appliance away from any source of heat (fireplace, etc.) or appliances creating strong magnetic or electric fields.

**Moisture** in rooms where the set is installed should not exceed **75%** humidity. Moving the set from a cold place to a warm one can cause condensation on the screen (and on some components inside the TV set). Let the condensation evaporate before switching the TV set on again.

The  or **POWER**/ button on the TV set or the  button on the remote control can be used to switch it on and put it into standby mode. If you are **not going to be watching the TV for a lengthy period of time**, switch it off completely by removing the plug from the mains power socket.

During **thunderstorms**, we recommend that you disconnect the TV set from the mains and aerial so that it is not affected by electrical or electromagnetic surges that could damage it. For this reason, keep the **mains and aerial sockets** accessible so they can be **disconnected**, if necessary.

**Unplug** the TV set immediately if you notice it giving off a **smell of burning or smoke**. You must never, under any circumstances, open the TV set yourself, as you run the risk of an **electric shock** in doing so.

## WARNINGS

This appliance is intended for domestic household use only and should not be used for any other application, such as for non-domestic use or in a commercial environment.

If the external flexible cable or cord of this product is damaged, it shall be replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Leave more than 10cm clearance around the television to allow adequate ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is being retained and relocated, the same considerations as above should be applied.

Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Equipment without this symbol is a Class I electrical appliance. It shall be connected to a mains socket outlet with a protective earthing connection.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that the fuse may be in the neutral, and that the mains shall be disconnected to de-energize the phase conductors.

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

To reduce the risk of RF exposure, the use distance of this apparatus should be at least 100cm.

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded by a skilled person so as to provide some protection against voltage surges and built-up static charges.

## TV screen

The TV screen used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects.

The TV screen is a very high technology product, giving you finely detailed pictures. Occasionally, a few nonactive pixels may appear on the screen as a fixed point of blue, green or red. This does not affect the performance of your product.

## Care

Use a glass-cleaning product to clean the screen and a soft cloth and mild detergent to clean the rest of the set.

**Important:** Using strong detergents, alcohol-based and abrasive products may damage the screen.

Dust the vents at the back and sides regularly. Using solvents, abrasive or alcohol-based products could damage the TV set. If an object or liquid enters the appliance, unplug it immediately and have it checked by an authorized engineer. Never open the appliance yourself since this may put you at risk or damage the appliance.

## ESD regulation

This apparatus meets ESD performance criteria. In case the apparatus does not recover in Ethernet connection mode or USB playing mode due to electrostatic discharge, user intervention is required.

## Bluetooth function notice

Bluetooth® technology (if available in your TV) uses 2.4GHz frequency thus close proximity to Wi-Fi access points, routers or microwave ovens might interfere with Bluetooth audio streaming. If you face interruptions in audio reception, you should restart your Bluetooth device to find frequency with less interferences and if you continue to face issues you should move closer to TV or increase space between TV and source of interferences.

## Hanging the TV set on the wall

**Warning: This operation requires at least two people depending on your TV dimension.**

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount. For certain models, make sure to screw the hexagonal VESA wall mounting screw bosses (and screws) provided with the set into the nuts for the wall mount at the back of your set before your wall mounting.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is no danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

## Multi product user manual

The features described in this manual are common to most models. Some features may not be available on your TV and/or your TV may include features that are not described in this user manual. The illustrations in this manual may differ from the actual product. Please refer to the actual product.

## Remote control buttons

Here are the navigation direction buttons and the **OK** button on the remote control that you may use frequently.



## Accessing channels

**Using the Navigation Direction buttons:** press  $\wedge / \vee$  on the remote control to scroll through the channels.

**Using the OK button:** press the **OK** button to display the channel list and press  $\wedge / \vee / \langle / \rangle$  and **OK** to select channels.

**Using the CH  $\wedge / \vee$  buttons:** press the **CH  $\wedge / \vee$**  buttons on the remote control to scroll through the channels.

**Using the  $123$  button:** press  $123$  to display the virtual remote control keyboard, then you can use the numeric buttons.

## Watching connected devices

Press  $\square$  on the remote control to display the source list. Press  $\langle / \rangle$  to select TV or other input sources and press **OK** to confirm.

## Adjusting volume

**Volume control:** press the **VOL  $+ / -$**  buttons on the remote control to increase or decrease the volume.

**Sound mute:** press the  $\mathbb{M}$  button to temporarily mute the sound. Press this button again or the **VOL  $+$**  button to restore the sound.

## Accessing Smart TV homepage

Allows you to enjoy Internet Applications (Apps) and specially adapted Internet websites, and perform system settings for your TV. You can make controlling with the TV remote control.

### WARNING:

- Configure the network settings before using Smart TV applications.
- Slow responses and/or interruptions may occur, depending on your network conditions.
- If you experience a problem using an application, please contact the content provider.
- According to circumstances of the content provider, an application's updates or the application itself may be discontinued.
- Depending on your country's regulations, some applications may have limited service or not be supported.

• Changes in application content may be made without prior notice by the service provider.

1. Press **Home** on the remote control to display the Smart TV homepage.
2. Press **Up / Down / Left / Right** and **OK** to enter the desired Apps, functions or settings.
3. Press **Left** to return to the homepage.

*Note: Since the connection with Internet takes time, it's recommended that you wait a few minutes to use the Smart TV feature after activation of TV from standby.*

### Using Settings menu

Allows you to adjust TV settings, such as picture and sound.

1. Press **Settings** on the remote control to display the dashboard menu.
2. Select **All settings** and press **OK** to enter the settings menu.
3. In submenu, press **Up / Down** to select menu options, then press **OK / Right** to enter the option list, or the corresponding submenu, or press **OK** to toggle on or off, or press **Left / Right** to adjust the setting.
4. Press **Left** to return to the previous menu.

### Installing channels

This section describes how to search and store channels automatically. This may be done in any of the cases below:

- you have skipped the channel installation step in the initial setup;
- you are prompted that there are no channels in TV mode;
- you want to update your channels.

1. In TV mode, press **Settings** on the remote control and select **All settings** > **Channels and inputs** > **Channels** > **Channel scan**. Press **OK / Right** to enter.
2. The TV installs and arranges channels according to your country or region. Press **Up / Down** to select **Country/Region**, and press **OK / Right** to enter. Enter the password you have set in the **All settings** > **System** > **Lock** menu. Press **Up / Down** to select your country or region and press **OK** to confirm.

*Note: When Country/Region is set to certain countries, you need to set your own password on the initial setup.*

3. Press **Up / Down** to select **Automatic search** and press **OK** to enter.
4. Press **Up / Down** to select **Tuner mode** and press **Left / Right** to select **Cable**, **Antenna** or **Satellite**. (*Note: Satellite option is available only in selected models.*)
5. Press **Up / Down** to select other options to configure.
6. After configuration is completed, press **Down** to select **Search** and press **OK** to start scanning channels.
7. The channel search may take a few minutes. After the automatic search, channels are arranged in a preset

order. If you want to edit the channel list, press **Settings** on the remote control, select **All settings** > **Channels and inputs** > **Channels** > **Edit Channels** and press **OK** to enter.

*Note: Edit Channels option is not available when Tuner mode is set to Antenna and Country/Region is set to United Kingdom.*

### Radio Information

- Bluetooth® transmitter frequency range: 2402–2480MHz
  - Bluetooth® transmitter power: 6dBm (+/-2dB)
  - 2.4G Wi-Fi transmitter frequency range: 2400–2483.5MHz
  - 2.4G Wi-Fi transmitter power: 14dBm (+/-2dB)
  - 5G Wi-Fi transmitter frequency range:
    - Band 1: 5150 – 5250MHz
    - Band 2: 5250 – 5350MHz
    - Band 3: 5470 – 5725MHz
    - Band 4: 5725 – 5850MHz
  - 5G Wi-Fi transmitter power: 14dBm (+/-2dB)
  - DVB-T/T2/C tuner frequency range: 42–1002MHz
  - DVB-S/S2 tuner frequency range: 850–2350MHz
- \* Operation of 5150–5350MHz is restricted to indoor use only.

	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL
	PT	RO	SI	SK	FI	SE	UK (NI)

### OSS Notice

This product uses the GPL (Version 2 and 3) and LGPL (version 2.1) and MPL (version 1.1).

To send inquiries and requests for questions regarding open source, contact nearest TCL office.

This product uses some software programs which are distributed under the Independent JPEG Group.

This product uses some software programs which are distributed under the libpng Project.

This product uses some software programs which are distributed under the Freetype Project.

This product uses some software programs which are distributed under the zlib Project.

This product uses some software programs (libxml2, curl, expat, c-areas) which are distributed under the MIT.

This product uses CyberLink for C which is distributed under the Open Source Project.

This product uses openssl, xerces which is distributed under the Apache License Project.

GPL software: Linux Kernel, glib, libiconv, gcc libgcc, gcc libstdc++, u-Boot loader, ffmpeg, util-linux-ng, e2fsprogs, wget, iptables

LGPL software: DFB (DirectFB), gstreamer, gst-plugins-base, gst-plugins-good, gst-plugins-bad, gst-plugins-ugly, gst-ffmpeg, glibc, wpa\_supplicant

BSD software: webp, mng, uriparser  
GNU software: dosfstools

**[Legal Statement] of TCL - manufacturer of this TV set**

Due to the various capabilities of products featuring the SmartTV - Services, as well as limitations in the available content, certain features, applications, and services may not be available on all devices or in all territories. Some features on SmartTV may also require additional peripheral devices or membership fees that are sold separately. Please visit our website for more information on specific device information and content availability. The services and availability of content through SmartTV are subject to change from time to time without prior notice.

All content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE DEVICE IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE AND ACCURACY IS WITH YOU. THE DEVICE AND ALL THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED. TCL EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE DEVICE AND ANY CONTENT AND SERVICES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, OF SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TCL DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND DOES NOT WARRANT THAT THE DEVICE, CONTENT OR SERVICES WILL MEET YOUR REQUIREMENTS, OR THAT OPERATION OF THE DEVICE OR SERVICES WILL BE UNINTERRUPTED OR ERROR-FREE. UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL TCL BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT

OF THE USE OF THE DEVICE, OR ANY CONTENT OR SERVICE ACCESSED BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Third party services may be changed, suspended, removed, terminated or interrupted, or access may be disabled at any time, without notice, and TCL makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which TCL has no control. Without limiting the generality of this disclaimer, TCL expressly disclaims any responsibility or liability for any change, interruption, disabling, removal of or suspension of any content or service made available through this device. TCL may impose limits on the use of or access to certain services or content, in any case and without notice or liability. TCL is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

**Device update**

Typically, some devices are updated quarterly, but not always so specific. Some devices, especially those that went on sale more than three years ago, will only be updated if a critical vulnerability is found and fixed.

## Information for Users on Disposal of Old Equipment and Batteries

### [European Union]



Products



**Pb**

Battery

**Notice:**

The sign Pb below the symbol for batteries indicates that this battery contains lead.

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at their end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2012/19/EU, 2006/66/EC and 2008/12/EC.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### [Business users]

If you wish to dispose of this product, please contact your supplier and check the terms and conditions of the purchase contract.

### [Other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical equipment and batteries.


*Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.*

## Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control(s) supplied with your set can be used to navigate through the menus and to configure all the general settings.

### Notes:

1. Figures and illustrations in this operation manual are provided for reference only and may differ from actual product appearance. 2. The remote control type may be changed without notice, please refer to the remote control attached with your TV. 3. Certain function may not be available for some models.

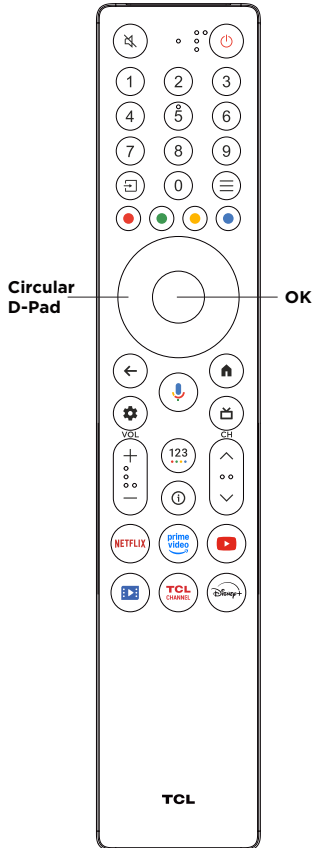

To switch the sound off and back on.

Standby / quit standby.

**Numeric buttons** To enter channel numbers or a digit.

To select input source. Or to display the quick panel.

To display and edit the quick settings panel.

**Colour buttons** To select tasks or Teletext pages; to be used for HbbTV function.

**Circular D-Pad** Navigation direction buttons ( $\wedge / \vee / \langle / \rangle$ ).

**OK** To confirm an entry or selection.

To return to the previous menu or quit an app.

To display the dashboard menu.

Press the Assistant button on your remote to talk to the Google Assistant. (Available only in Google TV mode and when the network connection works normally.)

To access the Google TV homepage.

To access Electronic Program Guide. (only available for digital channels.)

**VOL + / -** To control the volume.

To pop up the virtual remote control keyboard when available.

To display programme information, if available.

**CH  $\wedge / \vee$**  To change channels.

To access Netflix.

To access Prime video.

To access YouTube.

To access Media Player. (Not available for some models.)

To access TCL Channel.

To access Disney.

### Notes:

- The App buttons may differ depending on the model. The App button is used for accessing the corresponding App.

- The Google Assistant is not available in certain languages and countries.


Google and Google TV are trademarks of Google LLC.

### - How to Use the Remote Control

- Before using the Google Assistant button, you must finish pairing the remote with the TV first.
- This Google Assistant function is only available for content search from certain apps.
- Set languages in the (All settings) > System > Language to your local language or official language to enhance voice search successfully.

**- Installing Batteries**

1. Push to open the back cover as illustrated.
2. Insert two AAA batteries according to the polarities marked on the battery case.
3. Replace the back cover as illustrated.

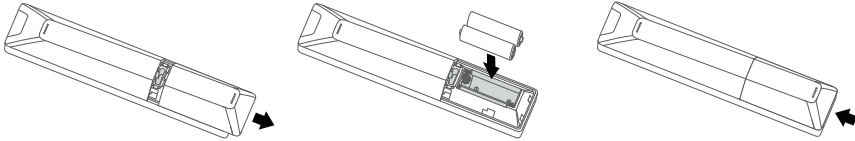

**CAUTION:** Risk of fire or explosion if the battery is replaced by an incorrect type.

**Precautions on using batteries**

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Remove the batteries from the remote control if you are not using it for a long period of time.
- Attention should be drawn to the environmental aspects of battery disposal.




## Güvenlik

Yerel ana güç kaynağı voltajınızın, setinizin arkasında bulunan tanıtım etiketinde gösterilen voltaja uygun olmasını sağlayın. Şebeke fişinin, AC prizinin veya bir cihaz fişinin elektrik bağlantısını kesme düzeneği olarak kullanıldığı yerde hazır olarak çalışır şekilde tutulmalıdır.

Bazı modellerde ışık göstergesi televizyonun yanında bulunur. Setin önünde ışık göstergesi olmaması televizyonun bağlantısının dağıtım şebekesinden tamamıyla kesildiği anlamına gelmez. Televizyonun elektrik bağlantısını tamamen kesmek için ana fiş çekilmelidir.

Televizyonun aksamaları ısıya duyarlıdır. **Maksimum ortam sıcaklığı 35°C**'yi geçmemelidir. Televizyonun arkasındaki veya yanlarındaki havalandırma deliklerinin üstünü örtmeyin. Yeterli havalandırma olanak tanımak için havalandırma deliklerinin çevresinde yeterli boşluk bırakın. Cihazı ısı kaynaklarından (şömine,...) veya güçlü manyetik veya elektrik alanı yaratan cihazlardan uzakta kurun.

TV'nin kurulduğu odadaki **Nem %75** nem değerini geçmemelidir. Setin soğuk bir yerden sıcak bir yere taşınması ekranda (ve televizyonun içerisindeki bazı aksamalar üzerinde) buğulaşmaya neden olabilir. Televizyonu tekrar açmadan önce buğulaşmanın buharlaşmasına izin verin.

Televizyondaki  veya **POWER**/ düğmesi ya da uzaktan kumandadaki  düğmesi cihazı açmak ya da bekleme moduna almak için kullanılabilir. Uzun **süre TV izlemeyecesekseniz**, fişi ana güç prizinden çıkararak tamamıyla kapalı konuma getirin.

Fırtına **sırasında**, Televizyonun ona zarar verebilecek elektriksel veya elektromanyetik ani yükselmelerden etkilenmemesi için ana güç ve anten bağlantısını kesmenizi tavsiye etmekteyiz. Bu sebeple, gerektiğinde **bağlantılarının kesilebilmeleri için** ana güç kaynağı, ve anteni **kolayca ulaşılabılır** yerde tutun.

**Yanık** veya duman kokusu **yayıdığını** fark ettiğiniz anda **Televizyonun fişini** hemen çekin. Elektrik çarpması riski taşıdığınız için hiçbir koşulda televizyonu **kendi başınıza** açmayın.

## UYARILAR

Bu aygıtın yalnızca ev içerisinde kullanılması amaçlanmıştır ve ev içi kullanıma uygun olmayan veya ticari bir ortamda kullanılan başka herhangi bir uygulama için kullanılmamalıdır.

Bu ürünün harici esnek kablosu veya kordonu hasarıysa olası bir tehlikeyi önlemek için üretici firma, servis temsilcisi veya benzer niteliklere sahip bir kişi tarafından değiştirilmelidir.

Uygun havalandırma sağlamak için televizyonun çevresinde 10 cm'den fazla açıklık bırakın. Havalandırma, havalandırma ağızları gazete, masa örtüsü, perde vb. eşyalarla kapatılarak engellenmemelidir.

Aparat, ıslanmaya veya suya maruz bırakılmamalı ve vazoya gibi içerisinde sıvı bulunan hiçbir nesne aparatın üzerine konmamalıdır.

Piller (takılı pil paketi veya piller) güneş ışığı, ateş veya benzeri aşırı ısılarla maruz bırakılmamalıdır.

Yangın veya elektrik çarpması riskini azaltmak için bu cihazı

yağmura veya rutubete maruz bırakmayın.

Bir televizyon seti düşerek ciddi kişisel yaralanmalara veya ölüme neden olabilir. Aşağıdaki şekilde basit önlemler alınarak başta çocuklar olmak üzere pek çok yaralanmanın önüne geçilebilir:

- HER ZAMAN televizyon seti üreticisi tarafından tavsiye edilen kabin veya sehpa montaj yöntemlerini kullanın.
- HER ZAMAN televizyon setini güvenli şekilde destekleyebilecek mobilya kullanın.
- HER ZAMAN televizyon setinin destekleyen mobilyanın üzerinden sarkmadığından emin olun.
- HER ZAMAN çocukları mobilyaların üzerine çıkararak televizyon setine veya kontrollerine ulaşmanın ne kadar tehlikeli olduğu konusunda eğitin.
- HER ZAMAN televizyonunuza bağlı olan kordonları ve kabloları, takılıp düşmeyecek, çekilmeyecek veya takılmayacak şekilde yerleştirin.
- ASLA televizyon setini sağlam olmayan bir yere kurmayın.
- ASLA televizyon setini hem mobilyayı ve hem de televizyonu uygun bir yere sabitlemeden yüksek mobilyaların (örneğin, dolaplar veya kitaplıklar) üzerine kurmayın.
- ASLA televizyon setini, televizyon seti ve destekleyen mobilya arasına konulan örtü veya diğer malzemelerin üzerine kurmayın.
- ASLA televizyon veya televizyonun yerleştirilmiş olduğu mobilya üzerine çocukların tırmanmasına yol açabilecek oyuncak ve uzaktan kumandaları yerleştirmeyin.

Eğer mevcut televizyon seti saklanacaksa veya yeni değiştirilecekse, yukarıdaki aynı uygulamalar gerçekleştirilmelidir.

Bu sembole sahip cihaz, Class II veya çift yalıtımlı bir elektrikli cihazdır. Cihaz, elektrik topraklama sistemine güvenli bir bağlantıya ihtiyaç duymayacak şekilde tasarlanmıştır. Bu sembole sahip olmayan cihaz, bir Class I elektrikli cihazdır. Koruyucu bir topraklama bağlantısına sahip elektrik prizine bağlanmalıdır.



Yangının yayılmasını önlemek için mumları veya diğer açık alevleri her zaman bu üründen uzak tutun.

Bu sembol içeride yüksek voltaj bulunduğunu gösterir. Bu ürünün herhangi bir iç parçası ile temas etmek tehlikelidir.

Bu sembol sigortanın boşta olabileceğini ve faz iletkenlerinin enerjisini kesmek için şebekenin bağlantısının kesilmesi gerektiğini gösterir.

Yaralanmaları önlemek için bu aparat kurulum talimatlarına uygun olarak zemine/duvara sıkıca sabitlenmelidir.

RF'ye maruz kalma riskini azaltmak için bu cihazın mesafesi en az 100 cm olmalıdır.

Ürüne bir dış anten veya kablo sistemi bağlıysa anten veya kablo sisteminin uzman biri tarafından topraklandığından emin olun böylece bazı gerilim darbeleri ve oluşan statik boşalmalara karşı koruma sağlanır.

## TV ekranı

Bu üründe kullanılan TV ekranı camdan yapılmıştır. Dolayısıyla ürün düşüğünde ya da diğer nesnelere çarptığında kırılabilir.

TV ekranı yüksek teknoloji bir ürün olup çok net görüntü sunar. Ara sıra ekranda çok az sayıda sabit mavi, yeşil veya kırmızı noktalar halinde aktif olmayan pikseller görülebilir. Bu durum, ürününüzün performansını etkilemez.

## Bakım

Ekranı temizlemek için bir cam temizleme ürünü ve setin geri kalan parçalarını temizlemek için yumuşak bir bez ve yumuşak deterjan kullanın.

**Önemli:** Güçlü deterjanlar kullanırken alkol bazlı ve aşındırıcı ürünler ekrana zarar verebilir.

Televizyonun arkasında ve yanlarındaki havalandırma deliklerinin tozunu düzenli olarak alın. Çözücü maddeler kullanırken aşındırıcı veya alkol bazlı ürünler Televizyona zarar verebilir. Cihazın içerisine herhangi bir nesne veya sıvı girmesi durumunda hemen cihazın fişini çıkartın ve yetkili bir mühendise kontrol ettirin. Cihaz zarar görebileceği için cihazı kesinlikle kendi başınıza açmayın.

## ESD düzenleme



Bu cihaz, ESD performans kriterini karşılamaktadır. Cihazın, Ethernet bağlantı modunda veya USB oynatma modunda elektrostatik boşalma nedeniyle düzelmemesi durumunda kullanıcı müdahalesi gereklidir.

## Bluetooth fonksiyonu tu tu

Bluetooth® teknolojisi (TV'nizde mevcutsa) 2,4 GHz frekans kullanır bundan dolayı Wi-Fi erişim noktalarına, yönlendiricilere veya mikrodalga fırınlarla çok yakın olma durumunda Bluetooth ses akışı engellenebilir. Ses alımında kesintiler yaşıyorsanız daha az parazitte sahip frekans bulmak için Bluetooth cihazınızı yeniden başlatmalısınız ve bu sorunu yaşamaya devam ediyorsanız TV'ye yaklaşmalı veya TV ile parazit kaynağı arasındaki mesafeyi artırmalısınız.

## Televizyonu duvara asma

**Uyarı: Bu işlem, TV'nizin boyutuna bağlı olarak en az iki kişi gerektirir.**

Güvenli bir kurulum sağlamak için aşağıdaki güvenlik notlarına uyun:

- Duvarın televizyonu ve duvar montaj düzeneğinin ağırlığını destekleyebileceğini kontrol edin.
- Duvar montaj düzeneği ile sağlanan montaj talimatlarına uyun. Bazı modeller için, sette birlikte sağlanan altıgen VESA duvar montajı vida başlıklarını (ve vidaları), duvar montajınızdan önce setinizin arkasındaki duvar montajına yönelik somunlara vidaladığınızdan emin olun.
- Televizyonu dikey bir duvara kurulumalıdır.
- Sadece duvarın malzemesi için uygun olan vidaları kullanın.
- Televizyonun kablolarının takılıp düşme tehlikesi olmayacak şekilde konumlandırıldığından emin olun.

Televizyonumuz ile ilgili tüm diğer güvenlik talimatları da burada uygulanabilir.

## Çoklu ürün kullanım kılavuzu

Bu kılavuzda tarif edilen özellikler pek çok model için ortak özelliklerdir. Bazı özellikler televizyonunuzda bulunmayabilir ve/veya televizyonunuz bu kullanıcı kılavuzunda tarif edilmeyen özellikler içerebilir. Bu kılavuzdaki gösterimler asıl üründen farklılık gösterebilir. Lütfen asıl ürüne bakın.

## Uzaktan kumanda düğmeleri

Uzaktan kumandanın sık kullanılabileceğiniz navigasyon yön butonları ve **OK** butonları aşağıdadır.



## Kanallara erişmek

**Navigasyon Yönü düğmelerini kullanma:** kanalları değiştirmek için uzaktan kumandadaki  $\wedge / \vee$  düğmesine basın.

**OK düğmesini kullanarak:** kanal listesini görüntülemek için **OK** düğmesine basın ve kanalları seçmek için  $\wedge / \vee / < / >$  ve **OK** düğmesine basın.

**CH  $\wedge / \vee$  düğmelerini kullanma:** kanallar arasında gezinmek için uzaktan kumandadaki **CH  $\wedge / \vee$**  düğmelerine basın.

**Düğmeyi <sup>123</sup> kullanma:** sanal <sup>123</sup> uzaktan kumanda klavyesini görüntülemek için basın, ardından uygun şekilde çalıştırmak için sayısal düğmeleri.

## Bağlı cihazların izlenmesi

Kaynak listesini görüntülemek için uzaktan kumandadaki  $\square$  düğmesine basın. TV'yi ya da diğer giriş kaynaklarını seçmek için  $< / >$  ve onaylamak için **OK** düğmesine basın.

## Sesi ayarlama

**Ses kontrol:** sesi artırmak veya azaltmak için uzaktan kumanda üzerindeki **VOL+ / -** tuşlarına basın.






**Ses kesme:** sesi geçici olarak kesmek için  $\mathbb{N}$  düğmesine basın. Sesi yeniden açmak için bu düğmeye ya da **VOL+** düğmesine basın.

## Smart TV ana sayfasına erişim

İnternet Uygulamalarından (Apps) ve özel olarak uyarlanmış İnternet web sitelerinden yararlanmanızı ve TV'niz için sistem ayarlarını yapmanızı sağlar. Bu işlemleri TV uzaktan kumandasından kontrol edebilirsiniz.









## UYARI:

- Akıllı TV uygulamalarını kullanmadan önce ağ ayarlarını yaplandırın.
- Ağ koşullarınıza bağlı olarak yavaş yanıtlar ve/veya kesintiler meydana gelebilir.
- Bir uygulamayı kullanırken bir sorun yaşarsanız, lütfen içerik sağlayıcıyla irtibat kurun.
- İçerik sağlayıcının koşullarına göre, bir uygulamanın güncellemeleri ya da uygulamanın kendisi yarıda kalabilir.
- Ülkenizin yönetmeliklerine bağlı olarak, bazı uygulamalar sınırlı hizmete sahip olabilir ya da desteklenmeyebilir.

- Uygulama içeriğindeki değişiklikler servis sağlayıcı tarafından önceden bildirilmeksizin yapılabilir.
1. Smart TV ana sayfasını görüntülemek için uzaktan kumandadaki  düğmesine basın.
  2. İstenen uygulamalara, işlevlere ya da ayarlara girmek için    ve **OK** düğmelerine basın.
  3. Ana sayfaya geri dönmek için  düğmesine basın.  
*Not: İnternet ile bağlantı kurulması zaman aldığından bekleme konumunda televizyonun etkinleştirilmesinden sonra akıllı TV özelliğini kullanmak için bir kaç dakika beklemeniz önerilir.*

### Ayarlar menüsünü Kullanma
















Görüntü ve ses gibi TV ayarlarını yapmanızı sağlar.






1. Pano menüsünü görüntülemek için uzaktan kumandadaki  düğmesine basın.
2.  **(All settings)** (Tüm ayarlar) seçin ve ayarlar menüsüne girmek için **OK**'e basın.
3. Alt menülerde, menü seçeneklerini seçmek için   düğmesine basın, ardından seçenek listesine veya ilgili alt menüye girmek için **OK** /  düğmesine veya açıp kapatmak için **OK** düğmesine veya ayarı yapmak için  /  düğmesine basın.
4. Önceki menüye dönmek için  düğmesine basın.

### Kanalların kurulması

Bu bölümde kanalların nasıl otomatik olarak aranacağı ve yükleneceği açıklanmaktadır. Bu işlem aşağıdaki tüm durumlarda yapılabilir:

- İlk kurulumda kanal kurulum adımını atladyanız;
- TV modunda hiç kanal olmadığı mesajını aldıysanız;
- kanallarınızı güncellemek istediğinizde.

1. TV modunda, uzaktan kumandada  tuşuna basın ve  **(All settings) > Channels and inputs > Channels > Channel scan** (Tüm ayarlar > Kanallar ve girişler > Kanallar > Kanal taraması'nı) seçin. Girmek için **OK** /  tuşlarına basın.
2. Televizyonunuz ülkenize veya bölgenize göre kanalları yükler ve düzenler.  /  tuşlarına basarak **Country/Region** (Ülke/Bölge) seçin ve **OK** /  tuşlarına basarak girin.  **(All settings) > System > Lock** (Tüm ayarlar > Sistem > Kilitle) menüsünde belirlediğiniz şifreyi girin. Ülkenizi veya bölgenizi seçmek için  /  tuşlarına ve onaylamak için **OK** tuşuna basın.  
*Not: Country/Region (Ülke/Bölge) belirli ülkelere ayarlandığında, başlangıç ayarlarında kendi şifrenizi belirlemeniz gerekecektir.*
3. **Automatic search** (Otomatik arama) ögesini seçmek için  /  düğmelerine ve girmek için **OK** düğmelerine basın.
4. **Tuner mode** (Ayar modu) ögesini seçmek için  /  düğmelerine ve **Cable** (Kablo), **Antenna** (Anten) ya da **Satellite** (Uydu) ögesini seçmek için  /  düğmelerine basın. (*Not: Satellite (Uydu) seçeneği yalnızca bazı seçilmiş modellerde mevcuttur.*)

5. Yapılandırılacak diğer seçenekleri belirlemek için  /  düğmelerine basın.
6. Yapılandırma tamamlandıktan sonra **Search** (Arama) ögesini seçmek için  düğmesine ve kanalların taranmasını başlatmak için **OK** düğmesine basın.
7. Kanal araması birkaç dakika sürebilir. Otomatik aramadan sonra kanallar önceden ayarlanmış bir sıraya göre düzenlenir. Kanal listesini düzenlemek istiyorsanız, uzaktan kumandada  tuşuna basın,  **(All settings) > Channels and inputs > Channels > Edit Channels** (Tüm ayarlar > Kanallar ve girişler > Kanallar > Kanalları Düzenle) seçin ve girmek için **OK** tuşlarına basın.  
*Not: Tuner mode (Ayar modu) Antenna (Anten) olarak ve Country/Region (Ülke/Bölge) İngiltere olarak ayarlandığında, Edit Channels (Kanalları Düzenle) seçeneği kullanılamaz.*

### Radio ile İlgili Bilgiler

- Bluetooth® vericisi frekans aralığı: 2402–2480 MHz
- Bluetooth® vericisi gücü: 6 dBm (+/-2 dB)
- 2.4G Wi-Fi vericisi frekans aralığı: 2400–2483.5 MHz
- 2.4G Wi-Fi vericisi gücü: 14 dBm (+/-2 dB)
- 5G Wi-Fi vericisi frekans aralığı:
  - Bant 1: 5150 – 5250 MHz
  - Bant 2: 5250 – 5350 MHz
  - Bant 3: 5470 – 5725 MHz
  - Bant 4: 5725 – 5850 MHz
- 5G Wi-Fi vericisi gücü: 14 dBm (+/-2 dB)
- DVB-T/T2/C radyo frekans aralığı: 42–1002 MHz
- DVB-S/S2 radyo frekans aralığı: 850–2350 MHz
- \* 5150–5350 MHz kullanımı yalnızca iç mekanlarla sınırlandırılmıştır.

	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL
	PT	RO	SI	SK	FI	SE	UK (NI)

### OSS (Açık Kaynak Kodlu Yazılım) Bildirimi

Bu ürün GPL (Sürüm 2 ve 3) ve LGPL (sürüm 2.1) ve MPL (sürüm 1.1) kullanmaktadır.

Açık kaynak ile ilgili sorgular ve sorular için talepler göndermek üzere en yakın TCL ofisle iletişime geçin.

Bu ürün, Independent JPEG Group altında dağıtılan bazı yazılım programları kullanır.

Bu ürün, libpng Project altında dağıtılan bazı yazılım programları kullanır.

Bu ürün, Freetype Project altında dağıtılan bazı yazılım programları kullanır.

Bu ürün, zlib Project altında dağıtılan bazı yazılım programları kullanır.

Bu ürün MIT altında dağıtılan bazı yazılım programları (libxml2, curl, expat, c-areas) kullanmaktadır.

Bu ürün Open Source Project altında dağıtılan CyberLink for C kullanmaktadır.

Bu ürün Apache License Project altında dağıtılan openssl, xerces kullanmaktadır.

GPL yazılımı: Linux Kernel, glib, libiconv, gcc libgcc, gcc libstdc++, u-Boot loader, ffmpeg, util-linux-ng, e2fsprogs, wget, iptables

LGPL yazılımı: DFB (DirectFB), gstreamer, gst-plugins-base, gst-plugins-good, gst-plugins-bad, gst-plugins-ugly, gst-ffmpeg, glibc, udisks, udisks-glib, udisks-gtk, udisks-gtk3, udisks-gtk3-gstreamer

BSD yazılımı: wepb, mng, uriparser

GNU yazılımı: dosfstools

### Bu televizyonun üreticisi TCL'nin [Yasal Beyanı]

Akıllı TV özelliğini içeren ürünlerin çeşitli kapasitelerinden, hizmetlerden ve aynı zamanda kullanılabilir içerikteki kısıtlamadan dolayı belirli özellikler, uygulamalar ve hizmetler her cihazda veya bölgede kullanılamayabilir. AkıllıTV'de bulunan bazı özellikler aynı zamanda ilave çevresel aygırlar veya ayrı olarak satılan üyelik ücretleri gerektirebilir. Belirli cihaz bilgileri ve içerik kullanılabilirliği hakkında daha fazla bilgi için lütfen web sitesini ziyaret edin. AkıllıTV üzerinde alınan hizmetler ve içerik kullanılabilirliği önceden haber verilmeksizin zaman zaman değişikliğe tabidir.

Bu cihaz üzerinden ulaşılabilir olan tüm içerik ve hizmetler üçüncü kişilere aittir ve telif hakkı, patent, tescilli marka ve/veya diğer fikri mülkiyet kanunları tarafından korunurlar. Bu tip içerik ve hizmetler, kişisel ticari olmayan kullanımınız için ayrı olarak sağlanmaktadır. Hiç bir içerik veya hizmeti, içerik sahibi veya hizmet sağlayıcısı tarafından yetki verilmemiş şekilde kullanamazsınız. İlgili içerik sahibi veya hizmet sağlayıcısı tarafından açıkça yetki verilmedikçe, öncesini sınırlamaksızın bu cihaz aracılığıyla görüntülenen hiçbir içerik veya hizmeti hiçbir şekilde ve ortamda değiştiremez, kopyalayamaz, yeniden yayınlamaz, internete yükleyemez, gönderemez, aktaramaz, çevirisini yapamaz, satamaz, türemiş çalışmalar oluşturamaz, faydalanamaz veya dağıtamazsınız.

CİHAZ KULLANIM RİSKİNİN VE DOĞRULUK GİBİ TÜM RİSKİN SİZE AİT OLDUĞUNU AÇIKÇA KABUL ETMİŞ VE ONAYLAMIS OLURSUNUZ. CİHAZ VE TÜM ÜÇÜNCÜ ŞAHIS İÇERİK VE, AÇIKÇA İMA YOLUYLA HERHANGİ BİR ÇEŞİT GARANTİ OLMAKSIZIN OLDUĞU GİBİ SAĞLANIR. TCL, TİCARETE ELVERİŞLİLİK, TATMİN EDİCİ KALİTE, BELİRLİ AMACA UYGUNLUK, DOĞRULUK, MÜDAHALESİZ KULLANIM VE ÜÇÜNCÜ TARAF HAKLARININ İHLALİ İLE SINIRLI OLMAMAK ÜZERE AÇIKÇA VEYA İMA YOLUYLA CİHAZ VE TÜM İÇERİK VE SERVİS İLE İLGİLİ TÜM GARANTİLERİ VE ŞARTLARI AÇIKÇA REDDEDER. TCL, BU CİHAZ VASİTASIYLA SAĞLANAN HİÇBİR İÇERİK VEYA HİZMETİN DOĞRULUĞUNU, GEÇERLİLİĞİNİ, ZAMANLAMASINI, KANUNA UYGUNLUĞUNU VEYA BÜTÜNLÜĞÜNÜ GARANTİ EDEMEZ VE CİHAZIN, İÇERİK VEYA HİZMETLERİN İHTİYAÇLARINIZI KARŞILAYACAĞINA VEYA CİHAZIN ÇALIŞMASININ YA DA HİZMETLERİN KESİLMEYECEĞİNE VEYA HATASIZ OLACAĞINA GARANTİ VERMEZ. İHMAL DAHİL HİÇBİR KOŞULDA TCL, SÖZLEŞMEDE YA DA FİİLİYATTA, HİÇBİR DOĞRUDAN, DOLAYLI, TESADÜFİ, ÖZEL VEYA BAĞLI OLAN HASARLAR, AVUKAT GİDERLERİ, HARCAMALAR VEYA İÇERDİĞİ BİLGİLERDEN YA DA CİHAZIN VEYA TARAFINIZDA ERIŞİNLE İÇERİK YA DA

HİZMETİN KULLANIMINDAN VEYA ÜÇÜNCÜ TARAFTAN KAYNAKLANACAK DİĞER HASARLARDAN BU TİP HASARLARIN OLASILIĞI HAKKINDA BİLGİLENDİRİLSE DAHİL SORUMLU OLMAYACAKTIR.

Üçüncü taraf hizmetleri değiştirilebilir, bekletiler, kaldırılabilir, sonlandırılabilir veya kesilebilir ya da bildirilmeksizin herhangi bir zamanda erişim engellenebilir ve TCL herhangi bir zaman diliminde herhangi bir içeriğin ya da hizmetin kullanılabilir olacağını beyan edemez veya garanti edemez. İçerik ve hizmetler, üzerlerinde TCL'nin kontrolünün olmadığı ağlar ve aktarma tesisleri vasıtasıyla üçüncü taraflarca aktarılır. Bu feragatnamenin genel çerçevesini kısıtlamadan TCL, açıkça bu cihaz tarafından kullanılabilir yapılan bir içerik veya hizmetin değiştirilmesi, kesilmesi, devre dışı bırakılması, kaldırılması veya askıya alınması tüm sorumluluğu ve yükümlülüğü reddeder. TCL, her durumda bildirmeksizin ve sorumluluk almadan belirli servis veya hizmetlerin kullanılması veya bunlara ulaşılması hakkında sınırlamalar koyabilir. TCL, içerik ve hizmetlerle ilgili müşteri hizmetlerinden sorumlu ve yükümlü değildir. İçerik ve hizmetlerle ilgili tüm soru ve istekler doğrudan ilgili içerik ve hizmet sağlayıcılarına yöneltilmelidir.

### Cihaz güncelleme

Tipik olarak, bazı cihazlar her üç ayda bir güncellenir, ancak her zaman kesin değildir. Bazı cihazlar, özellikle üç yıldan daha uzun süre önce satılmış olanlar, yalnızca kritik bir güvenlik açığı bulunduğu ve düzeltildiğinde güncellenecektir.

## Kullanıcılar için Eski Ekipmanın ve Pillerin İmhası ile İlgili Bilgiler

### [Avrupa Birliği]



Ürünler

Bu semboller, bu sembolü içeren elektrikli ve elektronik ekipmanın ve pillerin kullanım ömürlerinin sonunda genel evsel atıklar gibi imha edilmemesi gerektiğini gösterir. Bunun yerine ürünler, ulusal yönetmeliklere ve 2012/19/EU, 2006/66/EC ve 2008/12/EC direktifine göre elektrikli ve elektronik cihazların geri dönüştürülmesi ve ayrıca pillerin uygun şekilde değerlendirilmesi, geri kazanılması ve geri dönüştürülmesi için uygun toplama noktalarına teslim edilmelidir.



Pb  
Pil

Uyarı:

Pil sembolünün altındaki Pb işareti, bu pilin kurşun içerdiğini gösterir.

Bu ürünleri doğru şekilde imha ederek doğal kaynakların korunmasına ve aksi durumda bu ürünlere yönelik uygun olmayan atık işleme yöntemlerinden kaynaklanabilecek çevre ve insan sağlığı üzerindeki olası olumsuz etkileri önlemeye yardım edeceksiniz.

Toplama noktaları ve bu ürünlerin geri dönüşümüyle ilgili daha fazla bilgi için lütfen bulunduğunuz bölgenin belediyesi, evsel atık imha servisiniz veya ürünü satın aldığınız mağaza ile irtibat kurun.

Bu atıkların hatalı şekilde imha edilmesi üzerine ulusal kanunlara göre ceza uygulanabilir.

### [İş yeri kullanıcıları]

Bu ürünü imha etmek isterseniz lütfen tedarikçinizle irtibat kurun ve satın alma sözleşmesinin şartlar ve koşullar kısmını kontrol edin.

### [Avrupa Birliği dışındaki Diğer Ülkeler]


Bu semboller yalnızca Avrupa Birliği'nde geçerlidir. Bu öğeleri imha etmek isterseniz lütfen eski elektrikli ve elektronik ekipmanların idaresine yönelik yürürlükteki ulusal kanunlara ve bulunduğunuz ülkedeki diğer kurallara uygun şekilde imha edin.

## Uzaktan Kumanda İşlevleri

Televizyonunuzun işlevlerinin çoğu ekranda görünen menüler aracılığıyla kullanılabilir. Setinizle birlikte verilen uzaktan kumanda(lar) menüler arasında gezinmek ve tüm genel ayarları yapmak için kullanılabilir.

### Notlar:

1. Bu kullanım kılavuzundaki şekiller ve çizimler yalnızca referans için verilmiştir ve gerçek ürün görünümünden farklı olabilir. 2. Uzaktan kumanda tipi önceden haber verilmeksizin değiştirilebilir, lütfen TV'nizle birlikte verilen uzaktan kumandaya bakın. 3. Belirli işlevler bazı modellerde mevcut olmayabilir.

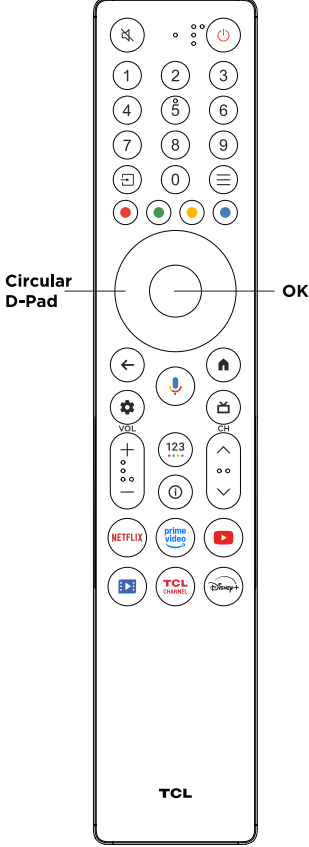

- Sesi kapatmak ve tekrar açmak için.
- Bekleme / bekleme modundan çıkma.
- Numeric buttons**
  - Kanal numaralarını veya bir rakam girmek için kullanılır.
  - Giriş kaynağını seçmek için. Veya hızlı paneli görüntülemek için kullanılır.
  - Hızlı ayarlar panelini görüntülemek ve düzenlemek için kullanılır.
- Colour buttons**
  - Görevleri ve Teletext (Teletext) sayfalarını seçmek için; HbbTV işlevi için kullanılır.
- Circular D-Pad**
  - OK** Bir girişi veya seçimi onaylamak için.
  - Önceki menüye dönmek veya bir uygulamadan çıkmak için.
  - Pano menüsünü görüntülemek için.
  - Google Assistant ile konuşmak için uzaktan kumandanızdaki Assistant tuşuna basın. (Yalnızca Google TV modunda ve ağ bağlantısı düzgün çalıştığında kullanılabilir.)
  - Google TV ana sayfasına erişim için
  - Elektronik Program Rehberi'ne erişim için (Yalnızca dijital kanallar için kullanılabilir.)
- VOL +/-** Sesi kontrol etmek için.
- 123** Kullanılabilir olduğunda sanal uzaktan kumanda klavyesini açmak için.
- Mevcut ise, program bilgilerini görüntülemek için kullanılır.
- CH ^ / v** Kanalları değiştirmek için.
  - Netflix'e erişim için.
  - Prime videoya erişmek için kullanılır.
  - Youtube erişimi için.
  - Media Player'a erişmek için. (Bazı modeller için mevcut değildir.)
  - TCL Kanalına erişmek için.
  - Disney'e erişmek için kullanılır.

Google ve Google TV, Google LLC'nin ticari markalarıdır.

### Notlar:


- Uygulama uşları modele göre değişebilir. Uygulama tuşu, ilgili Uygulamaya erişmek için kullanılır.
- Google Assistant belirli dillerde ve ülkelerde kullanılamaz.

### - Uzaktan Kumanda Nasıl Kullanılır

- a. Google Assistant tuşunu kullanmadan önce uzaktan kumandayı TV ile eşleştirmeyi tamamlamanız gerekir.
- b. Bu Google Assistant işlevi yalnızca belirli uygulamalardan içerik araması için kullanılabilir.
- c. Sesli aramayı başarıyla geliştirmek için dilleri (All settings) > **System** > **Language** ( (Tüm Ayarlar) > Sistem > Dil) bölümünde yerel dilinizi veya resmi dilinize ayarlayın.

## - Pilleri Takma

1. Şekilde gösterildiği gibi arka kapağı açmak için itin.
2. Pil kutusunda işaretli kutuplara göre iki adet AAA pil takın.
3. Şekilde gösterildiği gibi arka kapağı yerine geri takın.

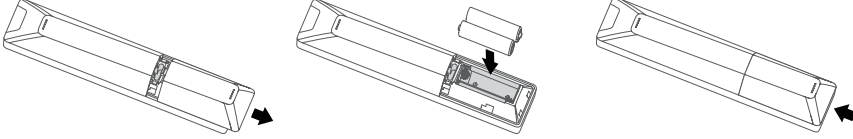

**DİKKAT:**Pil yanlış tipte bir pil ile değiştirilirse yangın veya patlama riski vardır.

## Pillerin kullanımına dair önlemler

- Yalnızca belirtilen pil türlerini kullanın.
- Pil kutuplarını doğru taktığınızdan emin olun.
- Yeni ve kullanılmış pilleri birlikte kullanmayın.
- Şarj edilebilir piller kullanmayın.
- Bir pili ateşe atmak, sıcak bir fırına yerleştirmek veya mekanik olarak ezmek ya da kesmek patlamaya neden olabilir.
- Pili güneş ışığı, ateş veya sıcak gibi aşırı yüksek sıcaklıktaki bir ortamda bırakılmasıpatlamaya ya da yanıcı sıvı veya gaz sızıntısına neden olabilir.
- Aşırı düşük hava basıncına maruz kalan bir pil, patlamaya veya yanıcı sıvı ya da gaz sızıntısına neden olabilir.
- Gaz
- Uzaktan kumandayı uzun süre kullanmayacaksanız kumandadan pillerini çıkarın.
- Pillerin imha edilmesinin çevresel boyutlarına dikkat edilmelidir.



J0101-001912