AirCraft

POWERGLIDE

Cordless hard floor cleaner

Welcome

Thank you for purchasing this **AirCraft POWERGLIDE** hard floor cleaner.

Please read the following important safety advice:

- This appliance is for indoor use only.
- **POWERGLIDE** is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or instructed by a person responsible for their safety.
- Do not expose the electronics of your **POWERGLIDE**, or attempt to open the Battery Pack. There are no user serviceable parts inside. Refer servicing to qualified service agents.
- Please ensure voltage rating for the Charger matches your outlet voltage.
- Before using, remove any items that could become entangled in the pads. Pick up objects like clothing, loose papers, cords, cables, and any fragile objects.
- Do not use this appliance to clean volatile liquids such as petrol or white spirit.
- Remove the Battery Pack if not in use for extended periods.
- Only use the the Battery Pack and Charger supplied, or an original replacement. Visit AirCraftVacuums.com for original replacement parts and accessories.
- Do not handle the Charger, plug or power cable with wet hands.
- Disconnect from the Charger and remove the Battery Pack before cleaning.
- Operate in room temperature environments only.
- Only suitable for use on smooth hard floors, such as tiles, laminate, wooden floors or vinyl.
- Do not submerge in water or any other liquid.
- Do not touch the rotating discs during operation.
- Always apply Pads to rotating discs before use.
- Avoid using excess waxing oil or cleaning solution as this may cause floors to become slippery.
- Avoid operating continuously for over 20 minutes as this may cause overheating.
- For technical assistance, please contact us: info@aircraftvacuums.com.

POWERGLIDE


Handle
Spray button
Indicator light
Start/Stop button
The Handle contains a wireless remote control. Please insert 2 x AAA batteries before use (alkaline recommended).
Height adjustment switch
The Top-up cup (included) may be used to easily fill the Water tank
Water inlet
Detachable Battery Pack
Water tank
Power switch
Cleaning/waxing pads
LED lights
Spray nozzle

Getting Started

Inside the box with your **POWERGLIDE** and Battery Pack you will find:

- 2 Pink Pads
- 2 Blue Pads
- AC Charging Adaptor
- Top-up Cup

Assembly



Before starting, ensure your **POWERGLIDE**'s Battery Pack is fully charged using the included AC Charging Adaptor, and ensure 2 x AAA batteries are fitted in the handle.

Let‘s Glide!

1. Select your Pads: for all general cleaning, we recommend using either the pink or blue Pads. For the application of a wax or oil-based solution on a wooden floor, use only the blue Pads.

 Cleaning Pads  Waxing Pads

Pads are self-attaching and should simply be pressed onto the two rotating discs, with the coloured side (pink or blue) facing the floor.

All Pads can be machine- or hand-washed as often as desired. Additional or replacement Pads are available from AirCraftVacuums.com.

2. Use the Top-up Cup to fill **POWERGLIDE**’s tank with water via the Water Inlet; you can also use a liquid floor cleaner (dilute if necessary, as per the directions on the label of your chosen cleaner).

You may alternatively choose to spray the floor directly with water, cleaner or liquid wax before using your **POWERGLIDE**, using a spray bottle or similar.

3. Press the Power Switch pedal on the base of your **POWERGLIDE**. The LED lights on the base will illuminate. If left idle for 10 minutes, **POWERGLIDE** will automatically enter Sleep mode. To re-awaken, press on the Power Switch pedal twice.

4. Press the Start/Stop button on the handle to begin cleaning.


5. Press the Spray button on the Handle to apply liquid to the floor surface.

6. Guide your **POWERGLIDE** across the floor surface, cleaning and buffing as you go. Play Clean!

Charging

Use **only** the AC Power Adaptor supplied with your **POWERGLIDE**.

There are three levels of battery capacity, as indicated on the detachable Battery Pack. Please charge your **POWERGLIDE** when only one blue light is visible on the detachable battery pack.

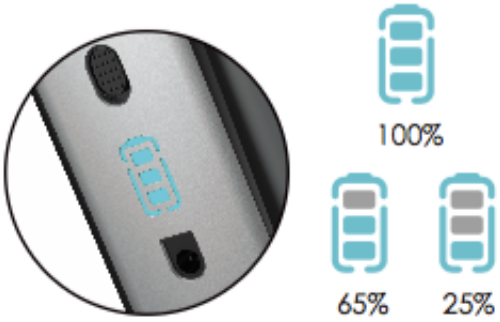

POWERGLIDE ıe Charging Adaptor. This is a safety feature.

Please use only original **AirCraft** replacement Battery Packs. Using any other type will damage your appliance.

Storage and Maintenance

To ensure best performance, it is recommended that your **POWERGLIDE** is regularly cleaned and maintained. You can clean the exterior of your **POWERGLIDE** using a soft, damp cloth. Pads may be machine- or hand-washed. Rinse the spray nozzle through with clean water after using liquid waxing oil or concentrated floor cleaner to prevent blockages.

Please empty the water tank and remove the Battery Pack if storing for extended periods.

Additional or replacement Pads and Battery Packs are available from AirCraftVacuums.com.

Troubleshooting

Symptom	Cause	Solution
No reaction to pressing buttons on handle	AAA batteries not present or expired	Install fresh AAA batteries into handle
Spray not functioning	Lack of liquid in tank Air blockage in pipe	Fill tank with liquid Press spray button several times to expel air
Uneven spray	Spray nozzle blocked	Gently clean nozzle or use pin to unblock
Nozzle drips when spraying	Nozzle blockage from waxing oil or cleaning solution	Rinse nozzle with clean water
Battery LED lit, spray functioning but discs not rotating	Self-protection circuit engaged	Allow to cool before re-starting
One single light on battery back	Low power	Charge Battery Pack

Technical Specifications

- Rated Voltage: 14.4v
- Rated Power: 60w
- Rechargeable Battery Pack: Lithium 2200mAh
- Charge Time: 2 hrs
- Operating Time: 30 minutes
- Remote battery type: 2 x AAA (alkaline recommended)
- Remote frequency: 2.4Ghz
- Dimensions: 122 x 39 x 8.5cm
- Net Weight: 3.2kg
- Tank Capacity: 300ml
- Noise level: <60dB

Warranty

We hope that you are delighted with this product. We aim to provide the best possible standard of customer care.

If purchased directly from **AirCraft**, we support this product with a 12-month warranty from the date of delivery, with the exception of the Battery Pack, which carries a warranty period of six months, and the Pads, which carry a warranty of three months. Warranties are valid only if the product has been properly maintained and is used for domestic purposes, in line with this User Guide, and has received only manufacturer-authorised repairs, servicing or alterations. It excludes defects arising from fair wear and tear.

Please see AirCraftVacuums.com for full terms and conditions.

Under-warranty products that meet these conditions and that function improperly will be repaired or replaced at our sole discretion. It is your responsibility to securely package items for their safe return to us using a trackable service. Not doing so will void your warranty.

We may be contacted at info@AirCraftVacuums.com.

AirCraft disclaims any liability for incidental or consequential damages. Your statutory rights are not affected.

Correct Disposal
(Waste, Electrical & Electronic Equipment)



This symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from general household waste. When this product reaches its end of life, contact your supplier or take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

AirCraft

AirCraftVacuums.com
Contact: info@aircraftvacuums.com

© 2018 AirCraft Home. All rights reserved.