BUSH

Instruction manual

311010



You'll soon be enjoying your new LED Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your LED Speaker. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021.**

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH

Contents

1 Safety information

Safety information 6

2 Getting to know your LED Speaker

Ready? Let's begin 10

Accessories 10

Initial set-up 13

Change the mode 13

Connect to a Bluetooth device 13

3 Using your LED Speaker

Adjusting the volume 14

Bluetooth mode 18

Listening to Music/Audio using Bluetooth 18

LED light display 18

Change the brightness 19

Using as a Mobile handsfree speakerphone 19

Aux in mode 20

4 Other information

Technical specification 24

5 Product support

Troubleshooting 28

Help and assistance 29

Disposal 30

Guarantee 31

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**.

This page is left intentionally blank

1 Safety information

Safety information

Important - Please read these instructions fully before installing or operating

General safety information

Keep the product and all its parts out of reach of small children.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- **Do not** attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- **Do not** use your LED Speaker near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.



- To avoid possible hearing damage, do not listen to this LED Speaker at high volume levels for long periods of time. Always keep the volume within reasonable limits.

Power source

Only use the USB charging cable that came with the product. Using an unauthorised charging cable will invalidate your guarantee and may irrecoverably damage the product.

Please charge the integral lithium battery in your LED speaker at least once a month, to prevent damage to and prolong the life of the lithium battery.

Positioning the LED Speaker

It is important that you consider carefully in advance where your LED Speaker will be situated and make sure that it is:

- on a flat and stable surface.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/ iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Safety information

Important - Please read these instructions fully before installing or operating

- Never place your LED Speaker directly onto antique or polished surfaces.

Moisture and water

- **Do not** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

Ventilation

- **Do not** block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

Heat sources and flames

- **Do not** leave it in high temperatures as electronic devices and plastic parts may warp in heat..

This page is left intentionally blank

Getting to know your LED Speaker

2

Getting to know your LED Speaker

You'll be up and running in no time


Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories


1. The following accessories are included with your LED Speaker:

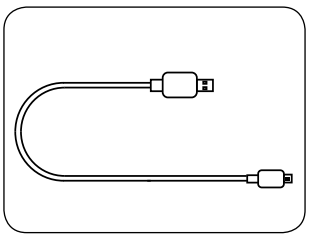

Micro USB cable

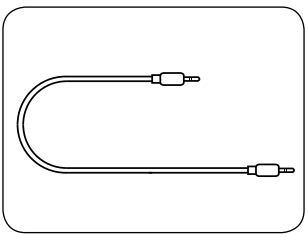

3.5mm audio cable

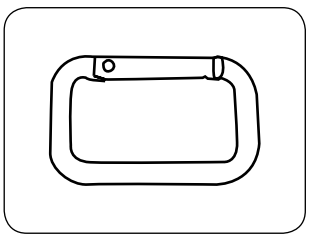

Hanging clip

Fig 1.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your LED Speaker

You'll be up and running in no time

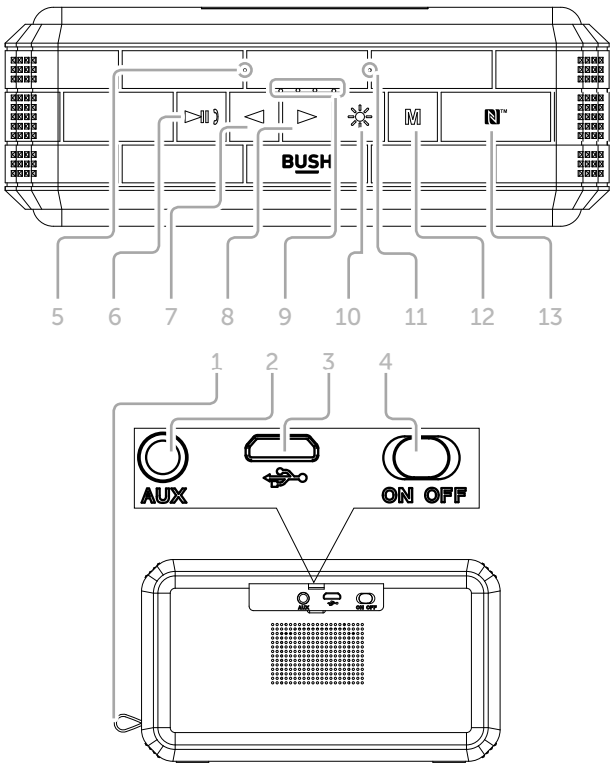


Fig 2.

1. Hanging loop
2. Aux in socket
3. USB charging socket
4. Power On/Off switch
5. Microphone
6. Play/Pause, Answer/Hang up
7. Short press: Previous track.
   Long press: Decrease the volume
8. Short press: Next track.
   Long press: Increase the volume
9. Battery level indication
10. Change the LED light pattern
11. Status indication
12. Change the Mode
13. NFC touch point

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**

Getting to know your LED Speaker

You'll be up and running in no time

Power connection

1. Pull out the small cover from the back of the LED Speaker to reveal the On/Off switch, Micro USB charging socket and Aux in socket. **(Fig 3)**
2. Connect the micro USB end of the charging cable to the USB socket. Plug the standard end of the USB charging cable into a computer or other USB charging device. **(Fig 4)**

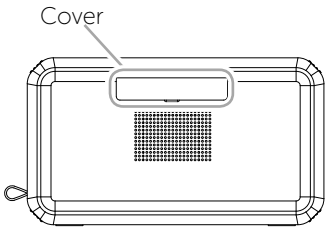


Fig 3.

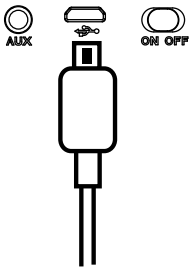


Fig 4.

3. The small orange charging LEDs on the top of the LED speaker with light up to indicate the charging status (25%, 50%, 75% and 100%). When all four charging LEDs are lit, the battery is fully charged.

Note: It will take approximately 2.5 hours to fully charge your LED Speaker, before first use.

4. When fully charged, unplug the micro USB charging cable.

Note: Your LED Speaker has an approximate playtime of 6 hours, before it needs to be recharged. When the battery power is low, the LED Speaker will announce 'Battery level low', an orange charging LED will flash quickly and the volume of any music playing, will be decreased automatically at the same time. You should plug in and recharge your LED Speaker straight away.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your LED Speaker

You'll be up and running in no time

Initial set-up

1. Slide the On/Off switch on the back of the product to On. Your LED speaker will switch on and announce the current mode e.g. 'Bluetooth mode' or 'Aux in mode'.

Change the mode

1. Press and release the M button to change between Bluetooth and Aux in modes. Your LED Speaker will announce each mode as you change to it

Connect to a Bluetooth device

NFC touch point

Your LED Speaker has an NFC touch point to enable quick and easy Bluetooth pairing with other NFC enabled devices.

Check that your LED Speaker is in Bluetooth mode. If you are not already in Bluetooth mode, press and release the M button until you are in Bluetooth mode.

1. When the small blue LED on the top of the LED Speaker is flashing, just touch your other NFC enabled device to the NFC touch point logo on the top of your LED Speaker. When pairing is complete the blue LED will stop flashing and will remain constantly on. The LED Speaker will announce 'Bluetooth paired'.

Note: The Bluetooth name of your LED Speaker is BUSH LED SPEAKER.

2. To disconnect an NFC Bluetooth connection, just touch your other NFC enabled device to the NFC touch point logo again. After disconnection, the small blue LED will start to flash again and your LED Speaker will announce 'Bluetooth disconnected.

Getting to know your LED Speaker

You'll be up and running in no time

Connecting or 'Pairing' with your LED Speaker

Check that your LED Speaker is in Bluetooth mode. If you are not already in Bluetooth mode, press and release the M button until you are in Bluetooth mode.

1. The small blue LED on the top of the LED Speaker will flash.
2. On the device that you would like to connect to your LED Speaker via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your LED Speaker will be displayed as 'BUSH LED SPEAKER'. Select the device name to begin pairing.
5. When pairing is complete the small blue LED will stop flashing and will remain constantly on. The LED Speaker will announce 'Bluetooth paired'.
6. Now that you have paired your device with the LED Speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the LED Speaker unless you decide to disconnect or 'unpair' it..

Adjusting the volume

◁ Press and hold to decrease the volume


▷ Press and hold to increase the volume.

This page is left intentionally blank

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**

This page is left intentionally blank

3 Using your LED Speaker

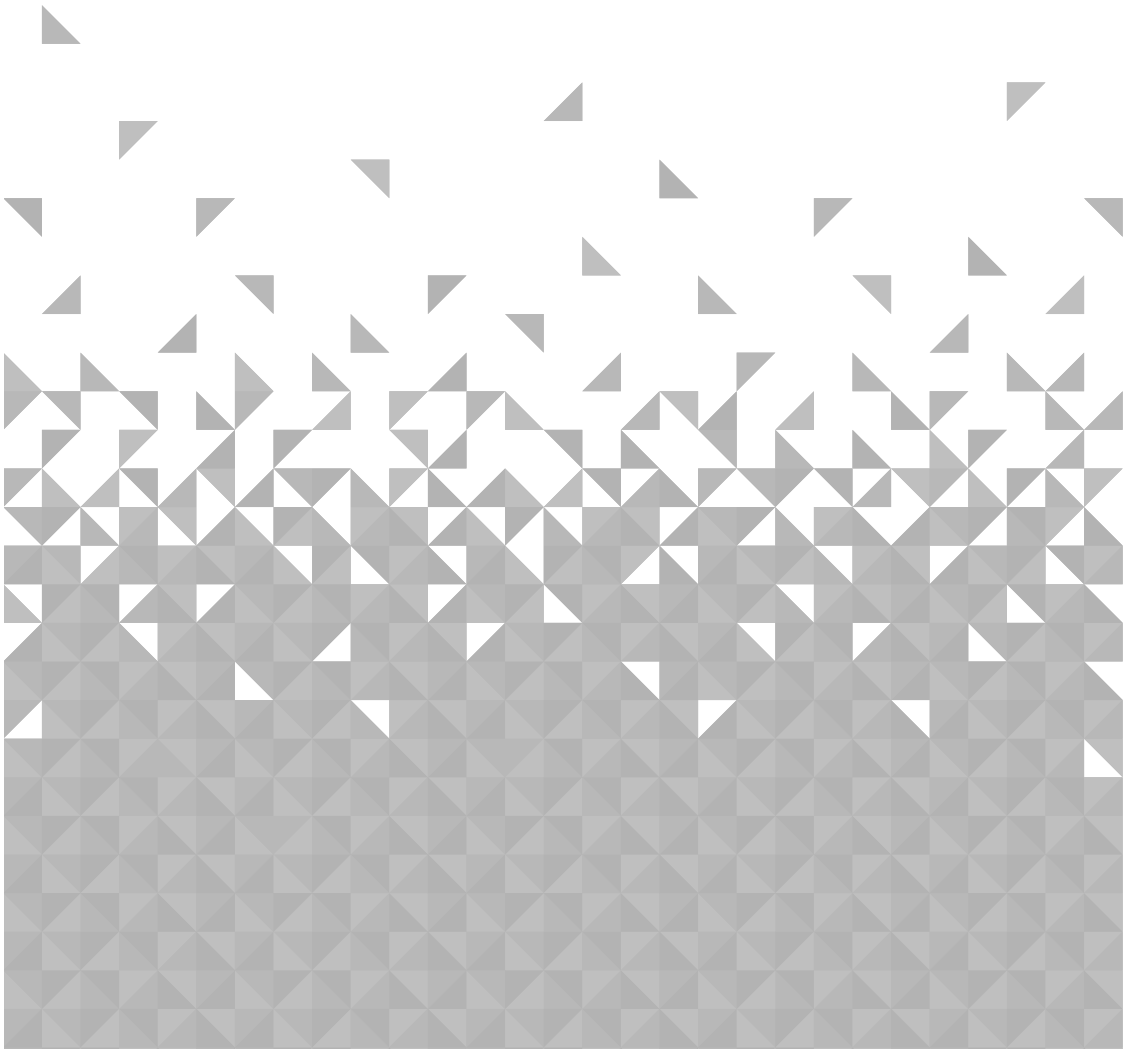

Using your LED Speaker

Let's get started

Bluetooth mode

1. Check that your LED Speaker is in Bluetooth mode and you have connected or 'paired' a product with your LED Speaker, please refer to 'Connect to a Bluetooth device on page 13.

Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the LED Speaker. Adjust the volume on the connected device and/or your LED Speaker
2. You can use the controls on your paired Bluetooth device as well as those on your LED Speaker.

- Play/Pause:

  Press and release to play/pause.

- Skip back:

  Press and release to skip back to the previous track.

- Skip forward:

  Press and release to skip forward to the next track.

LED light display

Your LED speaker has 5 different LED light display options for you to choose from, as well as an LED display off option.

1. Press and release the button to change the LED light display or choose LED display off. 5 LED light display options are available **(Fig 5)**

Note: The Club and Equalize themes only display when music is playing and the volume of the connected device should be set at above 50%.

Using your LED Speaker

Let's get started

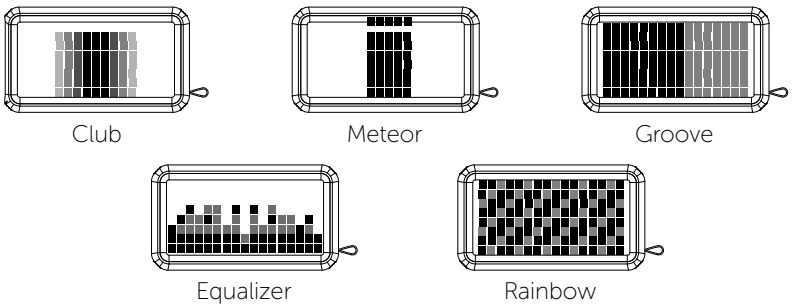


Fig 5.

Change the brightness

Press and hold the ☼ button and then press and release the ◁ button to decrease the brightness or the ▷ button to increase the brightness .

Using as a Mobile handsfree speakerphone

If you have paired your mobile phone with your LED Speaker, you can use it as a handsfree speaker.

Make an outgoing call:

1. Dial the number as usual on your mobile phone, you will be able to hear the progress of the call and your caller through your LED Speaker and your caller will also be able to hear you.
2. Press and release the ▷II on the LED Speaker or on your mobile phone to end the call.

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**

Using your LED Speaker

Let's get started

Receive an incoming call:

1. Press and release the  on your LED speaker or answer the call as usual on your mobile phone. You will be able to hear your caller through your LED Speaker and your caller will also be able to hear you.
2. Press and release the  on the LED Speaker or on your mobile phone to end the call.

Aux in mode

Check that your LED Speaker is in Aux in mode. If you are not already in Aux in mode, press and release the M button until you are in Aux in mode.

1. Connect one end of the supplied 3.5mm audio cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket on the back of your LED Speaker.
2. Press the Play button on your external device to start playback through the LED Speaker.
3. To gain optimal volume levels, adjust the volume level on both the secondary device and on the LED Speaker.

Note: It is recommended that you unplug the audio cable from the Aux in socket on the back of the LED Speaker, after you have finished listening to your external device.

This page is left intentionally blank

This page is left intentionally blank

4 Other information

Other information

Helpful technical information

Technical specification


Audio output:	2 x 3.5W RMS
Voltage:	Input DC 5V 1A
Lithium battery:	2200mAh
Bluetooth:	Version 4
Pairing name:	BUSH LED SPEAKER
Profiles	HFP, A2DP, AVRCP
Frequency range:	2.402GHz-2.480GHz

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

This page is left intentionally blank

Product support 5

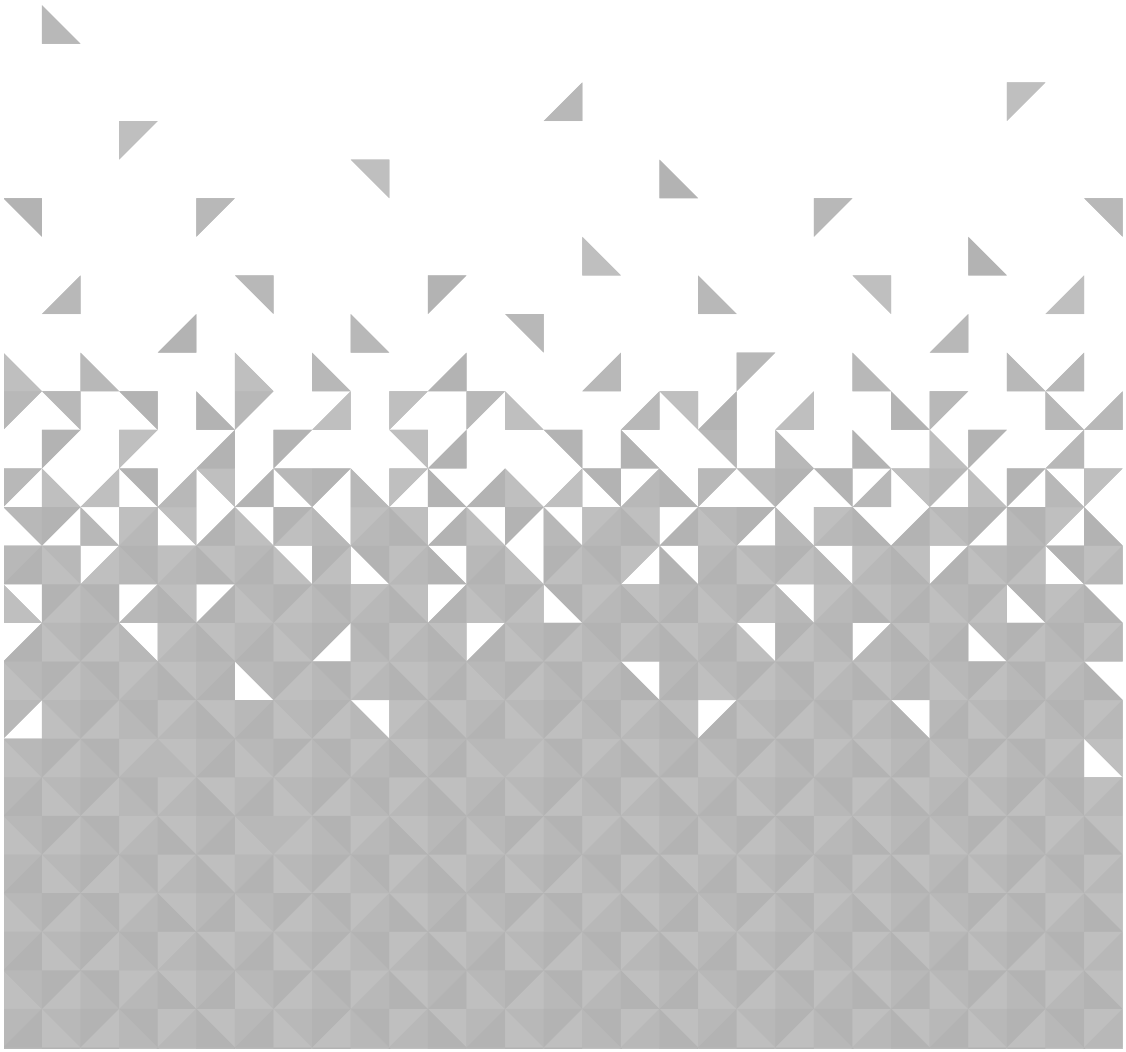

Product support

Help is always at hand

Troubleshooting

No sound / Sound distortion:

- Adjust the volume
- If you are using a Bluetooth connected device, check the volume on the secondary device and on your LED Speaker
- Your LED Speaker may need to be recharged. Please check the orange battery status lights on the top of your LED Speaker and recharge if necessary.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the LED Speaker for Bluetooth functionality, 10 metres or less (33 feet or less).
- Check that the device you are attempting to pair with supports A2DP stereo audio transmission.
- Move the LED Speaker and Bluetooth device away from other Bluetooth devices/ electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

No LED light display:

- The LED light display may be switched off. Press and release the ✳ button to select an LED light display from the 5 available.
- Increase the LED brightness setting, please see page 19
- Your LED Speaker may need to be recharged. Please check the orange battery status lights on the top of your LED Speaker and recharge if necessary.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your LED Speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.argos-support.co.uk**

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.		You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**

Product support

Help is always at hand

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021