
Flymo®


32020-85.960.01/1223

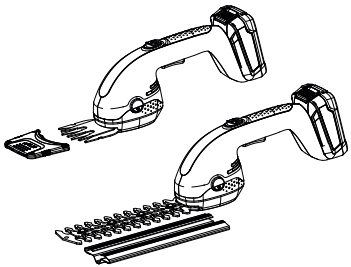

en **Operator's manual**
Battery Grass and Shrub Shears

18V SimpliShear **Art. 970725701**

18V SimpliShear KIT 2.0 **Art. 970725601**

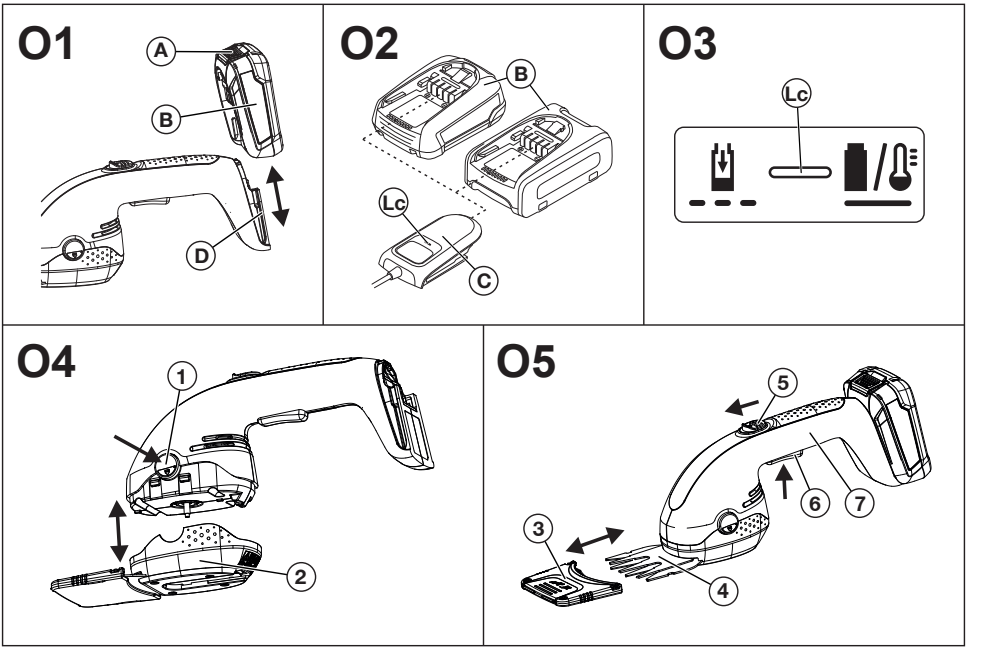
O1
A
B
D
O2
B
Lc
C
O3
Lc
O4
1
2
O5
5
6
7
3
4

en

en 18V SimpliShear / 18V SimpliShear KIT 2.0 Battery Grass and Shrub Shears

Translation of the original instructions.

1. SAFETY WARNINGS 4
2. OPERATION 12
3. MAINTENANCE 16
4. STORAGE 17
5. TROUBLESHOOTING 18
6. TECHNICAL DATA 20
7. ACCESSORIES/SPARE PARTS 22
8. SERVICE/WARRANTY 22
9. DISPOSAL 23

1. SAFETY WARNINGS

1.1 Explanation of the symbols:



→ Read the operator's manual.



DANGER!

→ Keep hands away from blade.



→ Do not expose the product to rain.



→ Keep bystanders at a distance.



→ Watch out for flying parts.



WARNING!

→ The cutting mechanism will keep running after the engine has been switched off.



→ Wear eye protection.

1.2 General safety warnings

1.2.1. General machine safety warnings

WARNING!

Read all safety warnings, instructions, illustrations and specifications provided with this machine.

Failure to follow all instructions listed below may result in electric shock, fire and / or serious injury.

Save all warnings and instructions for future reference.

1) Work area safety

a) Keep work area clean and well lit. *Cluttered or dark areas invite accidents.*

b) Do not operate machines in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. *Machines create sparks which may ignite the dust or fumes.*

c) Keep children and bystanders away while operating a machine. *Distractions can cause you to lose control.*

2) Electrical safety

a) Machine plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) machines. *Unmodified plugs and matching outlets will reduce risk of electric shock.*

b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. *There is an increased risk of electric shock if your body is earthed or grounded.*

c) Do not expose machines to rain or wet conditions. *Water entering a machine will increase the risk of electric shock.*

d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the machine. Keep cord away from heat, oil, sharp edges or moving parts. *Damaged or entangled cords increase the risk of electric shock.*

e) When operating a machine outdoors, use an extension cord suitable for outdoor use. *Use of a cord suitable for outdoor use reduces the risk of electric shock.*

f) If operating a machine in a damp location is

unavoidable, use a residual current device (RCD) protected supply. *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

a) Stay alert, watch what you are doing and use common sense when operating a machine. Do not use a machine while you are tired or under the influence of drugs, alcohol or medication. *A moment of inattention while operating machines may result in serious personal injury.*

b) Use personal protective equipment. Always wear eye protection. *Protective equipment such as a dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and /or battery pack, picking up or carrying the machine. *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*

d) Remove any adjusting key or wrench before turning the machine on. *A wrench or a key left attached to a rotating part of the machine may result in personal injury.*

e) Do not overreach. Keep proper footing and balance at all times. *This enables better control of the machine in unexpected situations.*

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. *Loose clothes, jewellery or long hair can be caught in moving parts.*

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. *Use of dust collection can reduce dust-related hazards.*

h) Do not let familiarity gained from frequent use of machines allow you to become complacent and ignore tool safety principles. *A careless action can cause severe injury within a fraction of a second.*

4) Machine use and care

a) Do not force the machine. Use the correct machine for your application. *The correct machine will do the job better and safer at the rate for which it was designed.*

b) Do not use the machine if the switch does not turn it on and off. *Any machine that cannot be controlled with the switch is dangerous and must be repaired.*

c) Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the machine before making any adjustments, changing accessories, or storing machines. *Such preventive safety measures reduce the risk of starting the machine accidentally.*

d) Store idle machines out of the reach of children and do not allow persons unfamiliar with the machine or these instructions to operate the machine. *Machines are dangerous in the hands of untrained users.*

e) Maintain machines and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the machine's operation. If damaged, have the machine repaired before use. *Many accidents are caused by poorly maintained machines.*

f) Keep cutting tools sharp and clean. *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*

g) Use the machine, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. *Use of the machine for operations different from those intended could result in a hazardous situation.*

h) Keep handles and grasping surfaces dry, clean and free from oil and grease. *Slippery handles and grasping surfaces do not allow for safe handling and control of the machine in unexpected situations.*

5) Battery tool use and care

a) Recharge only with the charger specified by the manufacturer. *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*

b) Use machine only with specifically designated battery packs. *Use of any other battery packs may create a risk of injury and fire.*

c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. *Shorting the battery terminals together may cause burns or a fire.*

d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. *Liquid ejected from the battery may cause irritation or burns.*

e) Do not use a battery pack or tool that is damaged or modified. *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*

f) Do not expose a battery pack or tool to fire or excessive temperature. *Exposure to fire or temperature above 130 °C may cause explosion.*

g)) Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

6) Service

a) Have your machine serviced by a qualified repair person using only identical replacement parts. *This will ensure that the safety of the machine is maintained.*

b) Never service damaged battery packs. *Service of battery packs should only be performed by the*

manufacturer or authorized service providers.

1.2.2. Hedge trimmer safety warnings:

a) **Do not use the hedge trimmer in bad weather conditions, especially when there is a risk of lightning.** *This decreases the risk of being struck by lightning.*

b) **Keep all power cords and cables away from cutting area.** *Power cords or cables may be hidden in hedges or bushes and can be accidentally cut by the blade.*

c) **Hold the hedge trimmer by insulated gripping surfaces only, because the blade may contact hidden wiring.** *Blades contacting a „live" wire may make exposed metal parts of the hedge trimmer „live" and could give the operator an electric shock.*

d) **Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.** *Blades continue to move after the switch is turned off. A moment of inattention while operating the hedge trimmer may result in serious personal injury.*

e) **When clearing jammed material or servicing the hedge trimmer, make sure all power switches are off and the battery pack is removed or disconnected.** *Unexpected actuation of the hedge trimmer while clearing jammed material or servicing may result in serious personal injury.*

f) **Carry the hedge trimmer by the handle with the blade stopped and taking care not to operate any power switch.** *Proper carrying of the hedge trimmer will decrease the risk of inadvertent starting and resultant personal injury from the blades.*

g) **When transporting or storing the hedge trimmer, always use the blade cover.** *Proper handling of the hedge trimmer will decrease the risk of personal injury from the blades.*

1.2.3. Grass shears safety warnings:

a) **Do not use the grass shear in bad weather conditions, especially when there is a risk of lightning.** *This decreases the risk of being struck by lightning.*

b) **Keep all power cords and cables away from cutting area.** *Power cords or cables may be hidden and can be accidentally cut by the blade.*

d) **Hold the grass shear by insulated gripping surfaces only, because the blade may contact hidden wiring.** *Blades contacting a „live" wire may make exposed metal parts of the grass shear „live" and could give the operator an electric shock.*

e) **Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.** *Blades continue to move after the switch is turned off. A moment of inattention while operating the grass shear may result in serious personal injury.*

f) **When clearing jammed material or servicing the grass shear, make sure the power switch is off and the battery pack is removed or disconnected.** *Unexpected actuation of the grass shear while clearing jammed material or servicing may result in serious personal injury.*

g) **Carry the grass shear by the handle with the blade stopped and taking care not to operate the power switch.** *Proper carrying of the grass shear will decrease the risk of inadvertent starting and resultant personal injury from the blades.*

h) **When transporting or storing the grass shear, always use the blade cover.** *Proper handling of the grass shear will decrease the risk of personal injury from the blades.*

1.3 Additional safety warnings

1.3.1. Intended use

This product can be used by children aged from eight years and above and persons with reduced physical, sensory or mental capabilities or without experience and knowledge provided they are supervised or have been instructed on using the product safely and understand the hazards involved. Children must not play with the product. Cleaning and user maintenance must not be performed by children without supervision.

The use of this product by young people under the age of 16 is not recommended.

1.3.1.1 Use with a grass blade

The **Flymo Battery Grass Shears** are intended for cutting lawn edges and precise shaping of shrubs, especially boxwood, in private domestic and non-professional gardens.

1.3.1.2 Use with a shrub blade

The **Flymo Battery Shrub Shears** are intended for cutting individual bushes, shrubs and vines in private domestic and non-professional gardens.

The product is not suitable for continuous operation (professional operation).

1.3.2. Safety warnings for batteries and battery chargers



Read all the safety warnings and instructions.

Failure to observe the safety warnings and instructions may result in electric shock, fire and/or serious injury.

Store these instructions in a safe place. Only use the battery charger if you are familiar with all of its functions and are able to perform these without limitation or have received appropriate instructions.

- → **Do not use the product in explosive atmospheres.**
- → **Supervise children during use, cleaning and maintenance.** This is to ensure that children do not play with the battery charger.
- → **Only charge lithium-ion batteries of the POWER FOR ALL system type PBA 18V with**

a capacity of 1.5 Ah or more (5 battery cells or more). The battery voltage must match the battery charging voltage of the battery charger. Do not charge non-rechargeable batteries. Otherwise there is a risk of fire and explosion.

→  **Do not expose the battery charger to rain or wet conditions.** Water entering a machine will increase the risk of electric shock.

→ **Keep the battery charger clean.** Dirt poses a risk of electric shock.

→ **Always check the battery charger, cable and plug before use. Do not use the battery charger if you notice any damage. Do not open the battery charger yourself, ensure that any repairs are performed only by qualified personnel using only original spare parts.** Damaged battery chargers, cables and plugs increase the risk of electric shock.

→ **Do not operate the battery charger on easily combustible surfaces (e.g. paper, textiles etc.) or in combustible environments.** There is a risk of fire because the battery charger heats up during charging.

→ **Do not cover the battery charger's ventilation slots.** The battery charger may otherwise overheat and no longer function properly.

→ **Use only battery chargers that are recommended by the manufacturer to charge the batteries.** A battery charger that is suitable for one type of battery may cause a fire hazard if used with other batteries.

→ **Vapours may also escape if the battery is damaged or used improperly.** Ensure that the area is well ventilated and seek medical attention should you experience any adverse effects. The vapours may irritate the respiratory tract.

→ **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If the liquid gets in your eyes, seek additional medical attention.** Liquid ejected from the battery may cause irritation or burns.

→ If the connecting cable needs replacing, this must be carried out by Flymo or by an authorised after sales service centre for Flymo machines in order to avoid safety hazards.

→ **These safety warnings apply only to lithium-ion batteries of the POWER FOR ALL system PBA 18V.**

→ **Use the battery only with products from POWER FOR ALL system manufacturers.** This is the only way to protect the battery against dangerous overload.

→ **Use only battery chargers that are recommended by the manufacturer to charge the batteries.** A battery charger that is suitable for one type of battery may cause a fire hazard if used with other batteries.

→ **The battery is supplied partially charged.** To ensure full performance of the battery, fully charge the battery in the battery charger before using it for the first time.

→ **Keep batteries out of the reach of children.**

→ **Do not open the battery.** There is a risk of a short circuit.

→ **Vapours may escape if the battery is damaged or used improperly. The battery may burn or explode.** Ensure that the area is well ventilated and seek medical attention should you experience any adverse effects. The vapours may irritate the respiratory tract.

→ **If used incorrectly or if the battery is damaged, flammable liquid may escape from the battery; avoid contact. If contact accidentally occurs, flush with water. If the liquid gets in your eyes, seek additional medical attention.** Liquid ejected from the battery may cause irritation or burns.

→ **If the battery is defective, liquid may leak out and wet adjacent objects. Check affected parts.** Clean them or replace them if necessary.

→ **Do not short-circuit the battery. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** A short circuit between the battery contacts may result in burns or fire.

→ **The battery contacts may be hot after use. Be careful of the hot contacts when removing the battery.**

→ **The battery can be damaged by sharp objects such as a nail or screwdriver or by external force.** An internal short circuit may occur and the battery may burn, smoke, explode or overheat.

→ **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorised service providers.

→  **Protect the battery from heat, including prolonged exposure to sunlight, fire, dirt, water and moisture.**
There is a risk of explosion and short circuit.

→ **Operate and store the battery only at an ambient temperature between -20°C and +50°C.** Do not leave the battery in your car in the summer, for example. At temperatures < 0°C, performance may be reduced depending on the device.

→ **Charge the battery only at an ambient temperature between 0°C and +35°C.** Charging outside of the temperature range can damage the battery and increase the risk of fire.

→ **After use, allow the battery to cool down for at least 30 minutes before charging or storing it.**

1.3.3. Additional electrical safety warnings:

DANGER!

Risk of cardiac arrest

This product generates an electromagnetic field while it operates. This electromagnetic field may affect the functionality of active or passive medical implants (e.g. pacemakers), which may result in serious injury or death.

→ Consult your doctor and the manufacturer of your implant before using this product.

→ Remove the battery when you are not using the product.

→ After using the product, disconnect the mains plug from the mains socket.

→ Do not open the housing (this should only be done by Flymo Service or qualified personnel).

→ Remove the battery after use to avoid the risk of fire.

→ Clean the product with a dry cloth to avoid fire hazard.

1.3.4. Additional personal safety warnings

→ Always ensure that you have a secure footing when working.

→ Use the protective cover (transport).

→ Check the work area to reduce the risk of cutting injuries.

→ Commercial use is not permitted in order to ensure safe and proper working.

2. OPERATION

WARNING!

Risk of cutting injury from the blade!

Risk of cutting injury due to unintentional startup.

→ Wear garden gloves to reduce the risk of cutting injury.

→ Wait until the blade is at a standstill.

→ Slide the protective cover over the blade.

→ Remove the battery.

2.1 Scope of supply

Cordless shears	970725601	970725701
Motor unit	x	x
Grass blade	x	x
Shrub blade	x	x
Battery charger	x	-
Battery (2 Ah)	x	-

2.2 Charging the battery [Fig. O1/O2/O3]

CAUTION!

Damage to property

If the voltage of the power source does not match the specifications on the battery charger rating plate, the battery charger may be damaged.

→ Note the mains voltage.

DANGER!

Risk of injury

Inserting the battery may cause you to trap your fingers.

→ Mind your fingers.

The smart charging process automatically detects the battery's state of charge and charges it using the optimum charging current depending on the battery temperature and battery voltage. This protects the battery and keeps it fully charged when stored in the battery charger.

1. Press the release button Ⓐ and remove the battery Ⓑ from the battery holder Ⓓ.
2. Connect the battery charger Ⓒ to a power outlet.
3. Slide the battery charger Ⓒ onto the battery Ⓑ.

   When the battery charge indicator Ⓛ on the battery charger is flashing green, the battery is charging.

When the battery charge indicator Ⓛc on the battery charger glows continuously green, the battery is fully charged (charging time, see 6. 6. TECHNICAL DATA).

4. Check the state of charge at regular intervals while charging.
5. When the battery Ⓑ is fully charged, the battery can be Ⓑ disconnected from the Ⓒ battery charger.

2.3 What the indicator elements mean

2.3.1 Battery charge indicator on the battery charger [Fig. O3]

Flashing battery charge indicator Ⓛc 	The charge cycle is indicated by the battery charge indicator flashing Ⓛc. **Note:** The charge cycle is only possible if the temperature of the battery is within the permissible charging temperature range, *see 6. TECHNICAL DATA*.
Battery charge indicator shows solid light Ⓛc 	A **solid light** on the battery charge indicator Ⓛc signals that the battery is fully charged or that the temperature of the battery is outside of the permissible charging temperature range and it cannot therefore be charged. As soon as the permissible temperature range is reached, the battery is charged. If the battery is not inserted, a **solid light** on the battery charge indicator signals Ⓛc that the mains plug is inserted into the power outlet and that the battery charger is ready for use.

2.4 Changing the blade [Fig. O4]

→ Use only the Flymo blades supplied:

The blade holder is only suitable for Flymo blades. If third-party blades are used, they could break during use.

- Flymo Grass and Boxwood Blade
- Flymo Shrub Blade

1. Press the locking buttons ① on both sides at the same time and remove the blade ②.
2. Insert the other blade ② until you hear the connection click into place.
3. Make sure that the blade is engaged.

2.5 Starting/stopping the cordless shears [Fig. O1/O5]

DANGER!

Risk of injury

Risk of injury if the product does not stop when the start lever is released.

→ Do not bypass the safety device or switches.

→ For example, do not attach the start lever to the handle.

→ Do not make any changes to the product that are not described in this manual.

2.5.1 Starting the cordless shears

The product is equipped with a two-handed safety device (start lever and safety lock) to prevent the product from being turned on by accident.

1. Insert the battery Ⓑ into the battery holder Ⓓ until you hear it engage.
2. Remove the protective cover (3) from the blade (4).
3. Push the safety lock (5) forwards and pull the start lever (6) toward the handle (7).

   The cordless shears start.

2.5.2 Stopping the cordless shears

1. Release the start lever (6).

   The cordless shears stop.
2. Wait until the blade is at a standstill.
3. Slide the protective cover (3) over the blade (4).
4. Remove the battery (B).

3. MAINTENANCE

WARNING!

Risk of cutting injury from the blade!

Risk of cutting injury due to unintentional startup.

→ Wear garden gloves to reduce the risk of cutting injury.

→ Wait until the blade is at a standstill.

→ Slide the protective cover over the blade.

→ Remove the battery.

3.1 Cleaning the cordless shears [Fig. O5]

DANGER!

Risk of injury and damage to property!

Not cleaning the product properly can injure people and damage the product.

→ Do not use water or a water jet (especially a high-pressure water jet) to clean the product.

→ Do not use chemicals, including gasoline or solvents, to clean the product.

Some of these substances can destroy important plastic parts.

The ventilation slots must always be kept clean.

1. Press the locking buttons (1) on both sides at the same time and remove the blade (2).
2. Use a damp cloth to clean the cordless shears.
3. Spray the blade. When doing so, prevent the oil from coming into contact with the plastic parts.

4. Insert the blade until you hear the connection click into place.
5. Make sure that the blade is engaged.

3.2 Cleaning the battery and the battery charger

The surface and contacts of the battery and of the battery charger must be clean and dry before connecting the battery to the battery charger.

→ Do not use running water.

3.2.1 Cleaning the battery

Do not use any chemical substances to clean the battery.

→ Use a soft, clean, dry brush to clean the ventilation slots and the contacts of the battery from time to time.

3.2.2 Cleaning the battery charger

→ Use a soft, dry cloth to clean the contacts and the plastic parts.

4. STORAGE

4.1 Decommissioning

The product must be stored away from children.

1. Slide the protective cover over the blade.
2. Remove the battery (B).
3. Charge the battery.
4. Clean the cordless shears, the battery and the battery charger (see 3. MAINTENANCE).
5. Store the cordless shears, battery and battery charger in a dry, enclosed and frost-proof location.

5. TROUBLESHOOTING

WARNING!

Risk of cutting injury from the blade

Risk of cutting injury due to unintentional startup.

→ Wear garden gloves to reduce the risk of cutting injury.

→ Wait until the blade is at a standstill.

→ Slide the protective cover over the blade.

→ Remove the battery.

5.1 Error table

Problem	Possible cause	Remedy
Cut is unclean	The blade is damaged or worn.	→ Replace the blade.
Run time is too low	The blade is dirty.	→ Clean the blade.
The cordless shears do not start or stop.	The battery is flat.	→ Charge the battery.
	The battery temperature is outside of the permissible range.	→ Wait until the battery temperature is between 0°C and +45°C again.
	There are drops of water or moisture between the battery contacts.	→ Use a dry cloth to remove the water drops or moisture.
	An obstruction is blocking the motor.	→ Remove the obstruction.
	The cordless shears are damaged.	→ Contact Flymo Service.

Problem	Possible cause	Remedy
	The battery is not fully inserted into the battery holder.	→ Insert the battery fully into the battery holder until it you hear it engage.
	The battery is damaged.	→ Replace the battery.
The charge cycle is not possible. ***Battery charge indicator Ⓛc glows continuously green.***	The battery is not (correctly) connected.	→ Connect the battery to the battery charger correctly.
	The battery contacts are dirty.	→ Clean the battery contacts (e.g. by connecting and disconnecting the battery several times). → Replace the battery if necessary.
	The battery temperature is outside of the permissible range.	→ Wait until the battery temperature is between 0°C and +45°C again.
	The battery is damaged.	→ Replace the battery.
The charge cycle is not possible. ***Battery charge indicator Ⓛc does not illuminate.***	The mains plug of the battery charger is not plugged in correctly.	→ Insert the mains plug fully into the power outlet.

Problem	Possible cause	Remedy
	The power outlet, power cord or battery charger is damaged.	→ Check the mains voltage. If necessary, have the battery charger checked by an authorised dealer or by Flymo Service.

IMPORTANT!

Repairs may only be carried out by Flymo service centres or by specialist dealers approved by Flymo.

→ Please contact your Flymo service centre in the event of other faults (see reverse).

6. TECHNICAL DATA

Cordless shears	Unit	Value (Art (970725701/ 970725601)
Strokes	1/min	2300
Grass blade width	mm	80
Shrub blade length	cm	20
Weight with grass blade (without battery)	g	590
Weight with shrub blade (without battery)	g	790
Sound pressure level L_{PA} 1)	dB	60
Uncertainty k_{PA}		3
Sound power noise level L_{WA} 2)	dB(A)	81
Uncertainty k_{WA}		3
Hand arm vibration a_{vhw} 1)	m/s^2	≤ 2.5
Uncertainty k_{vhw}		1.5

Measurement methods according to:

1) EN IEC 62841-4-2, EN IEC 62841-4-5

2) RL 2000/14/EC / S.I. 2001 No.1701

Note: The specified vibration emission value was measured according to a standardised test method and can be used to compare power tools with each other. This value can also be used for preliminary exposure assessment. The vibration emission value may vary during actual use of the power tool, depending on how the tool is used. As a safety measure, you should not work with the machine for more than one hour without a break.

System battery PBA 18V 2.0 Ah W-B	**Unit**	**Value (Art. 5313825-01)**
Battery voltage	V (DC)	18
Battery capacity	Ah	2.0
Number of cells (Li-Ion)		5
Appropriate POWER FOR ALL system battery chargers	AL 1810 CV/AL 1815 CV/ AL18V-20/AL 1830 CV/AL 1880 CV	

Battery charger AL 1810 CV P4A	**Unit**	**Value (Art. 5341476-01)**
Mains voltage	V (AC)	220–240
Mains frequency	Hz	50–60
Rated power	W	26
Battery charging voltage	V (DC)	18
Max. battery charging current	mA	1000
Battery charging time (approx.)		
PBA 18V 2.0 Ah W-B	min.	115
PBA 18V 2.5 Ah W-B	min.	136
PBA 18V 4.0 Ah W-C	min.	228
Permissible charging temperature range	°C	0–35
Weight according to EPTA procedure 01:2014	kg	0.17
Suitable POWER FOR ALL system batteries		PBA 18V

7. ACCESSORIES/ SPARE PARTS

Flymo Grass and Boxwood Blade	For cutting grass and boxwood.	**Art. 588553301 (available through service)**
Flymo Shrub Blade (available through service)	For cutting shrubs.	**Art. 546348001 (available through service)**
Flymo System Battery P4A PBA 18V/45 P4A PBA 18V/72	Battery for additional run time or for replacement.	**Art. 5313826-01 Art. 5313827-01**

8. SERVICE/WARRANTY

8.1 Product registration

Please register your product at Flymo.com/registration.

8.2 Service

Please find the current contact information of our service on the back page and online:

- United Kingdom: https://www.Flymo.com/uk/support/advice/contact/
- Australia: https://www.Flymo.com/au/support/advice/contact/
- New Zealand: https://www.Flymo.com/nz/support/advice/contact/
- South Africa: https://www.Flymo.com/za/support/contact/

9. DISPOSAL

9.1 Disposing of the cordless shears

(in accordance with Directive 2012/19/EU/ S.I. 2013 No. 3113):



The product must not be disposed of together with normal household waste. It must be disposed of in line with local environmental regulations.

IMPORTANT!

→ Dispose of the product through or via your local recycling collection centre.

9.2 Disposing of the battery



The battery contains lithium-ion cells that must be disposed of separately from normal household waste at the end of their life span.

IMPORTANT!

1. Discharge the lithium-ion cells fully (contact Flymo Service about this).
2. Ensure that the lithium-ion cell contacts do not short-circuit by placing tape over them.
3. Dispose of the lithium-ion cells properly at or through your local recycling collection point.

UK CA

Declaration of Conformity [only for UK]
The manufacturer: GARDENA Germany AB PO Box 7454 S-103 92 Stockholm Sweden hereby certifies, when leaving our factory, the unit(s) indicated below is / are in accordance with the UK Regulations, designated standards of safety and product specific designated standards. This certificate becomes void if the units are modified without our approval.

Description of the product: Article number:	**Battery Grass and Shrub Shears** **970725701 / 970725601**
UK regulations: Designated standards:	S.I. 2008/1597, S.I. 2016/1091, S.I. 2012/3032, S.I. 2001/1701 EN ISO 12100, EN 62841-1, EN 62841-4-2, EN 62841-4-5
Noise level: measured / guaranteed:	80 / 81 db(A)
UK importer:	Husqvarna UK Limited Preston Road, Aycliffe, County Durham, UK DL5 6UP
Deposited Documentation:	GARDENA Technische Dokumentation M.Jäger D-89079 Ulm, Hans-Lorenser-Str.40
Ulm, 21/09/2023 Authorized representative	 **Martin Lienhard**, Senior Vice President, Business Unit Electric and Battery

Service Address and
Importer to Great Britain
Husqvarna UK Ltd
Preston Road
Aycliffe Industrial Park
Newton Aycliffe
County Durham
DL5 6UP
info.FLYMO@husqvarna.co.uk

32020-85.960.01/1223
Husqvarna AB
Drottninggatan 2
SE-561 82 Huskvarna
Sweden

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.

Copyright © 2023 Flymo S.A. All rights reserved.
Flymo® and other product and feature names are registered or unregistered trademarks of Flymo S.A.