challenge®

Model No. TX-16GA
16 INCH METAL PEDESTAL FAN
INSTRUCTION MANUAL



Important: Please read these instructions carefully before first using this product and retain for future

IMPORTANT SAFETY INSTRUCTIONS.



Read through all the instructions carefully before starting to use the appliance. Keep this manual in a safe place for future reference.

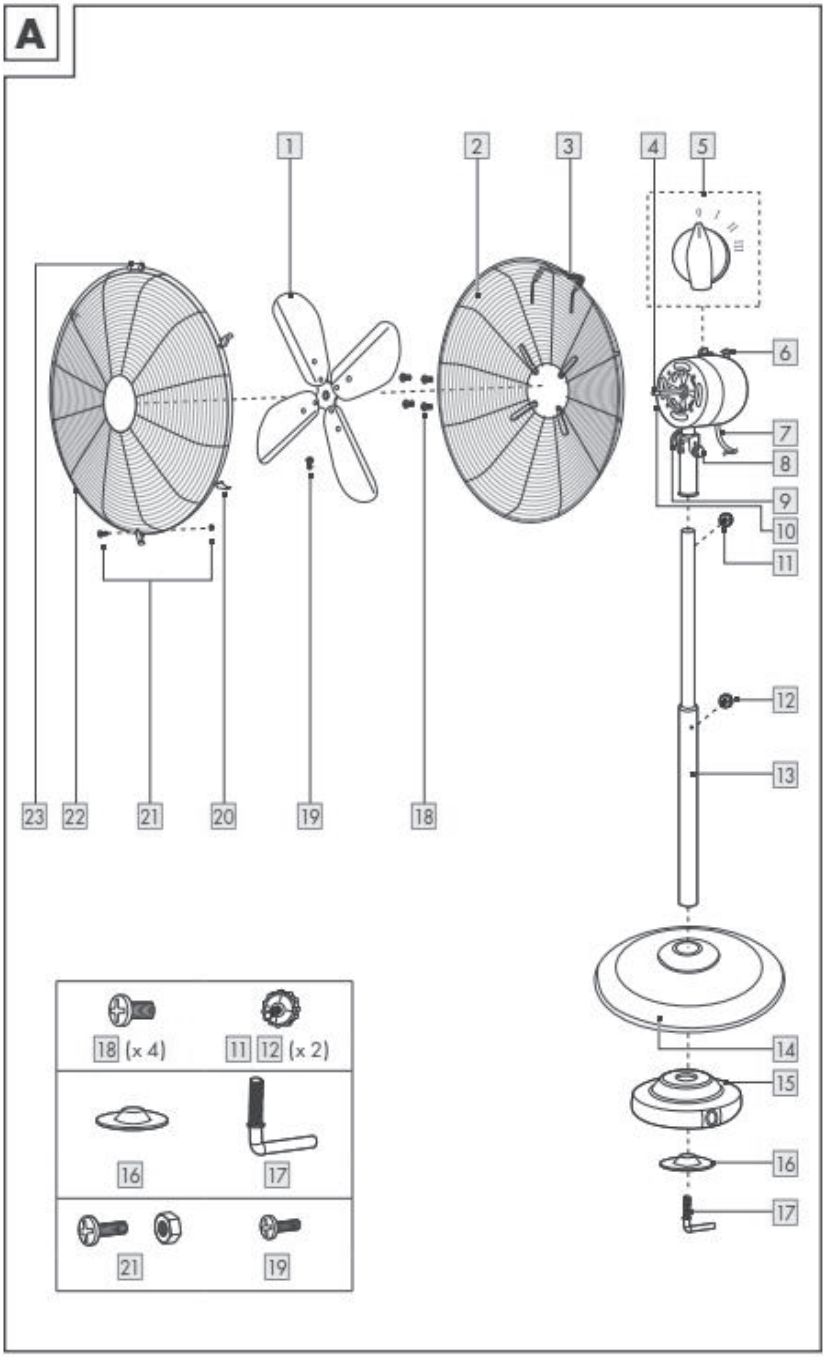
- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- **Children should be supervised to ensure they do not play with the appliance.**
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- It the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor; household use only.
- Do not insert fingers or other objects into the fan during use, this can cause personal injury and damage.
- Unplug the appliance when not in use, when moving the appliance and before cleaning.
- Do not place the appliance on an unsteady surface.
- Keep away from open flames such as lit candles, open fires, cooking, and other heating appliances.
- Do not use in the presence of explosive and/ or flammable fumes.

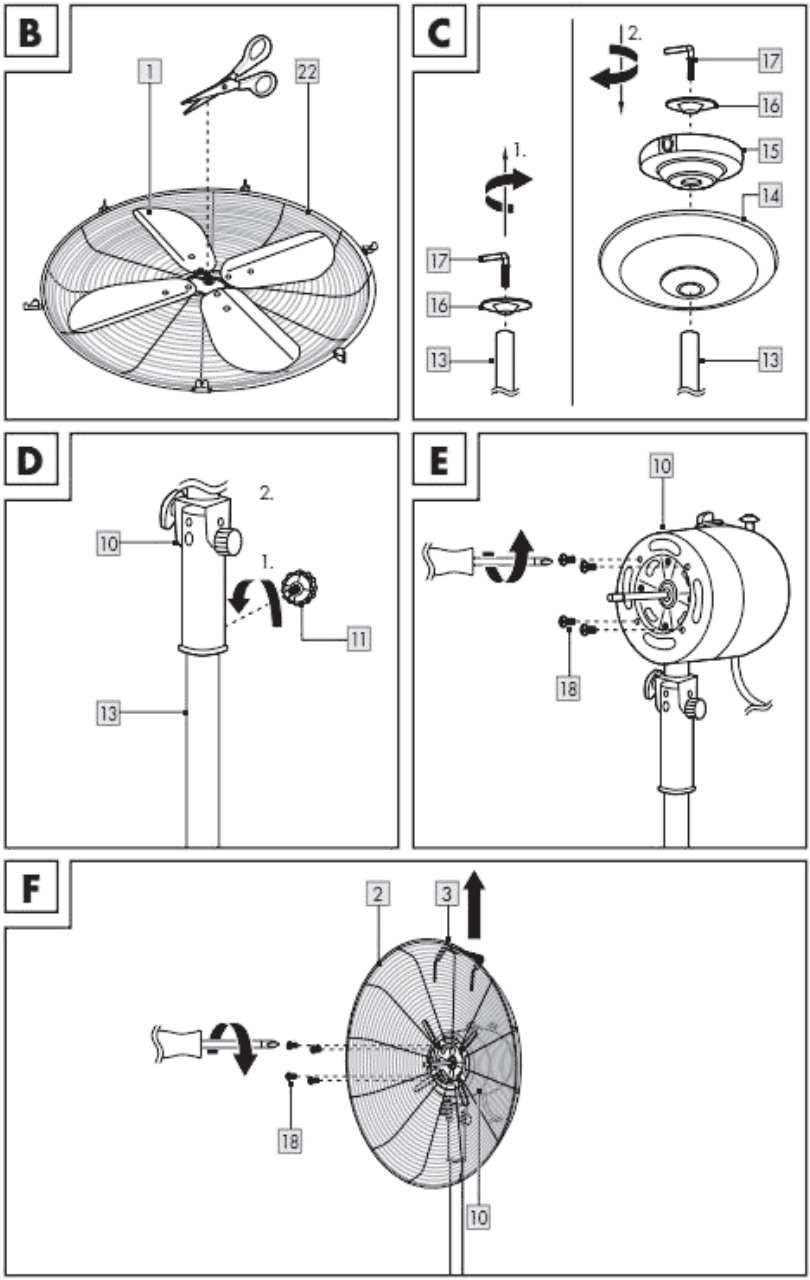
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Do not hang or mount fan on a wall or ceiling.
- Do not operate if the fan housing is damaged.
- Do not place naked flame sources near unit, such as lit candles.
- Do not allow fan to be directed onto children, the elderly or infirm for a long period of time.
- Do not use the fan in areas of high humility, very dusty, or in temperatures higher than 40℃.
- Do not use the fan near an open window as rain may cause an electric shock hazard

PARTS & ASSEMBLY

1] Blade
2] Rear grille
3] Grille handle
4] Motor shaft
5] Speed control knob (**0**, **I**, **II**, **III**)
6] Oscillation control knob
7] Power cord with power plug
8] *Screw and nut
9] *Knob (tilt adjustment)
10] Motor unit (with upper pole)
11] *Lock screw (motor bracket)
12] *Height adjustment knob
13] Extension pole

14] Base
15] Base weight
16] *Washer
17] *L-shaped bolt
18] *Lock screw (M5 x 8 mm) (x 4) (rear grille)
19] *Lock screw (M4 x 8 mm) (blade)
20] Grille clips (x 5)
21] *Lock nut and lock screw (M2.5 x 10 mm) (grille)
22] Front grille
23] Grille hanger
* pre-assembled


A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
18 (x 4)
11 12 (x 2)
16
17
21
19


B
1
22
C
1.
2.
17
16
13
15
14
D
2.
1.
10
11
13
E
10
18
F
2
3
18
10

A

- Before reading, unfold the page containing the illustrations and familiarise yourself with all the functions of the product.

B

- Carefully remove the plastic packaging & ribbon, remove with scissors if needed.

C

- Turn the extension pole [13] upside down so that the L-shaped bolt [17] is directed upwards.
- Remove the L-shaped bolt [17] and the washer [16] from the extension pole [13].
- Place the base [14] and the base weight 15] on the extension pole [13].
- Fasten the washer [16] and the L-shaped bolt [17].

D

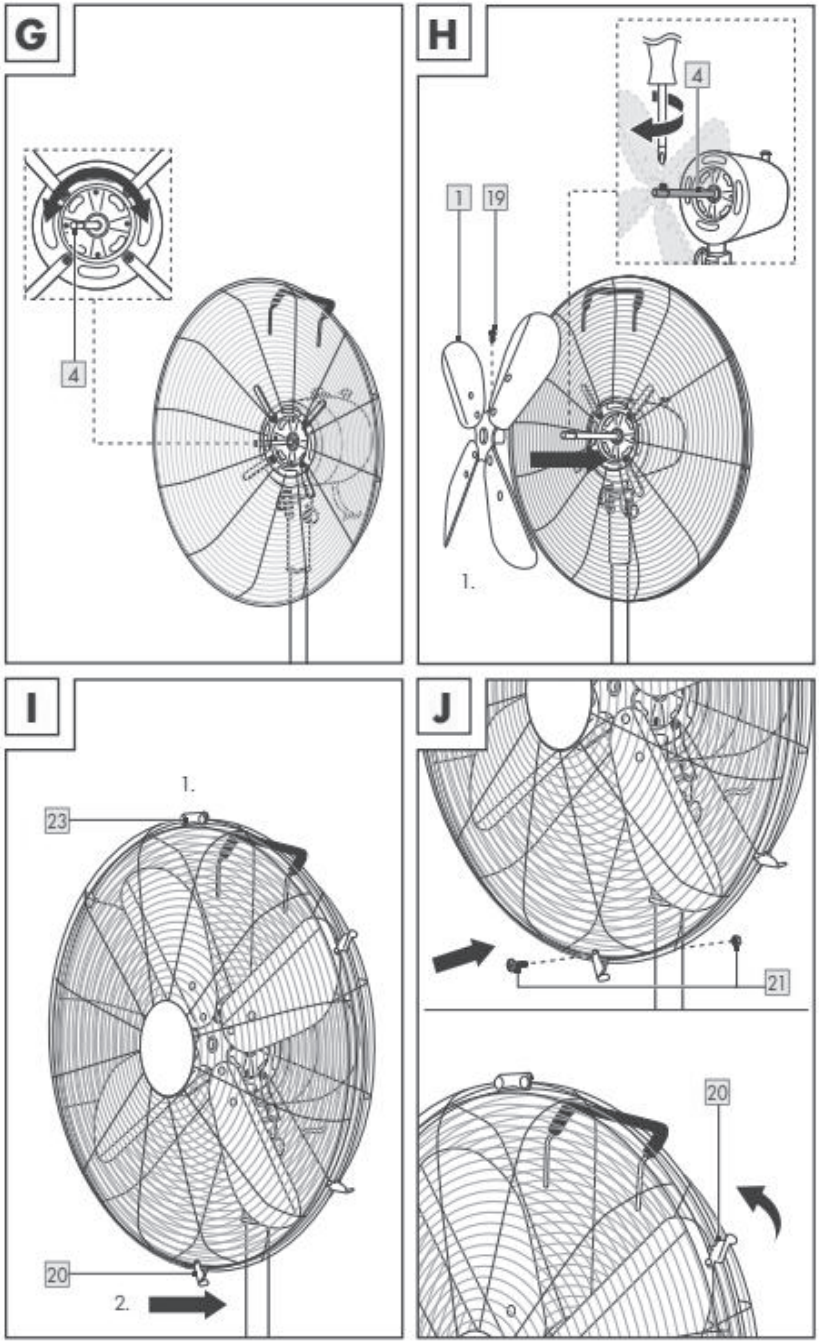
- Turn the assembled parts from the previous assembly step upside down. Place the base [14] on the floor.
- Loosen the lock screw [11] from the extension pole [13].
- Place the motor unit's [10] upper pole on the extension pole [13]. Align the hole on the back side. Tighten the lock screw (motor bracket) [11].

E

- Remove the lock screws (x 4) (rear grille) [18] from the motor unit [10].

F

- Align the grille handle [3] upwards and to the rear. Attach the rear grille [2] to the motor unit (with upper pole) [10].
- Tighten with the x 4 lock screws [18].


G
4
H
4
1
19
1.
I
1.
23
20
2.
J
21
20

G

- Point the groove on the motor shaft [4] upwards.

H

- Loosen the lock screw [19] from the blade [1] (the lock screw is pre-assembled on the blade's screw thread). Place the blade on the motor shaft [4] (the blade's rear with the lock screw is facing the motor unit (with upper pole) [10]).
- Tighten the lock screw (M4 x 8 mm) (blade) [19].

I

- Open the grille clips (x 5) [20] on the front grille [22].
- Remove the lock nut and lock screw [21] from the front grille [22].
- Hang the grille hanger [23] of the front grille [22] on the rear grille [2].

NOTE: The grille clips (x 5) [20] must fit over the frame of the rear grille [2].

J

- Insert the lock screw [21]. Fasten the lock nut [21]. Close the grille clips (x 5) [20] securing the grille frame.

Using your fan.

- Stand the fan on a dry, level, sturdy surface, where it is unlikely to get knocked or tripped over.
- Plug the fan into a suitable power supply.

ON/OFF Speed selection.

- Turn the ON/OFF speed control knob [5] to switch the fan ON/OFF and to select the fan speed setting:

0 ------ Off
I ------ Low fan speed
II ------ Medium fan speed
III ----- Maximum fan speed

Oscillation.

- Push the oscillation control [6] down to make the fan head oscillate. To stop the oscillation, pull the oscillating control up.

Adjusting the tilt.

- The head of the fan can be adjusted up or down. To do this, loosen the tilt adjusting screw [9], adjust the fan to the desired angle, then tighten the tilt adjusting screw [9].

NOTE: Do not perform the tilt adjustment when the fan is in operation!

Adjusting the height.

- The height of the fan can be adjusted up or down. To do this, Loosen the height adjustment knob [12] (positioned on the extension pole [13]) in a counter-clockwise direction. Adjust the length of the extension pole [13]. Tighten the height adjustment knob [12] in a clockwise direction. The height can be adjusted between 93cm to 128cm

CLEANING.

Always switch off the fan and disconnect from the mains power supply before any cleaning or maintenance.

- Use only a soft slightly damp cloth to gently wipe the outer surfaces on the fan to clean.
- Do not try to remove the fan grill. To clean between the bars, it is recommended using a vacuum cleaner or compressed air to gently remove the dust.

STORAGE.

- When not in use, clean the fan before storing away in the original or similar sized box.
- Store the fan in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

TECHNICAL SPECIFICATION.

Challenge 16 inch metal Pedestal fan	
Model number	TX-16GA
Input rated voltage	220-240V 50-60Hz
Output rated wattage	45W
Weight	7.8kg
Dimensions	40 x 46 x 128cm
Sound level	63.77dB(A)
Maximum Fan Flow Rate (F)	62.04m³/min
Service value	1.54(m³/min)/W
Maximum Air velocity	3.38 meter/sec
Standy Power Consumption	--
Working temp range	0℃-40℃

Produced in China for Argos Limited, London, EC1N 2HT, UK. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

PLUG/ WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:

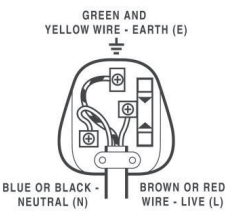
BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**



The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol.

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
London
EC1N 2HT
www.argos-support.co.uk